



# Copying A Playlist Entry To The Vcr; Deleting A Playlist Entry From The Playlist - Toshiba D-VR3SB Owner's Manual

 
Dvd recorder-vcr



1  
2  
3  
4  
5  
6  
7  
Table Of Contents  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110



•

[Table of Contents](#)

- 


Troubleshooting



•

## Bookmarks



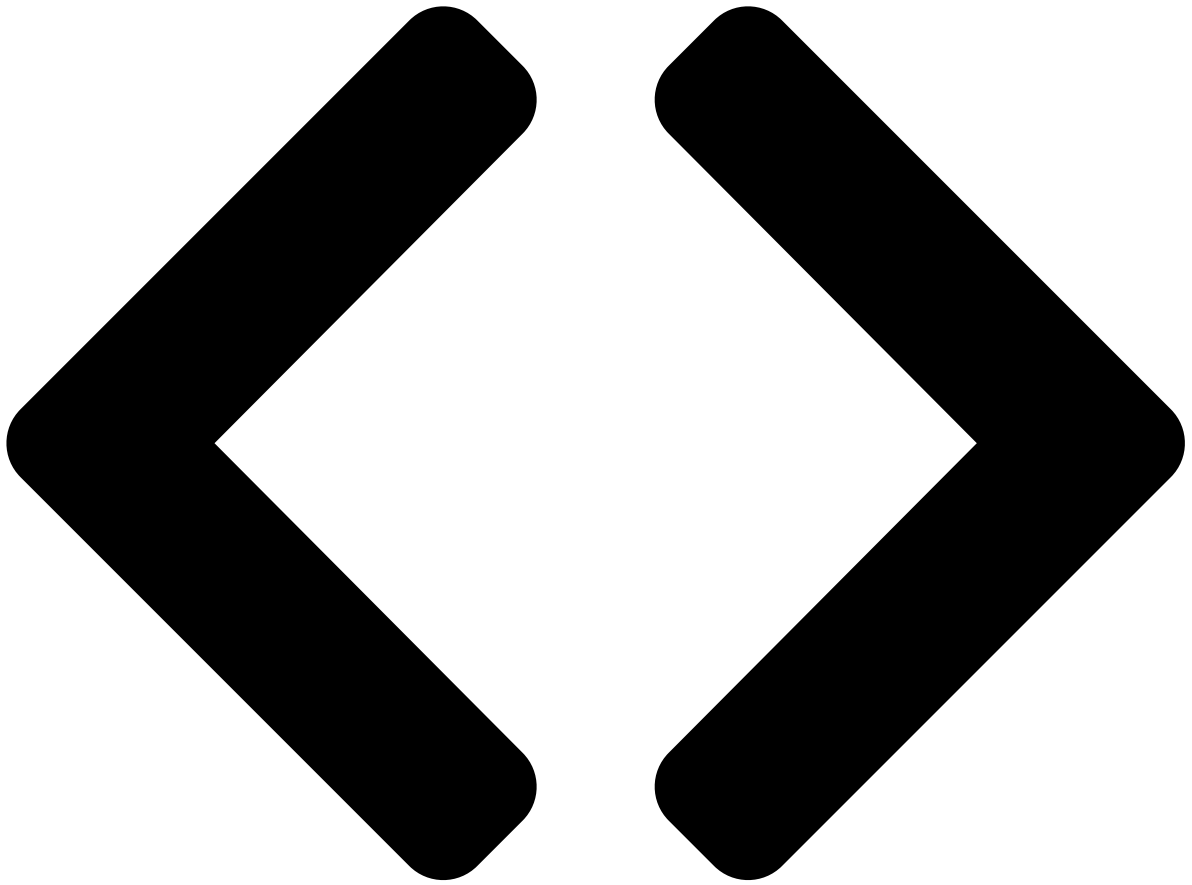 

Enlarged version

## Copying a Playlist Entry to the VCR

Insert the recorded disc and the tape.

**1**

Press the MENU button when the disc is stopped.

**2**

Press the [ ] button then press the [ ] button.

### Copying a Playlist Entry to the VCR



VR mode

- 1** Insert the recorded disc and the tape. Press the MENU button when the disc is stopped.

### Deleting a Playlist Entry from the Playlist

- 1** Insert the recorded disc and the tape. Press the MENU button when the disc is stopped.

# 3

Press the [OK] button and then press the [PLAY LIST] button on the remote control.

- The Edit Playlist screen is displayed.

01/JAN/2004 12:00

Press the

## Copying a Playlist Entry to the VCR



VR mode

# 4

you want to copy to the VCR, and then press the

[OK] button.

- The Edit Playlist menu is displayed. Play, Rename, Edit Scene, Copy, Delete

Press the

**1** Insert the recorded disc and the tape. Press the MENU button when the disc is stopped.

**2** Press the [▲▼] buttons to select Playlist, and then press the [▶] or [OK] button.

# 5

press the OK button.

- The title you choose is played and copied to VCR tape.

Downloaded From Disc Player Press the [▶] button

**3** Press the [▲▼] buttons to select Edit Playlist, and then press the [▶] or [OK] button, or press the PLAY LIST button on the remote control.

DVD-RAM DVD-RW

[▶] buttons to select Playlist, and

[OK] button.

[▶] buttons to select Edit Playlist,

[OK] button,

01/JAN/2004

02/JAN/2004

[▶] buttons to select an entry(title)

[▶] buttons to select Copy, and then



## Deleting a Playlist Entry from the Playlist

**4** Press the [▲▼] buttons to select an entry(title) you want to delete from the Playlist, and then press the [▶] or [OK] button.

VR mode

Insert the recorded disc.

# 1

Press the MENU button when the disc is stopped.

**5** Press the [▲▼] buttons to select Copy, and then press the OK button.

## Deleting a Playlist Entry from the Playlist

**1** Insert the recorded disc. Press the MENU button when the disc is stopped.

**2** Press the [▲▼] buttons to select Playlist, and then press the [▶] or [OK] button.

**3** Press the [▲▼] buttons to select Edit Playlist, and then press the [▶] or [OK] button, or press the PLAY LIST button on the remote control.

- The Edit Playlist screen is displayed.

**4** Press the [▲▼] buttons to select an entry(title) you want to delete from the Playlist, and then press the [▶] or [OK] button.

- The Edit Playlist menu is displayed. Play, Rename, Edit Scene, Copy, Delete



Editing

# 2

Press the  
then press the  
Press the

# 3

and then press the  
or press the PLAY LIST button on the remote  
control.

- The Edit Playlist screen is displayed.

Press the

# 4

you want to delete from the Playlist, and then

10

press the

- The Edit Playlist menu is displayed.  
Play, Rename, Edit Scene, Copy, Delete

01/JAN/2004 12:00  
DVD-RAM DVD-RW

2

buttons to select Playlist, and

10

or OK button.

2

buttons to select Edit Playlist,

10

or OK button,

2

buttons to select an entry (title)

or OK button.

01/JAN/2004

02/JAN/2004

VR mode

## Copying a Playlist Entry to the VCR



 
VR mode

**1** Insert the recorded disc and the tape.  
Press the MENU button when the disc is stopped.

**2** Press the ▲▼ buttons to select Playlist, and then press the ► or OK button.

**3** Press the ▲▼ buttons to select Edit Playlist, and then press the ► or OK button, or press the PLAY LIST button on the remote control.

The Edit Playlist screen is displayed.

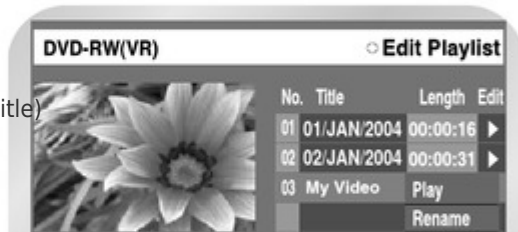

[Table of Contents](#)

## Deleting a P from the Pla

**1** Insert the recorded disc.  
Press the MENU button when the disc is stopped.

**2** Press the ▲▼ buttons to select Playlist, and then press the ► or OK button.

**3** Press the ▲▼ buttons to select Edit Playlist, and then press the ► or OK button, or press the PLAY LIST button on the remote control.

- The Edit Playlist screen is displayed.

**4** Press the ▲▼ buttons to select an entry (title) you want to delete from the Playlist, and then press the ► or OK button.

[Previous Page](#)  
[Next Page](#)

1  
...  
95  
96  
97  
98  
99  
100  
101  
102



Quick Links:

[How to Use the DVD Recorder-Vcr](#)

[Before Recording](#)

[Vcr to DVD](#)

## Troubleshooting

[Troubleshooting \(DVD-VIDEO/DVD-RAM/DVD-RW/DVD-R\)](#) 106

[Troubleshooting](#) 107

### Related Manuals for Toshiba D-VR3SB

[DVD VCR Combo Toshiba D-VR3SB Owner's Manual](#)

Dvd recorder-vcr (110 pages)

[DVD VCR Combo Toshiba D-VR3SU Owner's Manual](#)

Dvd recorder-vcr (60 pages)

[DVD VCR Combo Toshiba D-VR3 Specifications](#)

Toshiba digital video recorder product brochure (2 pages)

[DVD VCR Combo Toshiba D-VR3SG Owner's Manual](#)

Dvd recorder-vcr (56 pages)

[DVD VCR Combo TOSHIBA D-VR3SU Owner's Manual](#)

Dvd recorder-vcr (119 pages)

[DVD VCR Combo Toshiba D-VR3SU Owner's Manual](#)

Dvd recorder-vcr (124 pages)

[DVD VCR Combo Toshiba D-VR610KU Owner's Manual](#)

Dvd video recorder / video cassette recorder (126 pages)

[DVD VCR Combo Toshiba DVR670KU Owner's Manual](#)

Dvd video recorder / video cassette recorder (124 pages)

[DVD VCR Combo Toshiba D-VR5SU Owner's Manual](#)

Hi-fi vcr & dvd video recorder (92 pages)

[DVD VCR Combo Toshiba DVR620KU Owner's Manual](#)

Dvd video recorder / video cassette recorder (113 pages)

[DVD VCR Combo Toshiba DVR670KU Owner's Manual](#)

Dvd video recorder/video cassette recorder (126 pages)

[DVD VCR Combo Toshiba D-VR600KU Owner's Manual & Installation Instructions](#)

Hi-fi vcr & dvd video recorder (80 pages)

[DVD VCR Combo Toshiba DVR620KC Owner's Manual](#)

Dvd video recorder / video cassette recorder (106 pages)

[DVD VCR Combo Toshiba DVR19DTKB Owner's Manual](#)

Dvd/video cassette recorder (80 pages)

[DVD VCR Combo Toshiba D-VR60DTKF Service Manual](#)

Dvd video recorder /video cassette recorder (119 pages)

[DVD VCR Combo Toshiba D-VR7KC Service Manual](#)

Dvd video recorder/video cassette recorder (115 pages)

## Related Content for Toshiba D-VR3SB

[SD-V290-S-TU Copying From Dvd To Vcr](#)

Toshiba SD-V290-S-TU

[SD-V390-S-TU Copying From Dvd To Vcr](#)

Toshiba SD-V390-S-TU

[SD-K530SU Copying From Dvd To Vcr](#)

Toshiba SD-K530SU

[SD-V592SU Copying From Dvd To Vcr](#)

Toshiba SD-V592SU

[SD-KV540SU Copying From Dvd To Vcr](#)

Toshiba SD-KV540SU

[SD-V340SC Basic Setup \(Vcr\)](#)

Toshiba SD-V340SC

[D-VR7KC How To Initialize The Dvd Recorder & Vcr](#)

Toshiba D-VR7KC

[RD-XV45KE How To Self-Check And Initialize The Hdd & Dvd/Vcr](#)

Toshiba RD-XV45KE