



Toshiba RAS-10(7)~16(7)SKV Series Installation Manual

Air conditioner (split type)

1
2
3
4
5
6
7
8
9
10
11

Table Of Contents

--

•

[Table of Contents](#)

•

Bookmarks

--

Table of Contents

1 Installation Manual

2 Precautions for Safety

3 Installation Diagram of Indoor and Outdoor Units

4 Indoor Unit

5 Wiring Connection

6 Piping and Drain Hose Installation

7 Indoor Unit Fixing

8 Outdoor Unit

9 Installation Place

10 Refrigerant Piping Connection

11 Tightening Connection

12 Gas Leak Test


13 Test Operation

14 Selector Switch

15 Auto Restart Setting

16 How to Set the Auto Restart

[Download this manual](#)

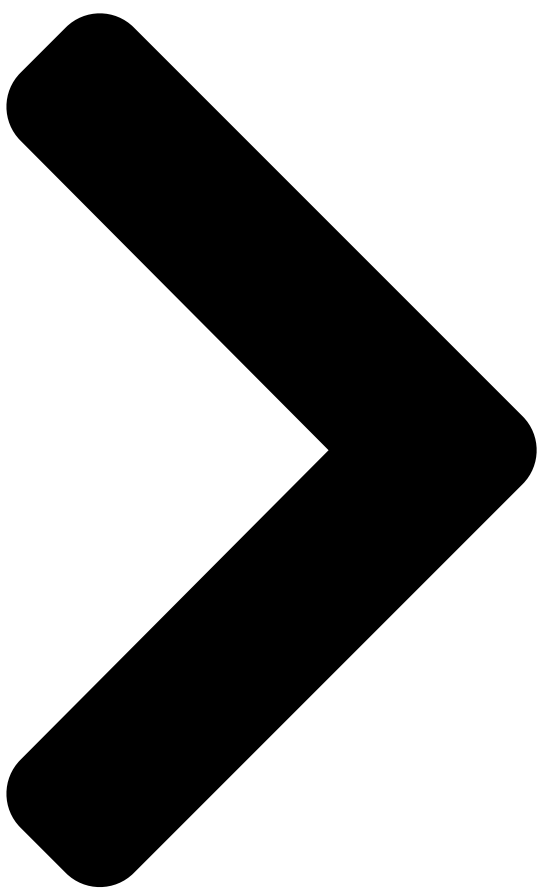

INSTALLATION MANUAL



AIR CONDITIONER (SPLIT TYPE)

Indoor unit

RAS-10(7)~16(7)SKV Series

Outdoor unit

RAS-10(7)~16(7)SAV Series

TOSHIBA

Cover.indd □

SH
IOL
CAIS

SCH

UGUÊS

CI

Y

КИЙ

TSKI

AR

ÇE

RLANDS

NIKA

SKA

I

K

K

MI

CKИ

Y

Y

INA

YINA

TOSHIBA



7/8/08 3:55:55 PM

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba RAS-10(7)~16(7)SKV Series

[Split type air conditioners Toshiba RAS-167SKV Series Installation Manual](#)

Indoor/outdoor unit (160 pages)

[Air Conditioner Toshiba RAS-137SKV Series Installation Manual](#)

(160 pages)

[Air Conditioner Toshiba RAS-M10SKV-E Service Manual](#)

High wall, heat pump type; high wall, coolingtype (85 pages)

[Air Conditioner Toshiba RAS-107SKV series Installation Manual](#)

(55 pages)

[Air Conditioner Toshiba RAS-16SKV Series Owner's Manual](#)

(52 pages)

[Air Conditioner Toshiba RAS-077 Series Owner's Manual](#)

(45 pages)

[Air Conditioner Toshiba RAS SKV Series Installation Manual](#)

Split type air conditioner (31 pages)

[Air Conditioner Toshiba RAS-077KV Series Owner's Manual](#)

Air conditioner (split type) (21 pages)

[Air Conditioner Toshiba RAS-10 Owner's Manual](#)

18ufv series, 18sav series (19 pages)

[Air Conditioner Toshiba RAS-107 Owner's Manual](#)

Air conditioner (18 pages)

[Air Conditioner Toshiba RAS-10SAV Series Installation Manual](#)

(12 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-M14GAV-E Owner's Manual](#)

Split type (7 pages)

[Air Conditioner Toshiba RAS-10 Series Owner's Manual](#)

Indoor and outdoor unit (5 pages)

[Air Conditioner Toshiba RAS-077SKV Owner's Manual](#)

(4 pages)

[Air Conditioner Toshiba RAS-107SKV Series Owner's Manual](#)

Toshiba split type air conditioners indoor/outdoor unit (3 pages)

Summary of Contents for Toshiba RAS-10(7)~16(7)SKV Series

[Page 1: Installation Manual](#)

AIR CONDITIONER (SPLIT TYPE) ESPAÑOL FRANÇAIS ITALIANO DEUTSCH PORTUGUÊS POLSKI
ĽESKY РУССКИЙ HRVATSKI MAGYAR TRKÇE NEDERLANDS ΕΛΛΗΝΙΚΑ SVENSKA SUOMI NORSK
DANSK ROMÂN Indoor unit RAS-10(7)~16(7)SKV Series БЪЛГАРСКИ Outdoor unit EESTI
RAS-10(7)~16(7)SAV Series LATVISKI SLOVENŠĶINA SLOVENŠĶINA Cover.indd 1 8/8/08 3:55:55
PM...

[Page 2](#) CONTENTS CONTENIDOS SOMMAIRE PRECAUTIONS FOR SAFETY
PRECAUCIONES SOBRE SEGURIDAD MESURES DE SÉCURITÉ INSTALLATION

DIAGRAM OF INDOOR AND DIAGRAMA DE INSTALACIÓN DE LA UNIDAD INTERIOR Y PLAN
D'INSTALLATION DES UNITÉS INTÉRIEURE ET OUTDOOR UNITS 2 EXTERIOR
..... 2 EXTÉRIEURE.....

[Page 3](#) INHOUDSOPGAVE INNEHÅLLSLFÖRTECKNING ΠΕΡΙΕΧΟΜΕΝΑ
VEILIGHEIDSVORZORGEN □ SÄKERHETSANVISNINGAR □ ΠΡΟΦΥΛΑ ΕΙΣ
ΑΣΦΑΛΕΙΑΣ □ INSTALLATIONSSCHEMA FÖR INOMHUS- OCH INSTALLATIONSSCHEMA VOOR
BINNEN- EN ΔΙΑΓΡΑΜΜΑ ΕΓΚΑΤΑΣΤΑΣΗΣ ΤΗΣ ΕΣΩΤΕΡΙΚΗΣ ΚΑΙ ΥΤΟΜΗΥΕΝΗΤΕΝ 2
BUITENMODULES 2 Ε ΩΤΕΡΙΚΗΣ ΜΟΝΑΔΑΣ 2 Valfria installationskomponenter
..... 2 Optionele Onderdelen 2 Πρ...

[Page 4: Precautions For Safety](#)

Also, make sure the equipment is properly earthed. • Appliance shall be installed in accordance with national wiring regulations. If you detect any damage, do not install the unit. Contact your TOSHIBA dealer immediately. CAUTION • Exposure of unit to water or other moisture before installation could result in electric shock.

[Page 5: Installation Diagram Of Indoor And Outdoor Units](#)

INSTALLATION DIAGRAM OF INDOOR AND OUTDOOR UNITS FILTER SKVR For the rear left and left piping Hook Installation plate Wall 10SKVR 10(7)SKV 13(7)~16(7)SKV(R) Insert the cushion between the indoor unit and wall, and tilt the indoor unit for better operation. Do not allow the drain hose to get slack.

[Page 6: Indoor Unit](#)

INDOOR UNIT When the installation plate is directly mounted Installation Place on the wall • A place which provides the spaces around the indoor unit as shown in the 1. Securely À t the installation plate onto the wall by screwing it in the upper and diagram lower parts to hook up the indoor unit.

[Page 7: Wiring Connection](#)

1. Die-cutting front panel slit Wiring Connection Cut out the slit on the leftward or right side of the front panel for the left or right connection and the slit on the bottom left or right side of the front panel for the bottom left or right connection with a pair of nippers.

[Page 8: Indoor Unit Fixing](#)

NOTE Drainage If the pipe is bent incorrectly, the indoor unit may unstably be set on the wall. After passing the connecting pipe through the pipe hole, connect the 1. Run the drain hose sloped downwards. connecting pipes to the auxiliary pipes and wrap the facing tape around them.

[Page 9: Refrigerant Piping Connection](#)

Refrigerant Piping Connection AIR PURGE Evacuate the air in the connecting pipes and in the indoor unit using a vacuum pump. Do not use the refrigerant in the outdoor unit. For details, Flaring see the manual of the vacuum pump. 1.

[Page 10: Gas Leak Test](#)

Stripping length of the connecting cable CAUTION 10(7)SAV(R) Series • Wrong wiring connection may cause some electrical parts burn out. 1 2 3 • Be sure to comply with local cords on running the wire from indoor unit Terminal to outdoor unit (size of wire and wiring method, etc.). block •...

This manual is also suitable for:

Ras-10(7)~16(7)sav seriesRas-10skv seriesRas-167skv seriesRas-10sav seriesRas-107sav seriesRas-16sav series ...
[Show all](#)