

Installing The Receiver Unit - Sanyo Big PACi 18 Series Technical Data & Service Manual

Big pack i dc inverter

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218

219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268

269
270
271
272
273
274
275

--	--

•

•

Bookmarks

--



■ RCS-TRP80BG.WL for Ceiling Mounted (T Type)

8-9. Installing the Receiver Unit

(1) Open the air inlet grille on the side panel, remove the 1 screw and then move it toward the front (direction of the arrow) and remove it. (Fig. 8-8)

(2) Wrap the tip of a flat head screwdriver with vinyl tape and then slip it into the side of and under where " O " marking is printed on the lid, wiggling the lid free. (Fig. 8-9) (Be careful not to scratch the panel.)

(3) After passing the lead wire through the panel, install the receiver in the hole of the panel. (The projecting parts of the receiver is held in the hole of the panel.)

(4) Fasten the receiver's lead wire to the clamp that is holding the wire from the louver motor. (Fig. 8-10)

(5) Attach the side panel.

(6) Put the receiver's lead wire together with other wires such as the louver motor wire and fasten them to the

clamp. (Fig. 8-11)



Use the hole in the upper part of the wiring box to lead it in.

Panel
Receiver



Do not twist the control wiring with the power wiring because this may cause malfunction.



Install a noise filter or take other appropriate action if electrical noise disturbs the unit's power supply circuit.

* For the wiring and test run procedures, refer to "Wiring the Receiver Unit" and "Test Run."

Side panel
Air inlet grille

Fig. 8-8

Clamp

Fig. 8-10

Flat head screwdriver
(Wrapped with vinyl tape)
Vinyl tape
Insert into groove
on side below
" O " mark.
Terminal board


8-6

Lid

Fig. 8-9

Clamp

Fig. 8-11

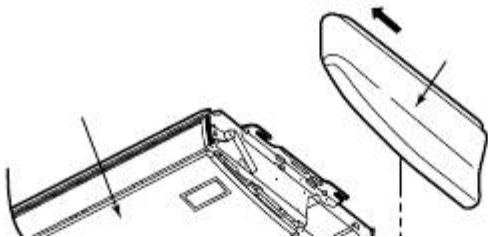

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

266

267

268

269

Quick Links:

[Technical Data](#)

[Service Manual](#)

[Unit Specifications](#)

Chapters

[-- Contents --](#) 5

[2. Test Run](#) 146

[3. Electrical Data](#) 180

[5. Service Procedures](#) 218

[6. Outdoor Unit Maintenance Remote Control](#) 234

[7. Remote Controller Functions Section](#) 244

[8. How to Install the Wireless Remote Controller Receiver](#) 262

Related Manuals for Sanyo Big PACi 18 Series

[Air Conditioner Sanyo SPW-C256VH Technical Data & Service Manual](#)

4-way air discharge semi-concealed wall-mounted ceiling-mounted concealed-duct
(517 pages)

[Air Conditioner Sanyo 26 series Installation Instructions Manual](#)

Split system heat pump air conditioner (110 pages)

[Air Conditioner Sanyo 26XW72R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo XHW2672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo CH2442 Installation Instructions Manual](#)

Split system heat pump air conditioner (94 pages)

[Air Conditioner Sanyo XMHS1272 Technical & Service Manual](#)

Dc inverter multi-system air conditioner (105 pages)

[Air Conditioner Sanyo 18XLS72 Specifications](#)

Ceiling recessed low ambient air conditioner (2 pages)

[Air Conditioner Sanyo XS1872 Technical & Service Manual](#)

Dc inverter split system air conditioner (131 pages)

[Air Conditioner Sanyo XHS1271 Technical & Service Manual](#)

Dc inverter split system air conditioner (123 pages)

[Air Conditioner Sanyo COOL Installation Instructions Manual](#)

Inverter split system air conditioner (36 pages)

[Air Conditioner Sanyo PNR-XS1872 Parts List](#)

Sanyo air conditioner parts list (4 pages)

[Air Conditioner Sanyo XMS1272 Technical & Service Manual](#)

Dc inverter multi-system air conditioner (103 pages)

[Air Conditioner Sanyo PW-UMR184EXH56 Installation And Operation Manual](#)

Eco-i system air conditioner (36 pages)

[Air Conditioner Sanyo PO811 Instruction Manual](#)

Cooling/fan/dehumidifying model (14 pages)

[Air Conditioner Sanyo XHW3672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo XHW4272R Specifications](#)

Ceiling recessed air conditioner (2 pages)

Related Content for Sanyo Big PACi 18 Series

[SPW-FTR124EH56 Installing The Control Unit](#)

Sanyo SPW-FTR124EH56

[CH2442 Installing The Outdoor Unit In Heavy Snow Areas](#)

Sanyo CH2442

[W-3WAY ECO-i 85464369098000 Installing The Outdoor Unit](#)

Sanyo W-3WAY ECO-i 85464369098000

[Mini ECO-i 85464359981002 Installing The Unit In Heavy Snow Areas](#)

Sanyo Mini ECO-i 85464359981002

[PNR-XS2432 Installing The Wired Remote Control Unit](#)

Sanyo PNR-XS2432

[SPW-CR365GXH56 Installing The Receiver Unit](#)

Sanyo SPW-CR365GXH56

[SPW-C256VH Wiring The Receiver Unit](#)

Sanyo SPW-C256VH

[SPW-C0705DZH8 Wiring The Receiver Unit](#)

Sanyo SPW-C0705DZH8

This manual is also suitable for:

[Big paci 90 series](#)[Big paci 48 series](#)[Big paci 25 series](#)[Big paci 36 series](#)[Big paci 70 series](#)[Spw-xdr184gh56a](#) ... [Show all](#)