

Setting Address Switches; Test Operation - Sanyo Big PACi 18 Series Technical Data & Service Manual

Big pack i dc inverter

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218

219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268

269
270
271
272
273
274
275



•

•

Bookmarks



8-18. Setting Address Switches


● When more than one receiver and remote control are installed in the same room, setting up addresses allows them to avoid interfering with each other.

● Refer to the Users Manual for information on how to change the addresses of the remote controls.

● Changing the address of a receiver can be done after removing the screw to the receiver's PCB cover. Once the

change is complete, put the cover back in place; while holding the wiring with the cable clamp, tighten its screw.

Address Display
on the Remote
Control

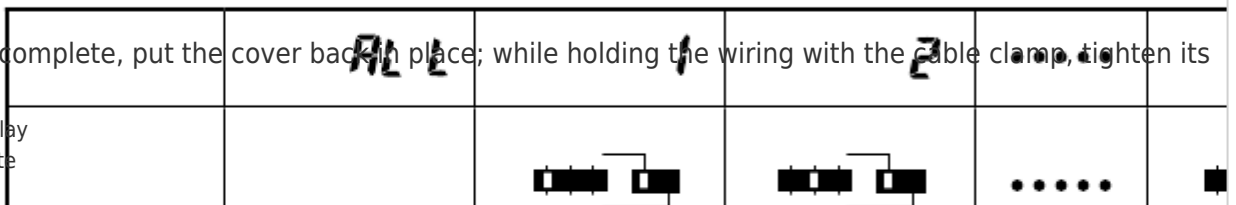

Position of the
 It doesn't matter
 Receiver's
 where the receiver's
 Address Switch
 address switch is.

8-19. Test Operation

- (1) Remove the face plate of the receiver's PCB and turn the DIP switch to RUN/On (Down wireless remote control with its Start/Stop button.
- (2) During a test run, all display lamps on the display will light up.
- (3) During a test run, it is not possible to adjust the temperature.
- (4) After completing a test run, be absolutely sure to return the Test Run switch to OFF (Up none of the display lamps are blinking. Also, put the face plate back in place.

1. This is hard on the device, so only use this for the test run.
2. After turning on the power, the unit will not receive any commands from the remote control for about 1 minute.

This is not an error. (In fact it does receive signals, but they are cancelled.)

3. Make sure to operate while the indoor unit is stopped.
4. The address of indoor unit is set to "ALL" at the time of the shipment.

1 2 3
 1 2 3
 4 5 6
 4 5 6
 8-11
 1 2 3
 4 5 6

Up) and operate the
 Down) and make sure

[Previous Page](#)
[Next Page](#)

1

...

271

272

273

274

Quick Links:

[Technical Data](#)

[Service Manual](#)

[Unit Specifications](#)

Chapters

[-- Contents --](#) 5

[2. Test Run](#) 146

[3. Electrical Data](#) 180

[5. Service Procedures](#) 218

[6. Outdoor Unit Maintenance Remote Control](#) 234

[7. Remote Controller Functions Section](#) 244

[8. How to Install the Wireless Remote Controller Receiver](#) 262

Related Manuals for Sanyo Big PACi 18 Series

[Air Conditioner Sanyo SPW-C256VH Technical Data & Service Manual](#)

4-way air discharge semi-concealed wall-mounted ceiling-mounted concealed-duct
(517 pages)

[Air Conditioner Sanyo 26 series Installation Instructions Manual](#)

Split system heat pump air conditioner (110 pages)

[Air Conditioner Sanyo 26XW72R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo XHW2672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo CH2442 Installation Instructions Manual](#)

Split system heat pump air conditioner (94 pages)

[Air Conditioner Sanyo XMHS1272 Technical & Service Manual](#)

Dc inverter multi-system air conditioner (105 pages)

[Air Conditioner Sanyo 18XLS72 Specifications](#)

Ceiling recessed low ambient air conditioner (2 pages)

[Air Conditioner Sanyo XS1872 Technical & Service Manual](#)

Dc inverter split system air conditioner (131 pages)

[Air Conditioner Sanyo XHS1271 Technical & Service Manual](#)

Dc inverter split system air conditioner (123 pages)

[Air Conditioner Sanyo COOL Installation Instructions Manual](#)

Inverter split system air conditioner (36 pages)

[Air Conditioner Sanyo PNR-XS1872 Parts List](#)

Sanyo air conditioner parts list (4 pages)

[Air Conditioner Sanyo XMS1272 Technical & Service Manual](#)

Dc inverter multi-system air conditioner (103 pages)

[Air Conditioner Sanyo PW-UMR184EXH56 Installation And Operation Manual](#)

Eco-i system air conditioner (36 pages)

[Air Conditioner Sanyo PO811 Instruction Manual](#)

Cooling/fan/dehumidifying model (14 pages)

[Air Conditioner Sanyo XHW3672R Specifications](#)

Ceiling recessed air conditioner (2 pages)

[Air Conditioner Sanyo XHW4272R Specifications](#)

Ceiling recessed air conditioner (2 pages)

Related Content for Sanyo Big PACi 18 Series

[SPW-XR253GH56 Address Setting Method](#)

Sanyo SPW-XR253GH56

[SAP-K77GHAX Address Setting Of The Remote Control Unit](#)

Sanyo SAP-K77GHAX

[SAP-KV94GJ Address Setting Of The Remote Control Unit](#)

Sanyo SAP-KV94GJ

[SAP-KR184GJH Address Setting Of The Remote Control Unit](#)

Sanyo SAP-KR184GJH

[KMS0772 Address Setting Of The Remote Control Unit](#)

Sanyo KMS0772

[SAP-KMRV74EH Address Setting Of The Remote Control Unit](#)

Sanyo SAP-KMRV74EH

[SPW-C256VH Indoor Unit Address Setting](#)

Sanyo SPW-C256VH

[SPW-C0705DZH8 Address Switch Setting](#)

Sanyo SPW-C0705DZH8

This manual is also suitable for:

[Big paci 90 series](#)[Big paci 48 series](#)[Big paci 25 series](#)[Big paci 36 series](#)[Big paci 70 series](#)[Spw-xdr184gh56a](#) ... [Show all](#)