

TOSHIBA

Toshiba HDR5010KB Quick Start Manual

Digital tv recorder

1
2

--

•

Bookmarks

Quick Links

[Download this manual](#) See also: [Owner's Manual](#)



Enlarged version

Digital TV recorder

HDR5010KB

TOSHIBA

QUICK START GUIDE

© 2010 Toshiba Corporation

q Digital TV recorder HDR5010KB

Package Contents

q
t
e
w
r



Digital TV recorder

Remote control

© 2010 Toshiba Corporation

q

Owner's manual

Quick start guide

t
y

HDR5010KB Quick Start Guide (English)

u

y

HDR5010KB

Batteries

AC mains adaptor

e
(2xAAA/R03)

r
Help leaflet

u

W

1 Package Contents



Inserting the Batteries into the Remote Control

Always check the positive/negative symbols on the batteries to ensure they are inserted correctly.

Don't forget to get rid of old batteries safely. Check with your local council for how you should get rid of batteries. Never put batteries on a fire or in the bin with normal household waste.

Note:

A label with support information is located on the back of the remote control.

e TOSHIBA

Connecting Equipment to the Rear of the Recorder

q Digital TV recorder HDR5010KB

QUICK START GUIDE

Plug your aerial lead into the RF IN socket of the recorder.

q Plug the RF cable between the RF OUT socket of the recorder and your TV.

w Plug a HDMI cable between the HDMI-OUT socket of the recorder and your TV. Cable not supplied.

e Plug the supplied AC mains adaptor between the power socket of the recorder and a standard wall socket. Only switch on the wall socket when all cables have been attached.

r



© 2010 Toshiba Corporation

2 Inserting the Batteries



- Always check the positive/negative symbols on the batteries to ensure they are inserted correctly.
 - Don't forget to get rid of old batteries safely. Check with your local council for how you should get rid of batteries. Never put batteries on a fire or in the bin with normal household waste.
- Note:
- A label with support information is located on the back of the remote control.

3 Connecting Equipment



- 1 Plug your aerial lead into the RF IN socket of the recorder.
- 2 Plug the RF cable between the RF OUT socket of the recorder and your TV. Cable not supplied.
- 3 Plug a HDMI cable between the HDMI-OUT socket of the recorder and your TV. Cable not supplied.
- 4 Plug the supplied AC mains adaptor between the power socket of the recorder and a standard wall socket. Only switch on the wall socket when all cables have been attached.

Please refer to page 9 of the User Guide for more information on connecting equipment.

2 Inserting the Batteries



- Always check the positive/negative symbols on the batteries to ensure they are inserted correctly.
 - Don't forget to get rid of old batteries safely. Check with your local council for how you should get rid of batteries. Never put batteries on a fire or in the bin with normal household waste.
- Note:
- A label with support information is located on the back of the remote control.

3 Connecting Equipment

Please refer to page 9 of the User Guide for information on connecting equipment using a HDMI cable, a SCART cable, a USB Flash drive or an audio system using a SPDIF cable.



r
06/10 08:48:34 **TOSHIBA**



[Next Page](#)

1

2

Related Manuals for Toshiba HDR5010KB

[DVR Toshiba HDR5010KB Owner's Manual](#)

Toshiba hdr5010kb digital tv recorder owner's manual (48 pages)

[DVR Toshiba HDR5010 Owner's Manual](#)

Freeview hd tv recorder (48 pages)

[DVR Toshiba HDR5010KB Quick Start Manual](#)

(2 pages)

[TV Receiver Toshiba HD-S25 Owner's Manual](#)

Digital high definition receiver (56 pages)

[TV Receiver Toshiba DST-3000 Owner's Manual](#)

Toshiba dst-3000: user guide (96 pages)

[TV Receiver Toshiba DST-3100 Owner's Manual](#)

Directv high-definition receiver/hdtv tuner (96 pages)

[TV Receiver Toshiba DST-3000 Owner's Manual](#)

High definition digital receiver (98 pages)

[TV Receiver Toshiba Solid State Service Manual](#)

25"/29"/34"/38" solid state color television receiver (19 pages)

Summary of Contents for Toshiba HDR5010KB

[Page 1: Package Contents](#)

A label with support information is located on the back of the remote control. Connecting Equipment to the Rear of the Recorder © 2010 Toshiba Corporation Package Contents Plug your aerial lead into the RF IN socket of the recorder.

[Page 2: Overview Of The Remote Control](#)

USB - Switches the viewing mode to USB. www.toshiba.com Visit for more informaton. STB - Switches the Digital TV recorder on/into Standby. to register your product for its 12-month guarantee. U-MAN-002-09 © 2010 Toshiba Corporation. Printed in UK 78-010-043-10 HD5010KB Quick Start Guide.indd 2 8/6/10 08:48:36...