



# Toshiba SD1020KB Owner's Manual



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17



- 

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks

## Quick Links

[1 Regions Codes](#)

[2 Product Overview](#)

[3 Remote Control](#)


[4 Connecting to a Tv](#)

[5 Specifications](#)

[6 Troubleshooting](#)



[Download this manual](#)

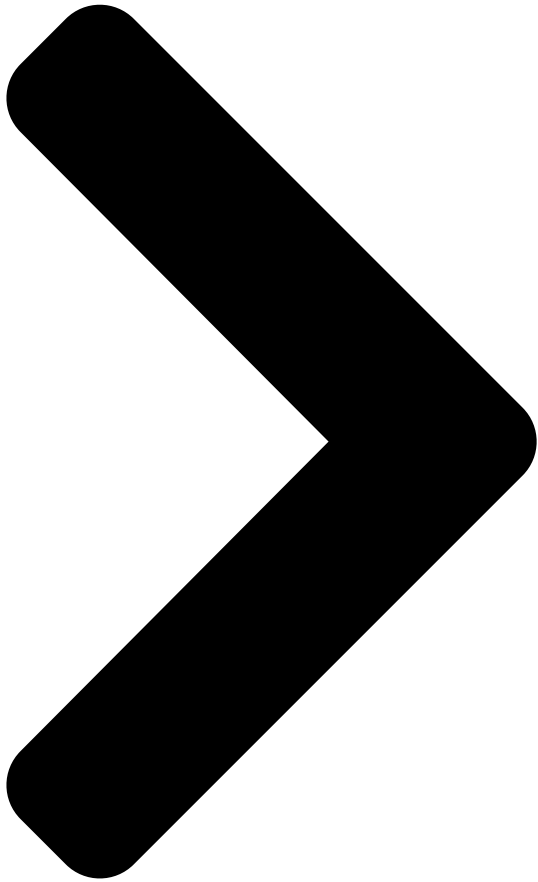

DVD player

**SD1020KB**

*Owner's Manual*

**TOSHIBA**



## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba SD1020KB

[DVD Player Toshiba SD1010KB Owner's Manual](#)

Sd1010 dvd player (27 pages)

[DVD Player Toshiba SD1010 Owner's Manual](#)

(27 pages)

[DVD Player Toshiba SD-1008 Owner's Manual](#)

Toshiba sd-1008: user guide (44 pages)

[DVD Player Toshiba SD1010KE Owner's Manual](#)

(27 pages)

[DVD Player Toshiba SD-1200 Owner's Manual](#)

Toshiba dvd player owner's manuals (48 pages)

[DVD Player Toshiba SD-6000KU Owner's Manual](#)

(44 pages)

[DVD Player Toshiba SD-150ESB Owner's Manual](#)

Toshiba dvd player owner's manual (36 pages)

[DVD Player Toshiba SD-1600 Service Manual](#)

(125 pages)

[DVD Player Toshiba SD-185 Owner's Manual](#)

Toshiba dvd player user manual (27 pages)

[DVD Player Toshiba SD-K510 Service Manual](#)

Dvd video player (16 pages)

[DVD Player Toshiba SD-1800 Owner's Manual](#)

(59 pages)

[DVD Player Toshiba SD120/220 Owner's Manual](#)

Dvd video player (61 pages)

[DVD Player TOSHIBA SD190EKB Owner's Manual](#)

Dvd player (27 pages)

[DVD Player Toshiba SD-1300A Service Manual](#)

(93 pages)

[DVD Player Toshiba SD-170EKB2 Service Manual](#)

(37 pages)

[DVD Player Toshiba SD-220EB Service Manual](#)

(138 pages)

## Summary of Contents for Toshiba SD1020KB

[Page 1](#) DVD player SD1020KB Owner's Manual...

### [Page 2: Table Of Contents](#)

Contents 1 Important.....3 Safety and important notice.....3 Disposal of your old product and batteries.....3-4 Notice for Trademark.....5 2 Your Product.....5 Regions codes.....5 Product overview.....6 Remote control.....7 3 Connections .....8 Connecting to a TV .....8 Connecting to a Stereo System.....8 Connecting to the digital amplifier/receiver.....8 Connecting Power.....8 4 Preparation.....9 Prepare the remote control.....9...

## [Page 3: Important](#)

1 June 2007, with phased deadlines to 2018. • Never place this product on other electrical  
Toshiba will meet all REACH requirements and equipment. is committed to provide our  
customers with • Keep away from this product during lightning information about the presence  
in our articles storms.

[Page 4](#) (Pb), mercury (Hg), and/or cadmium (Cd) defined in the Battery Directive  
(2006/66/EC), then the chemical symbols for lead (Pb), mercury (Hg) and/ or cadmium (Cd) will  
appear below the crossed out wheeled dust bin symbol. By participating in separate collection  
of batteries, you will help The symbol for CLASS II (Double Insulation) to assure the proper  
disposal of products and batteries and thus help to prevent...

## [Page 5: Notice For Trademark](#)

2 Your Product Notice for Trademark Regions codes Both the DVD Player and the discs are  
coded by M a n u f a c t u r e d u n d e r l i c e n s e f r o m D o l b y region.

## [Page 6: Product Overview](#)

Product overview Front panel (Sample Illustration) Front panel controls Item Description  
Function Disc compartment Load a disc into the disc drive. IR Sensor Point the remote control at  
the IR sensor. Open or close the disc compartment. Stop playback. Playback/pause. Turn the  
power on (indicator glows green) or restore the unit to the standby mode (indicator is off).

## [Page 7: Remote Control](#)

Remote control DISPLAY REMOTE SIGNAL EMITTER Point remote control to the Displays a  
window to locate sensor on the front panel a title, chapter or track ON / STANDBY OPEN/CLOSE  
Turns the unit to ON or Opens/closes the disc tray standby mode Number Buttons T-SEARCH...

## [Page 8: Connections](#)

3 Connections IN or SCART IN) on the TV and use the audio cables (white/red) to connect AUDIO  
OUT (L/ R) jacks of the DVD player to the corresponding Make the following connection to use  
this product. AUDIO IN jacks on the Stereo System (cable not supplied).

## [Page 9: Preparation](#)

4 Preparation Setting up the player Always follow the instructions in this chapter in sequence.  
Find the correct viewing input Note: 1. Press 1 ON/STANDBY to turn on this - Use of controls or  
adjustments or performance product. of procedures other than herein may result in 2.

## [Page 10: Playback](#)

5 Playback to skip back to the beginning of the current chapter or track or the previous chapter  
or track. Playback Functions 2. Press the button NEXT M\_ during playback will allow you to skip  
the playback to next chapter or track. Basic Playback 1.

[Page 11](#) T-SEARCH SUBTITLE During DVD playback, press the T-SEARCH Press the SUBTITLE  
button repeatedly and the screen will display "Subtitle X/XX XXX" or button to edit Title,  
Chapter, Audio, Subtitle, Angle, TT (Title), CH (Chapter) Time, Repeat and "Subtitle Off". Time  
Disp. (Display) menu. "X"...

## [Page 12: Customizing](#)

6 Customizing [Screen Saver] Turn On or Off the screen saver mode. It helps to This section  
describes the various setting option protect the TV screen. of this DVD player. {On} - Set the  
screen saver active after 1. If the setup option is greyed out, it means the approximately 2  
minutes without operation.

## [Page 13: Video](#)

{SPDIF Off} - No audio will be output via {Low} - Select Low sharpness level. COAXIAL DIGITAL  
OUT jack. {Bitstream} - Selects Bitstream output if [Brightness] your receiver SPDIF (Coaxial) IN  
only supports Press b/B to adjust the brightness of display, Bitstream stereo audio signal.

[Page 14](#) and SVCD. 3. Enter the new password again to confirm. {On} - Display the content  
menu If you forget the password, you can erase your current password by entering the default

{Off} - Hide the content menu. password. [Audio] Select the audio language of your preference. [Default] [Subtitle] Reset all settings of DVD player to initial default...

### [Page 15: Specifications](#)

7 Specifications Playable media This product can play: • D VD, DVD-Video, DVD-R/-RW, DVD-R DL (Dual Layer) • Video CD/SVCD • Audio CD, CD-R/CD-RW Video • S ignal system: PAL/NTSC Audio • D igital output (Coaxial): 0.5 Vp-p (75 Ω) Main Unit • P ower supply rating: 110V-240V, 50/60Hz • P ower consumption: 8W • P ower consumption in standby mode: <0.5W • D imensions (w x h x d): 270 x 38 x 200 (mm) • N et Weight: 0.95 kg • O perating temperature: 5°C to 35°C • O perating humidity: Less than 80% (no condensation) Accessories supplied • R emote control (SE-R0301)

### [Page 16: Troubleshooting](#)

8 Troubleshooting If you experience any of the following difficulties while using this unit, check the list below before consulting your nearest TOSHIBA dealer. Problem N o r e a c t i o n t o t h e r e m o t e Connect the product to the power outlet.

### [Page 17: Glossary](#)

9 Glossary Region code A system that allows discs to be played only in Aspect ratio the region designated. This unit only plays discs that have compatible region codes. You can find Aspect ratio refers to the length to height ratio the region code of your unit on the product label.