





## Sanyo TIC-C300E Instruction Manual

Sanyo tic-c300e; tic-c220e induction cooktop



1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	

---

•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks

## Quick Links

[1 How to Use](#)

[Download this manual](#)





# COMMERCIAL USE INDUCTION COOKTOP

## INSTRUCTION MANUAL

Read these instructions carefully before use. If you follow the instructions, your induction cooktop will provide you with many years of good service.

SAVE THESE INSTRUCTIONS

### TIC-C300E / TIC-C220E



## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

# Related Manuals for Sanyo TIC-C300E

## [Hob Sanyo TIC-C300E Datasheet](#)

2900w counter top induction hob (2 pages)

## Summary of Contents for Sanyo TIC-C300E

[Page 1](#) COMMERCIAL USE INDUCTION COOKTOP INSTRUCTION MANUAL Read these instructions carefully before use. If you follow the instructions, your induction cooktop will provide you with many years of good service. SAVE THESE INSTRUCTIONS TIC-C300E / TIC-C220E...

### [Page 2: Table Of Contents](#)

Inhalt Contents Safety Precautions ..... 3 Name of Parts .....5  
How to Use ..... 6 Usable and Unusable Pots and Pans ..... 7 How  
to Distinguish Usable Pots and Pans .....8 Trouble Shooting Guide  
..... 9 Care and Cleaning ..... 1 0 Specifications  
.....

### [Page 3: Safety Precautions](#)

Safety Precautions Be sure to read all safety precautions carefully before use so that it can be used correctly. These precautions are prepared for safety use and prevent you and other people from hazards and injuries. [Power Source] [Location of the cooktop] Independent use of wall socket rated 250 V 13 A or Keep the cooktop away from flammable walls and over.

[Page 4](#) It may cause fire, injury or electric shock. In the event of malfunction or breakdown, plug out Be careful of boil over from cooking pot or pan. power plug, stop use and contact Sanyo Service It may cause burns, injuries or failure. centre.

### [Page 5: Name Of Parts](#)

Fuse covers are available from Sanyo Service Centre. If the plug supplied is not suitable for your socket outlet, it should be cut off and destroyed\*.

### [Page 6: How To Use](#)

By pressing desired POWER LEVEL key, POWER LEVEL lamps light, and heating starts at selected power level. The power level can be change at anytime during cooking by pressing desired POWER LEVEL key. TIC-C300E TIC-C220E POWER LEVEL (Approx.) POWER LEVEL (Approx.)

### [Page 7: Usable And Unusable Pots And Pans](#)

Usable and Unusable Pots and Pans Usable pots and pans Unusable pots and pans Material Material Iron, Cast iron Heat resistant glass Porcelain enamel on steel Porcelain(China), Ceramic(Earthenware) Stainless steel (18-0,18-8,18-10) Aluminum, Copper • In case of pots and pans (18-8,18-10) with thick- ness of 0.7mm or more, the max.

### [Page 8: How To Distinguish Usable Pots And Pans](#)

How to Distinguish Usable Pots and Pans Preliminary work: Plug into wall socket. Pour water in pot or pan, and place it in centre of top plate. Press ON/OFF key. ON lamp lights. Press POWER LEVEL key. In case of usable pots and pans, ON lamp lights. In case of unusable pots and pans, ON lamp flashes and buzzer beeps for one minute, and then the cooktop stops automatically.

### [Page 9: Trouble Shooting Guide](#)

• Is the room temperature very high? • Is an empty pot or pan being heated? In the following cases, immediate repair is necessary. Remove power plug and contact Sanyo Service centre.

Power cord is damaged. Power plug / power cord become abnormally hot.

### [Page 10: Care And Cleaning](#)

Remove with a cloth or the dusting brush attachment of a vacuum cleaner. Clean the removable air filter regularly. (at least once a week) Do not operate cooktop without air filter in position. Specifications Model TIC-C300E TIC-C220E Power source AC 230 V, 50 Hz Power consumption...

[Page 11](#) SANYO ELECTRIC CO., LTD OSAKA, JAPAN CODE NO. 434-6-452S-50800...

This manual is also suitable for:

[Tic-c220e](#)