



# Wiring Diagram - Toshiba RAS-10SKVP2-E Service Manual

 
Split type indoor unit high wall, heat pump type outdoor unit heat pump type



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111



•

[Table of Contents](#)

•

Troubleshooting



•

## Bookmarks





## 5. WIRING DIAGRAM

Outdoor Terminal Block

Indoor Terminal Block

POWER SUPPLY

(From outdoor Unit)

SHEET METAL

CN02

1 1

2 2

Heat Exchanger Sensor

CN63

(TCJ)

(YEL)

1 1

2 2

Heat Exchanger Sensor

CN62

(TC)

(BLU)

1 1


2 2

Thermo Sensor


CN61

(TA)

(WHI)

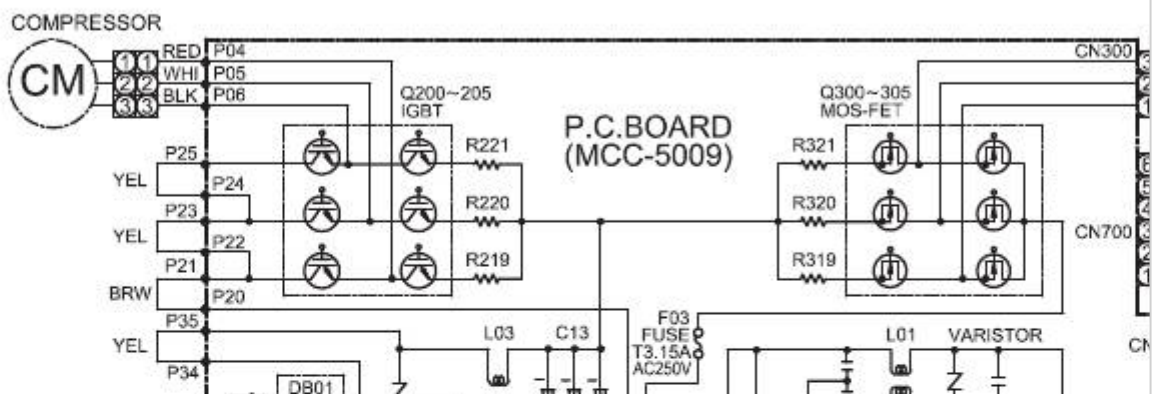


1  
 1  
 2  
 2  
 3  
 3  
 4  
 4  
 5  
 5  
 6  
 6  
 7  
 7  
 8  
 8  
 9  
 9  
 10  
 10  
 11  
 11  
 CN10  
 (WHI)  
 —  
 —  
 16  
 FILE NO. SVM-11015-1  
 220-240V ~50Hz  
 220-230V ~60Hz  
 Ion  
 Electrode  
 1 2 3  
 High-voltage  
 1 2 3  
 Power Supply  
 Heat  
 Exchanger  
 GRN&YEL  
 1 2 3 4  
 1 2 3 4  
 Micro SW  
 BRW  
 2  
 1  
 1 2 3 4  
 SKVR & SKVP series  
 3  
 1  
 1  
 1  
 1  
 (RED)  
 1 2 3 4  
 CN42  
 CN41  
 CN01 CN51  
 1 1  
 (WHI)  
 3 3  
 4 4  
 5 5  
 6 6  
 CN31  
 (WHI)  
 WHI  
 1 1  
 1 1  
 YEL  
 2 2  
 2 2  
 3 3  
 YEL  
 3 3  
 4 4  
 YEL  
 4 4  
 Varistor  
 5 5  
 YEL  
 5 5  
 CN32  
 (WHI)  
 Line  
 Filter  
 CN22  
 (WHI)  
 1  
 DCSV  
 2  
 BLU

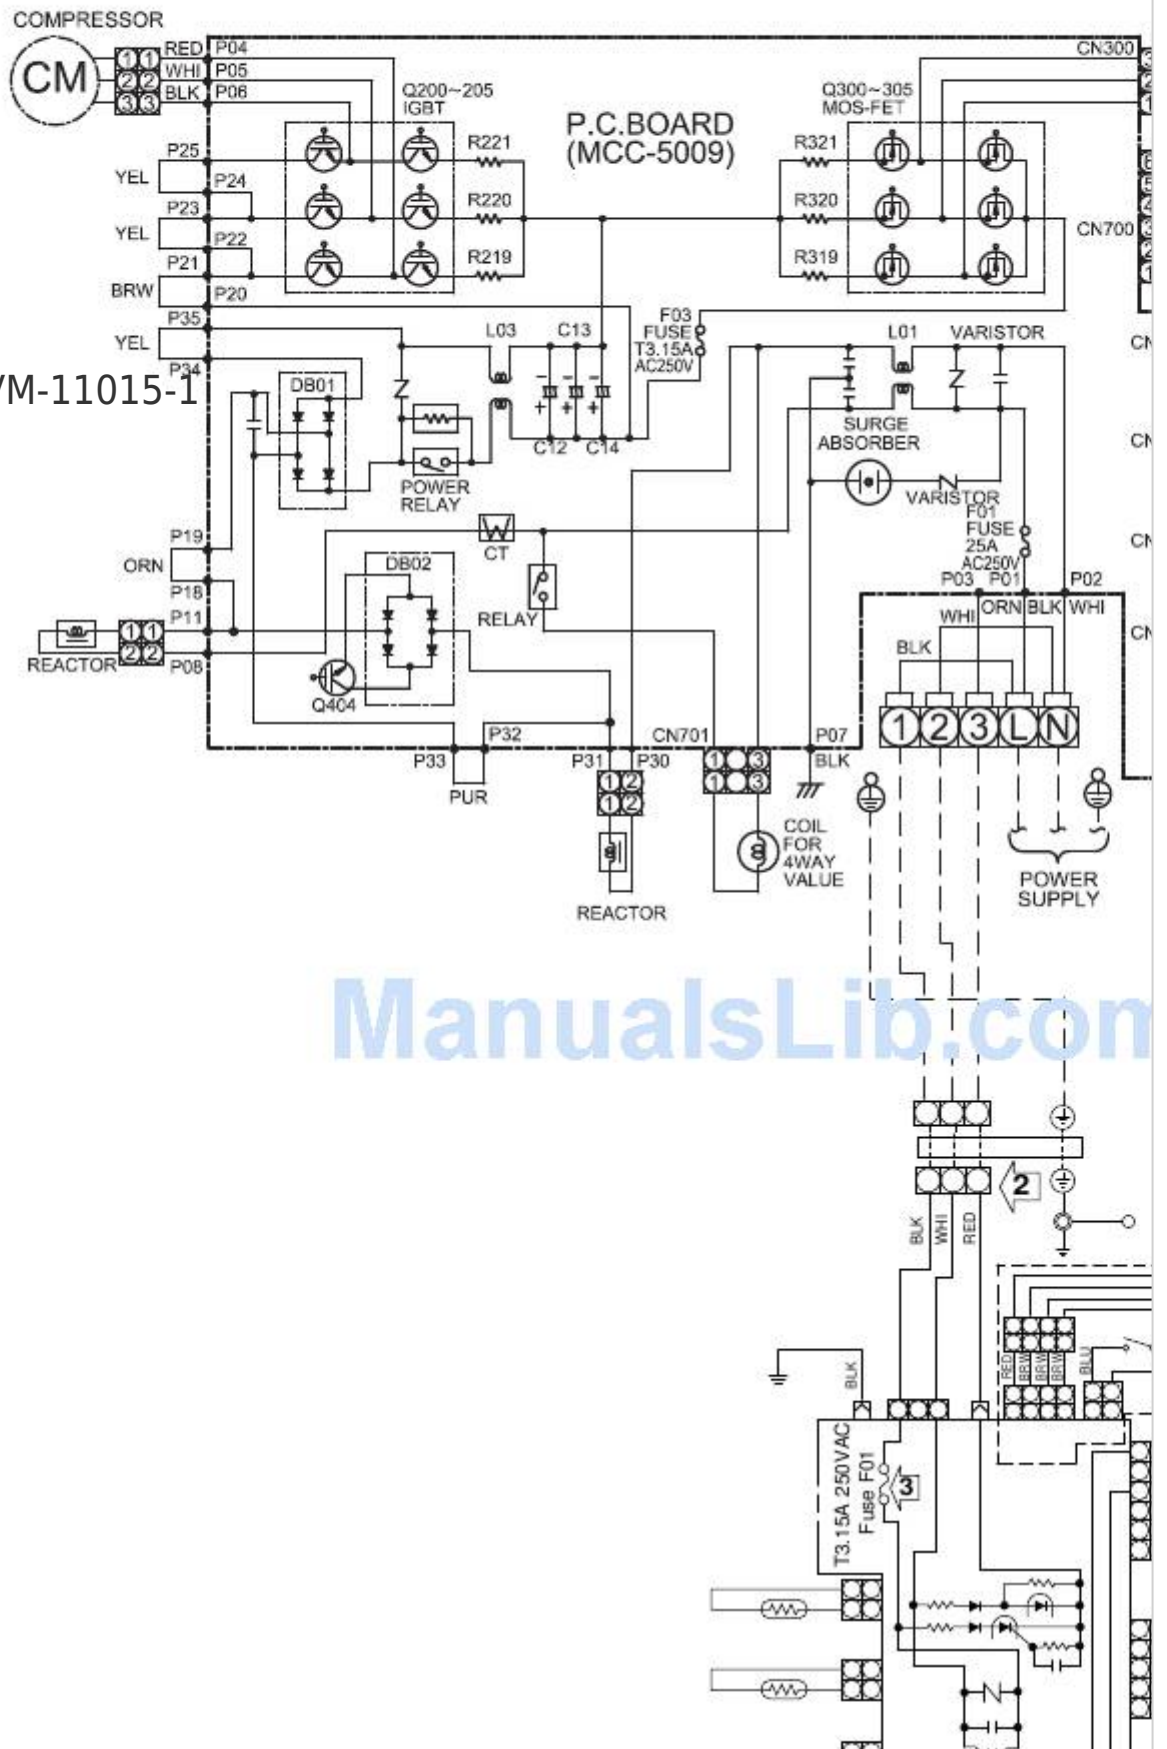

ManualsLib.com

- 1
- 1
- DC12V
- 3
- BLU
- 2
- 2
- 4
- BLU
- 3
- 3
- BLU
- 4
- 4
- BLU
- 5
- 5
- BLU
- 6
- 6
- Color indication
- BLU
- 7
- 7
- BLU
- 8
- 8
- BLU
- 9
- 9
- BLU
- 10
- 10
- WHI
- 11
- 11
- CN21 (WHI)
- Main P.C Board
- MCC-5045
- Air purifier
- Electrode
- 1 2 3 4
- 1 2 3 4
- DC Motor
- Fan Motor
- Louver Motor
- BRW:BROWN
- YEL:YELLOW
- BLK:BLACK
- RED:RED
- BLU:BLUE
- WHI:WHITE
- GRN & YEL: GREEN & YELLOW

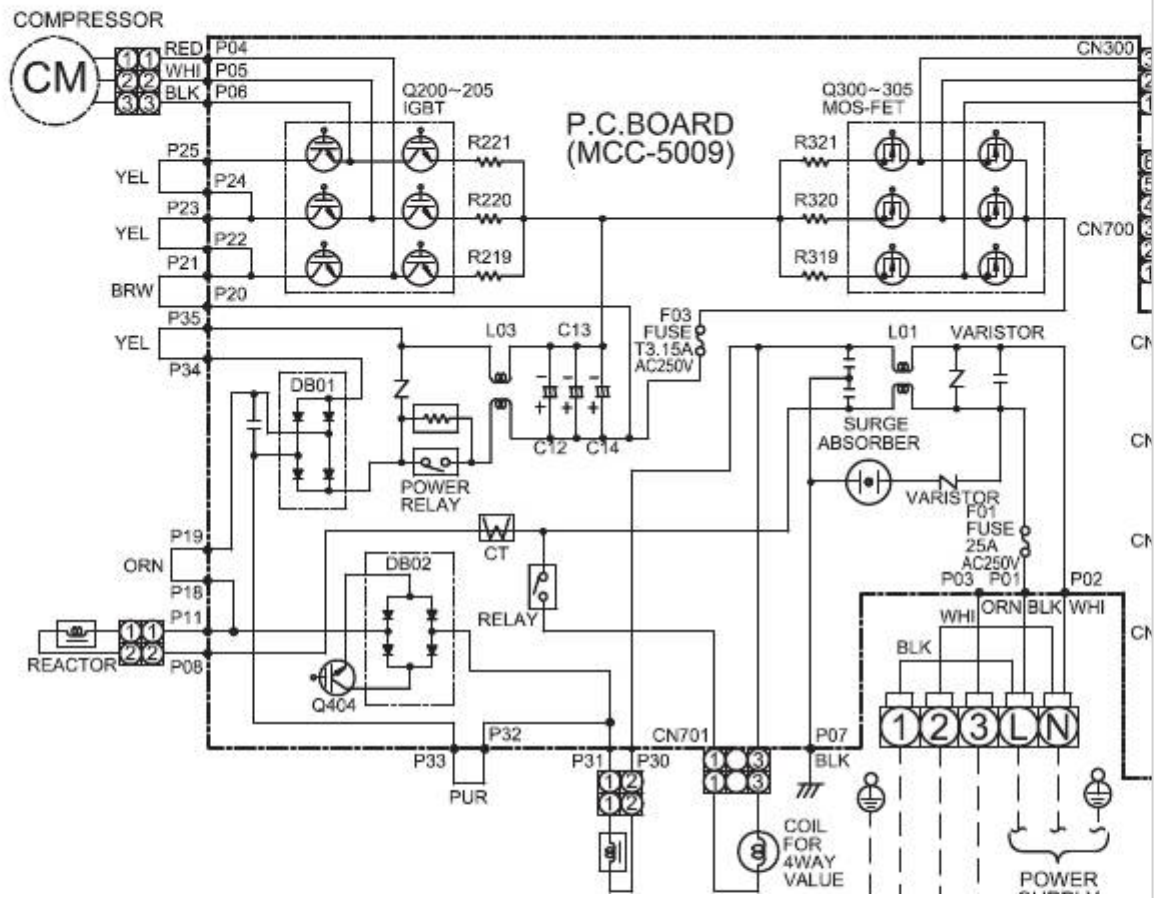

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
14  
15  
16  
17  
18  
19  
20  
21



Quick Links:

[Service Manual](#)

[Specifications](#)

[Indoor Unit](#)

## Chapters

[Service Manual 2](#)

[Table of Contents 24](#)

### Related Manuals for Toshiba RAS-10SKVP2-E

[Air Conditioner Toshiba RAS-10SAV-A Service Manual](#)

Split wall type (94 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKVP2 series Owner's Manual](#)

Split type (6 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Owner's Manual](#)

Air conditioner (split type) (8 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Split type indoor/outdoor unit (121 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-10SKH-E Service Manual](#)

Split wall type air conditioner (62 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-10~16 SKV\(R\) Series Owner's Manual](#)

Split type (4 pages)

[Air Conditioner Toshiba RAS-10\(7\)~16\(7\)SKV Series Installation Manual](#)

Air conditioner (split type) (11 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

## Related Content for Toshiba RAS-10SKVP2-E

[RAS-5M34G3AVG-E Wiring Diagram](#)

Toshiba RAS-5M34G3AVG-E

[RAV-GV1101AT8P-TR Wiring Diagram](#)

Toshiba RAV-GV1101AT8P-TR

[RAS-B10S4KVPG-E Power Supply Input Wiring Diagram For 1:1 Outdoor Unit](#)

Toshiba RAS-B10S4KVPG-E

[RAS-B24B2KVG-E Power Supply Input Wiring Diagram](#)

Toshiba RAS-B24B2KVG-E

[MCY-MHP0806HT8-C Series Wiring Diagram](#)

Toshiba MCY-MHP0806HT8-C Series

[RAV-GM562ATP-TR Wiring Diagram](#)

Toshiba RAV-GM562ATP-TR

[RAV-HM301SDTY-E Wiring Diagram](#)

Toshiba RAV-HM301SDTY-E

[RAS-24PAVSG-E Power Supply Input Wiring Diagram](#)

Toshiba RAS-24PAVSG-E

This manual is also suitable for:

[Ras-10savp2-eRas-16savp2-eRas-13savp2-eRas-13skvp2-eRas-16skvp2-e](#)