



# Control Block Diagram - Toshiba RAS-10SKVP2-E Service Manual

 
Split type indoor unit high wall, heat pump type outdoor unit heat pump type



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111



•

[Table of Contents](#)

- 

Troubleshooting



•


## Bookmarks






## 8-1. Indoor Unit

Heat Exchanger Sensor (Tcj)  
Heat Exchanger Sensor (Tc)  
Room Temperature Sensor (Ta)  
Infrared Rays Signal Receiver  
and Indication  
Initializing Circuit  
Clock Frequency  
Oscillator Circuit  
Power Supply  
Circuit  
Converter  
(D.C circuit)  
Noise Filter  
From Outdoor Unit

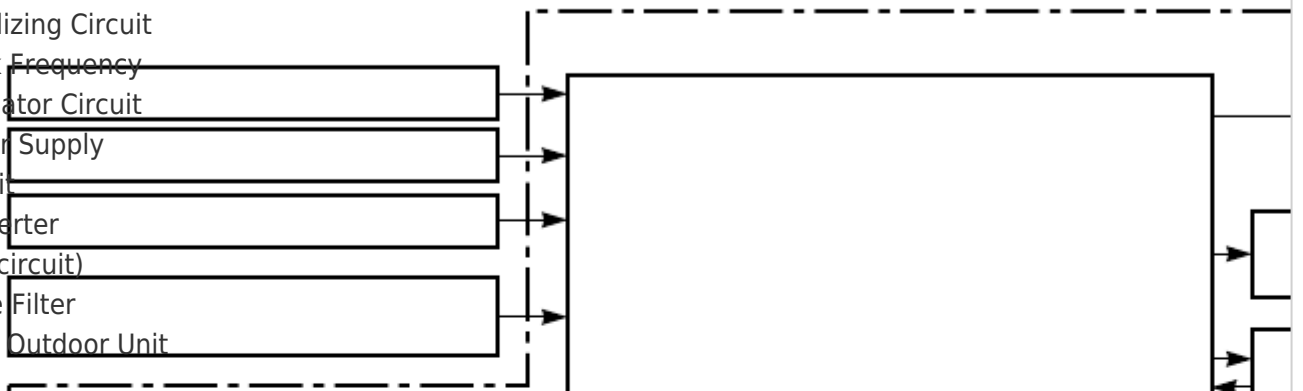

~  
 220-240V  
 50Hz  
 220-230V ~60Hz  
 REMOTE CONTROLLER

### 8. CONTROL BLOCK DIAGRAM

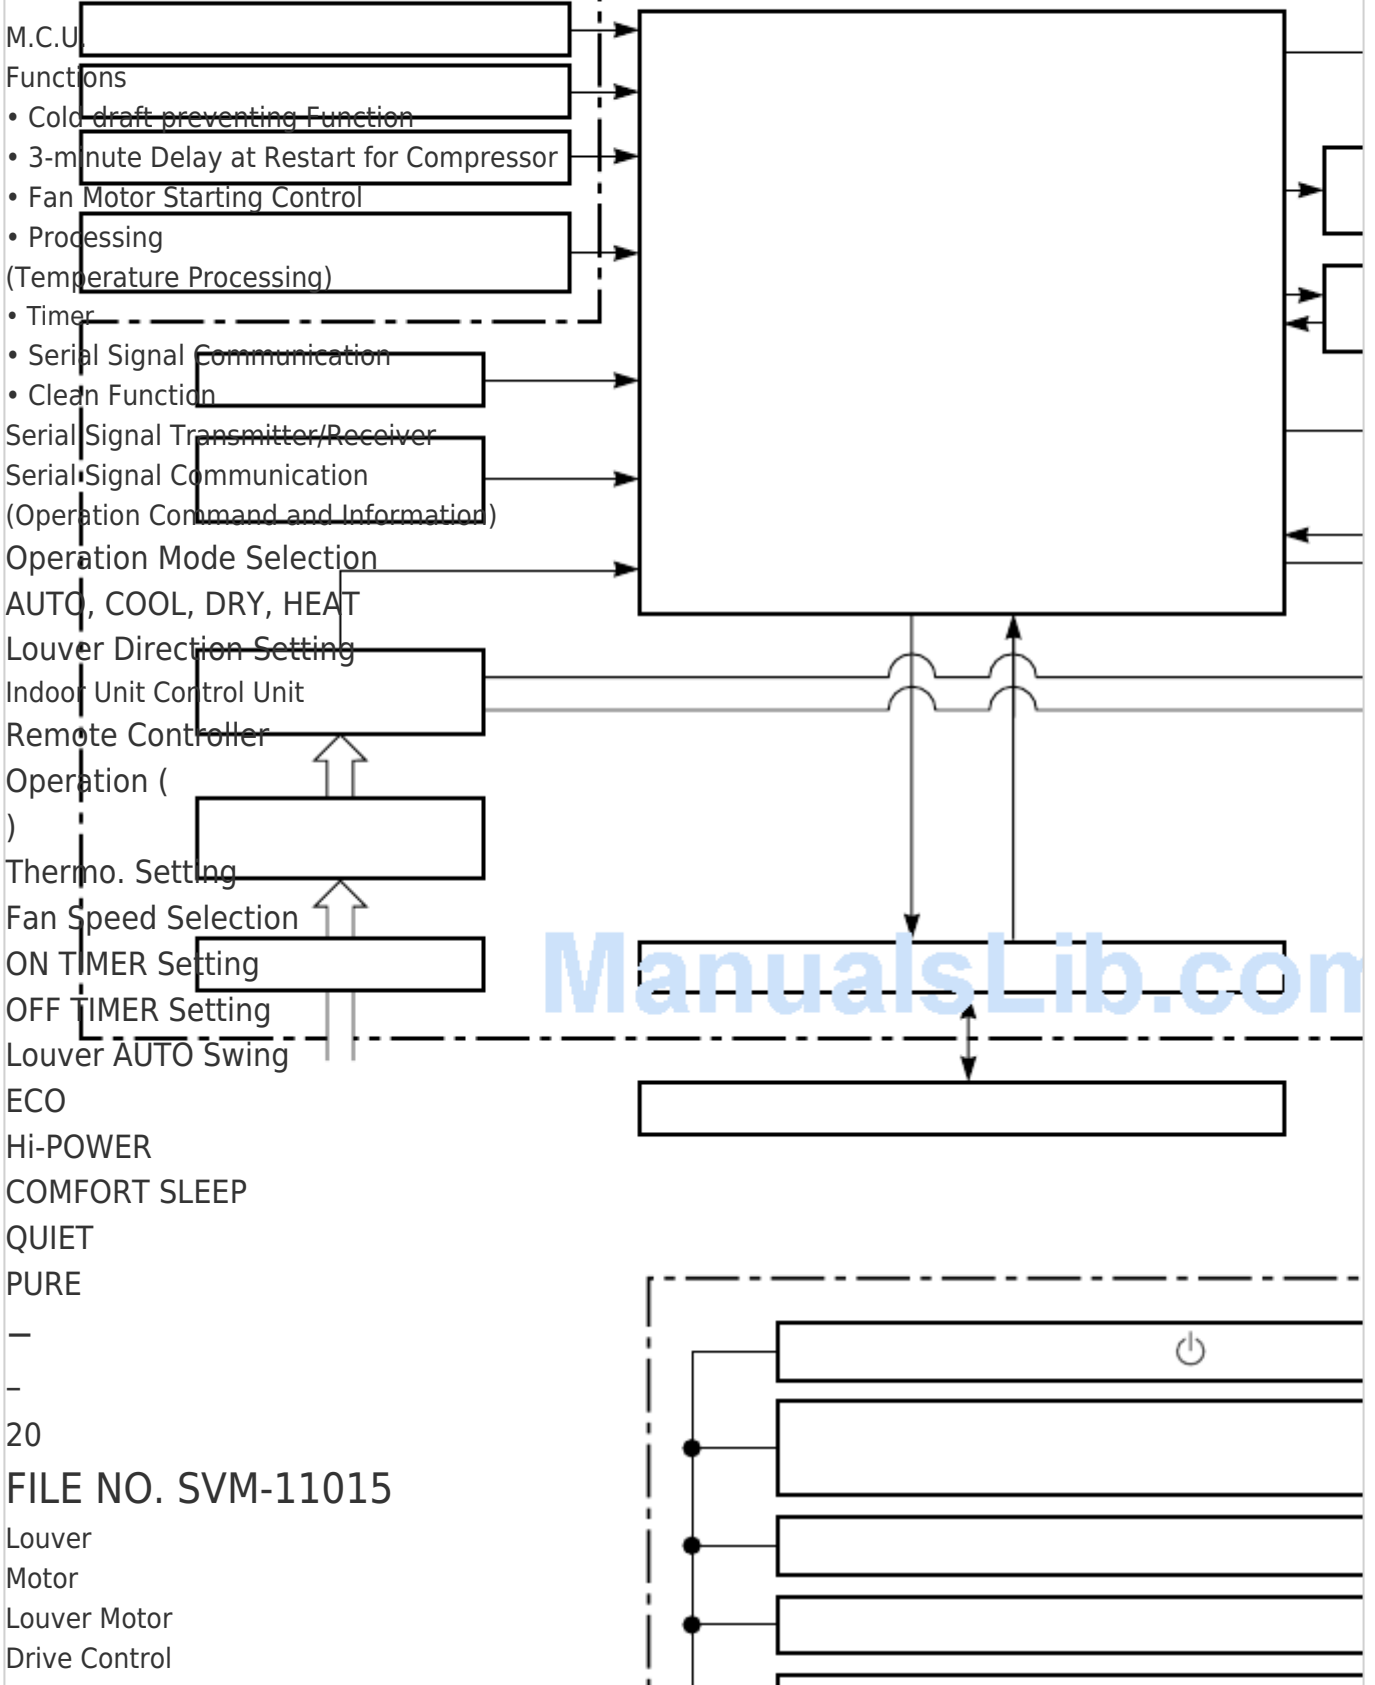


ManualsLib.com

FILE NO. SVM-11015

Louver  
 Motor  
 Louver Motor  
 Drive Control

 Indoor Fan  
Motor Control  
Indoor  
Indoor  
Fan Motor  
Air purifier  
Micro Switch  
Infrared Rays, 36.7kHz  
unit



[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
18  
19  
20  
21  
22  
23  
24  
25

Quick Links:

[Service Manual](#)

[Specifications](#)

[Indoor Unit](#)

## Chapters

[Service Manual 2](#)

[Table of Contents 24](#)

### Related Manuals for Toshiba RAS-10SKVP2-E

[Air Conditioner Toshiba RAS-10SAV-A Service Manual](#)

Split wall type (94 pages)



[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKVP2 series Owner's Manual](#)

Split type (6 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Owner's Manual](#)

Air conditioner (split type) (8 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Split type indoor/outdoor unit (121 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-10SKH-E Service Manual](#)

Split wall type air conditioner (62 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-10~16 SKV\(R\) Series Owner's Manual](#)

Split type (4 pages)

[Air Conditioner Toshiba RAS-10\(7\)~16\(7\)SKV Series Installation Manual](#)

Air conditioner (split type) (11 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

## Related Content for Toshiba RAS-10SKVP2-E

[RAS-B07G3KVSG-E Control Block Diagram](#)

Toshiba RAS-B07G3KVSG-E

[RAS-25S4KVDG-ND Control Block Diagram](#)

Toshiba RAS-25S4KVDG-ND

[RAS-B22PKVSG-TR Control Block Diagram](#)

Toshiba RAS-B22PKVSG-TR

[RAS-25S4KVPG-ND Control Block Diagram](#)

Toshiba RAS-25S4KVPG-ND

[RAS-10S3AV-E Control Block Diagram](#)

Toshiba RAS-10S3AV-E

[RAV-GM901BTP Series Control Block Diagram](#)

Toshiba RAV-GM901BTP Series

[MMD-AP0721HP-UL1 Indoor Control Block Diagram](#)

Toshiba MMD-AP0721HP-UL1

[RAS-M05G3KVSG-E Control Block Diagram](#)

Toshiba RAS-M05G3KVSG-E

This manual is also suitable for:

[Ras-10savg2-eRas-16savg2-eRas-13savg2-eRas-13skvp2-eRas-16skvp2-e](#)