

 
Louver Control; Louver Position; Air Direction Adjustment; Swing - Toshiba RAS-10SKVP2-E Service Manual

Split type indoor unit high wall, heat pump type outdoor unit heat pump type

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Item

8. Louver control

This function controls the air direction of the indoor unit.

- The position is automatically controlled according to the operation

1) Louver position

mode (COOL/HEAT).

- The set louver position is stored in memory by the microcomputer, and the louver returns to the stored position when the next operation is performed. (Cooling/Heating memory position)

The angle of the louver is indicated as the louver closes fully is 0°.

1) Louver position in cooling operation

2) Louver position in heating operation

2) Air direction adjustment

Horizontal
blowing

- Swing operation is performed in width 35° with the stop position as

3) Swing

the center.

- If the stop position exceeds either upper or lower limit position, swing operation is performed in width 35° from the limit which the stop position exceeded.

Operation flow and applicable data, etc.

Initial setting of "Cooling storage position"

Louver : Directs downward (35.3°)

Heating operation/

AUTO (HEAT)

Initial setting of "Heating storage position"

Louver : Directs downward (80.5°)

Air direction

Inclined

Blowing

blowing

downward

Inclined

Horizontal

blowing

blowing

—

—

32

FILE NO. SVM-11015

Description

- The louver position can be arbitrarily set up by pressing [FIX] button.


- Swing

When pressing

[SWING] button during

operation, the louver

starts swinging.

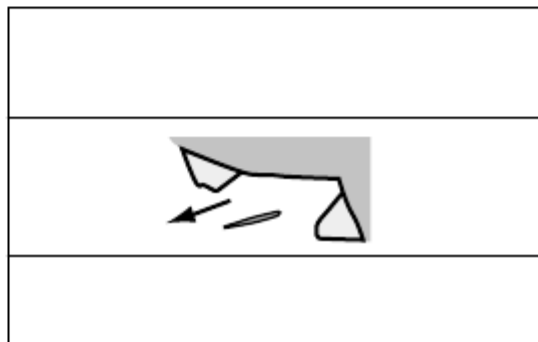

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
30
31
32
33
34
35
36
37

Quick Links:

[Service Manual](#)

[Specifications](#)

[Indoor Unit](#)

Chapters

[Service Manual 2](#)

[Table of Contents 24](#)

Related Manuals for Toshiba RAS-10SKVP2-E

[Air Conditioner Toshiba RAS-10SAV-A Service Manual](#)

Split wall type (94 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKVP2 series Owner's Manual](#)

Split type (6 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Owner's Manual](#)

Air conditioner (split type) (8 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Split type indoor/outdoor unit (121 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-10SKH-E Service Manual](#)

Split wall type air conditioner (62 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-10~16 SKV\(R\) Series Owner's Manual](#)

Split type (4 pages)

[Air Conditioner Toshiba RAS-10\(7\)~16\(7\)SKV Series Installation Manual](#)

Air conditioner (split type) (11 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-10SKVP2-E

[RAS-10S3AV-E Louver Control](#)

Toshiba RAS-10S3AV-E

[RAS-M05G3KVSG-E Louver Control](#)

Toshiba RAS-M05G3KVSG-E

[RAS-18S3KV-E Louver Control](#)

Toshiba RAS-18S3KV-E

[RAS-M07N4KVRG-E Louver Control](#)

Toshiba RAS-M07N4KVRG-E

[RAS-25G3KVSG-ND Louver Control](#)

Toshiba RAS-25G3KVSG-ND

[RAS-25E2KVG-ND Louver Control](#)

Toshiba RAS-25E2KVG-ND

[RAS-13S3KV-E Louver Control](#)

Toshiba RAS-13S3KV-E

[RAS-B05BKVG-E Louver Control](#)

Toshiba RAS-B05BKVG-E

This manual is also suitable for:

[Ras-10savg2-eRas-16savg2-eRas-13savg2-eRas-13skvp2-eRas-16skvp2-e](#)