

 
Temporary Operation; Air Purifying Control [Detection Of Abnormality] - Toshiba RAS-10SKVP2-E Service Manual

Split type indoor unit high wall, heat pump type outdoor unit heat pump type

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Item

Operation flow and applicable data, etc.

10. Temporary

Pressing [RESET] button starts the temporary operation of [AUTO] operation. When keeping [RESET] button pressed for 10 seconds or more, the temporary [COOL] operation is performed.

Filter lamp ON


NO

Did you press [RESET] button for 3 seconds or more?

YES

Did you press [RESET] button for 10 seconds or more?

NO

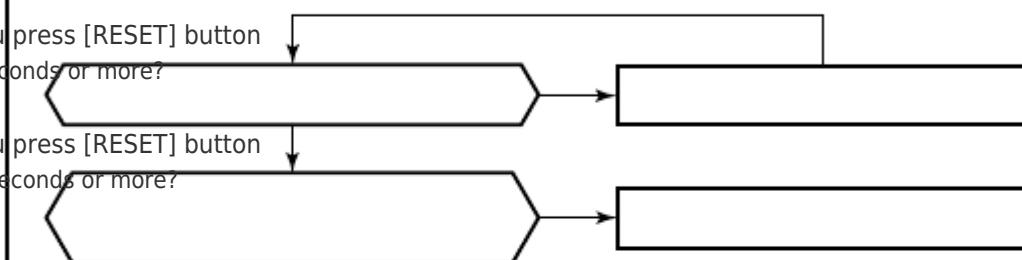

Switch to [AUTO RESTART] control.

11. Air

This function generates negative ion while cleaning the air in the room.

purifying

If air purifier-ON signal is received while the air conditioner stops, the air purifier starts operation, control and if it is received while the air conditioner operates, the air conditioner and the air purifier start operation.

The air ion generator operates linked with the air purifying operation.

Present status

Stop

Air purifier only

Air conditioner

Joint use of AC and air purifier

Air purifying operation

AC + Air purifying operation

Sending air purifier-ON

1

Air conditioner stops

Operation lamp ON

*1

Memory position

of louver/COOL

*2

Fan ON

Air purifier ON

Air purifying operation

YES

Press RESET button.

NO

Temporary [AUTO] operation

YES

Temporary [COOL] Operation

Operation button

PURE button

Air purifier

Stop (All)

AC + Air purifier

AC operation

Louver*1

Cooling position

AUTO, L, L+, M, M+, H

Follows to AC operation

Follows to AC operation

,

2

1


2

Air conditioner operates

Start of air purifier-ON

Air conditioner +

air purifier operate

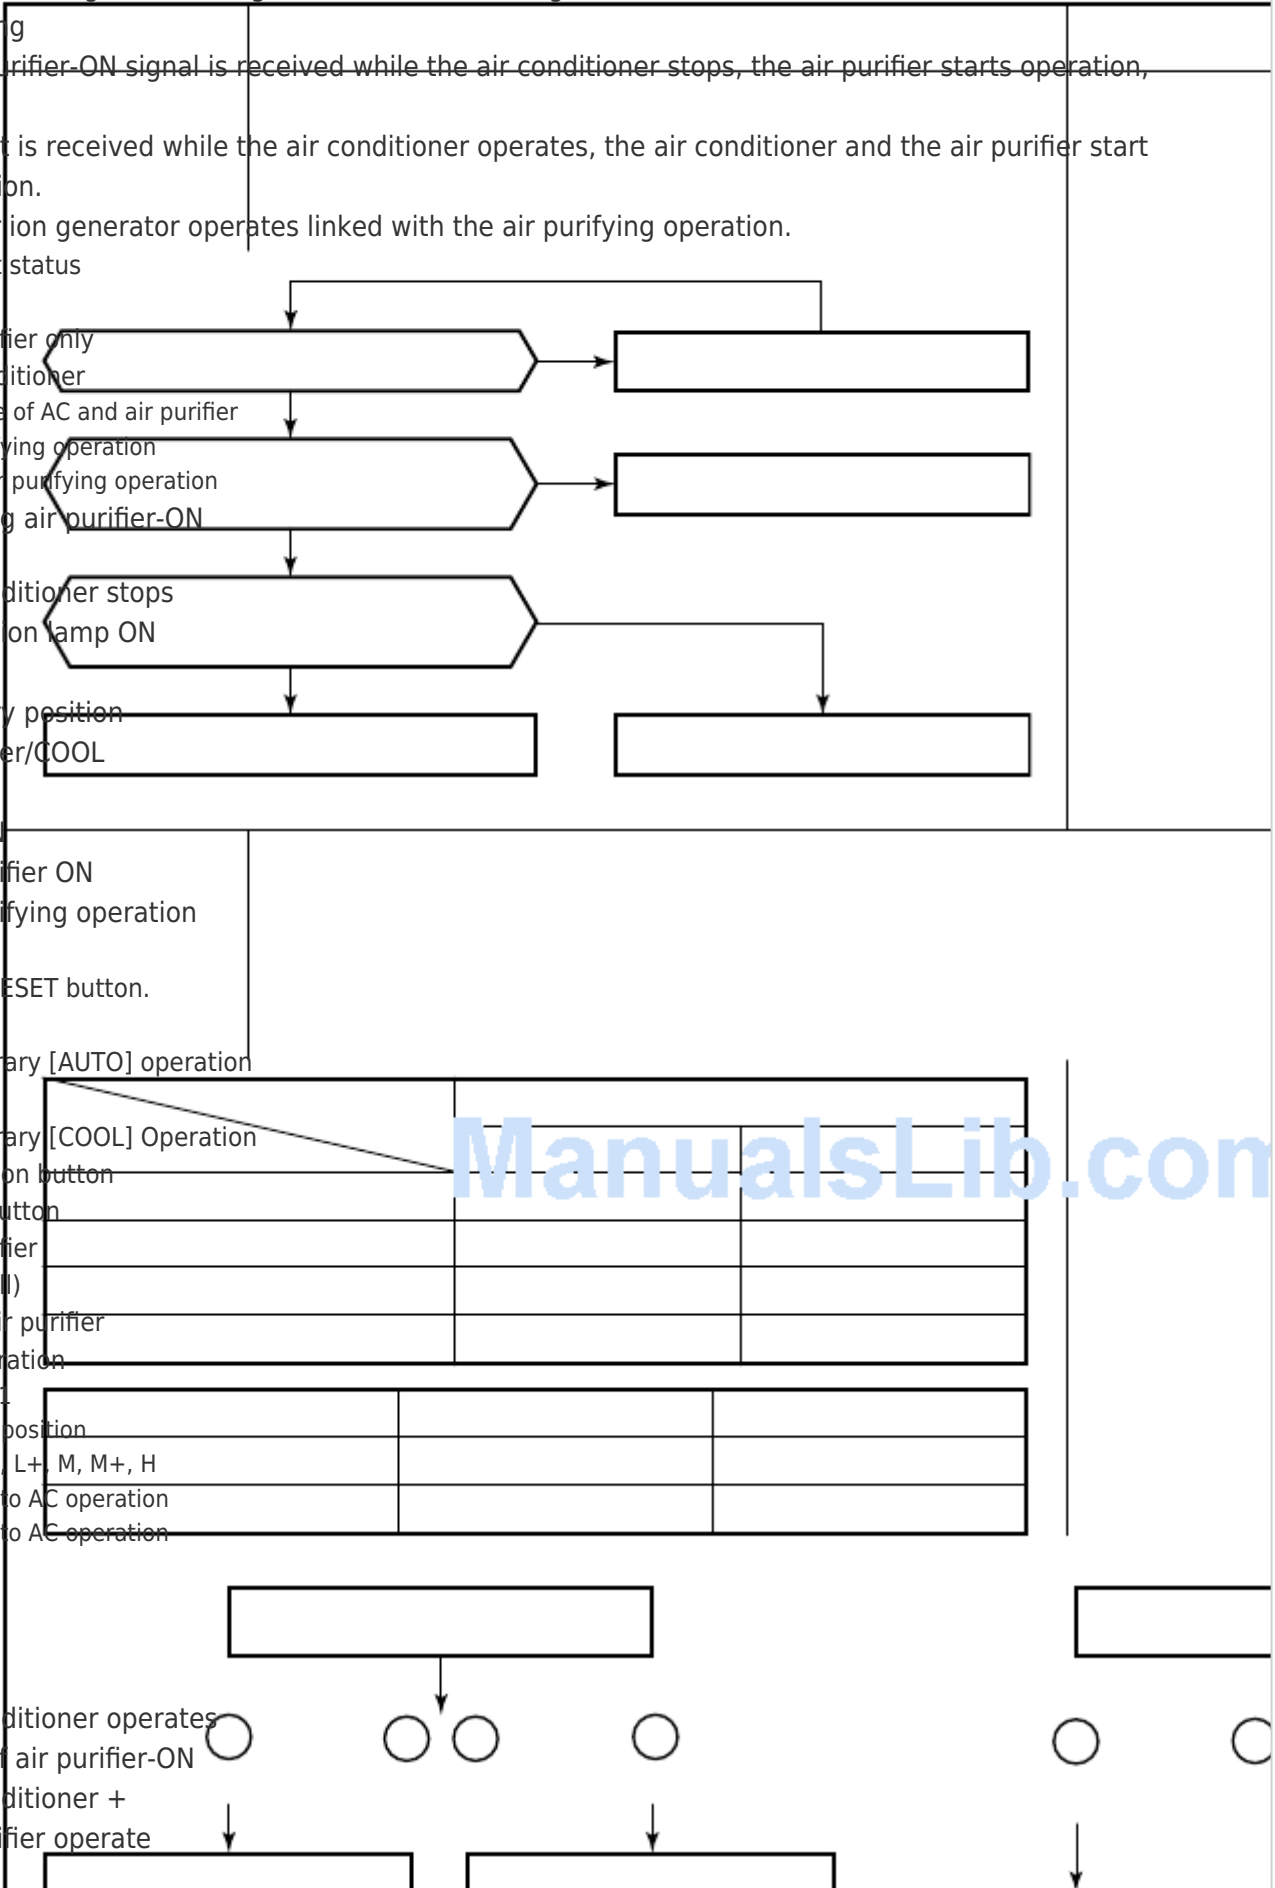

ManualsLib.com

- 1) When pressing [RESET] button, the temporary [AUTO] operation starts.
- 2) When keeping [RESET] button pressed for 3 seconds or more, Pi, Pi, Pi sound is heard and [AUTO RESTART] control is changed.
- 3) When keeping [RESET] button pressed for 10 seconds or more, "Pi" sound is heard and the temporary [COOL] operation starts.

4) If the filter lamp goes on, press [RESET] button to go off the filter lamp, and then press [RESET] button again

5) To stop the temporary operation, press the button again.

* When the previous operation was the operation of air conditioner + air purifier, an operation of air conditioner + air purifier starts by pushing AC button on the remote AC operation*
 AC operation*
 AC + Air purifier

(Operation of air conditioner + air purifier

All stop is stored in memory.)

All stop

*1 Swing is available

Fan speed *2

*2 Fan speed is Fan Auto mode varies in

Sending air purifier-OFF

3
 Air purifier operates

Operation lamp OFF

Fan stop

Air purifier-OFF

Louver close

All stop

-


-

34

FILE NO. SVM-11015

Description

order, (M + 1) → (L) → (L+) → (SL).

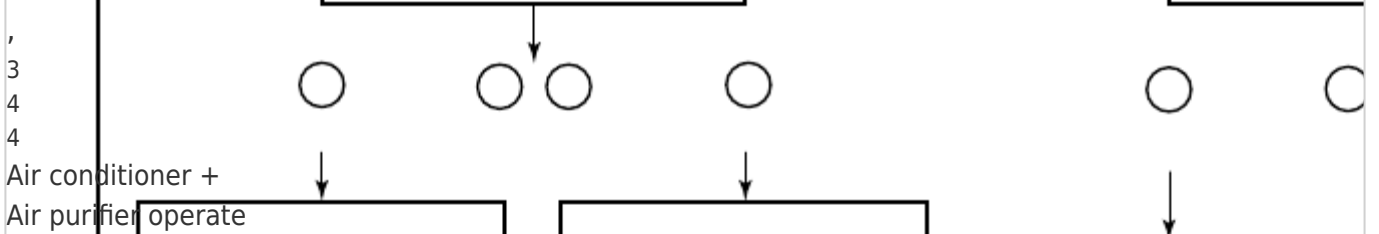

Filter-OFF
Air conditioner operates

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
32
33
34
35
36
37
38
39

Quick Links:

[Service Manual](#)

[Specifications](#)

[Indoor Unit](#)

Chapters

[Service Manual 2](#)

[Table of Contents 24](#)

Related Manuals for Toshiba RAS-10SKVP2-E

[Air Conditioner Toshiba RAS-10SAV-A Service Manual](#)

Split wall type (94 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKVP2 series Owner's Manual](#)

Split type (6 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Owner's Manual](#)

Air conditioner (split type) (8 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Split type indoor/outdoor unit (121 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-10SKH-E Service Manual](#)

Split wall type air conditioner (62 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-10~16 SKV\(R\) Series Owner's Manual](#)

Split type (4 pages)

[Air Conditioner Toshiba RAS-10\(7\)~16\(7\)SKV Series Installation Manual](#)

Air conditioner (split type) (11 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-10SKVP2-E

[MMK-UP0301HP-UL Temporary Operation](#)

Toshiba MMK-UP0301HP-UL

[RAS-35S4KVDG-ND Temporary Operation](#)

Toshiba RAS-35S4KVDG-ND

[RAS-B07G3KVSG-E Temporary Operation](#)

Toshiba RAS-B07G3KVSG-E

[RAS-25S4KVDG-ND Temporary Operation](#)

Toshiba RAS-25S4KVDG-ND

[RAS-B22PKVSG-TR Temporary Operation](#)

Toshiba RAS-B22PKVSG-TR

[35S4KVPG-ND Temporary Operation](#)

Toshiba 35S4KVPG-ND

[RAS-25S4KVPG-ND Temporary Operation](#)

Toshiba RAS-25S4KVPG-ND

[RAS-10S3AV-E Temporary Operation](#)

Toshiba RAS-10S3AV-E

This manual is also suitable for:

[Ras-10savp2-eRas-16savp2-eRas-13savp2-eRas-13skvp2-eRas-16skvp2-e](#)