



# One-Touch Comfort; Hi-Power Mode; Fil Ter Indicator - Toshiba RAS-10SKVP2-E Service Manual

 
Split type indoor unit high wall, heat pump type outdoor unit heat pump type



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111



•

[Table of Contents](#)

- 

Troubleshooting



•

## Bookmarks





Item

### 19. One-Touch

One touch comfort is the fully automated operation

Comfort that is set according to the preferable condition in a region.

Fan  
Operation


\*AUTO/L: Fan operates depends on the setting temperature and room temperature.

During the One Touch Comfort mode if the indoor unit receives any signal with other operation mode, the unit will cancel the comfort mode and operates according to the signal received.

### 20. Hi-POWER

([Hi-POWER] button on the remote controller

Mode

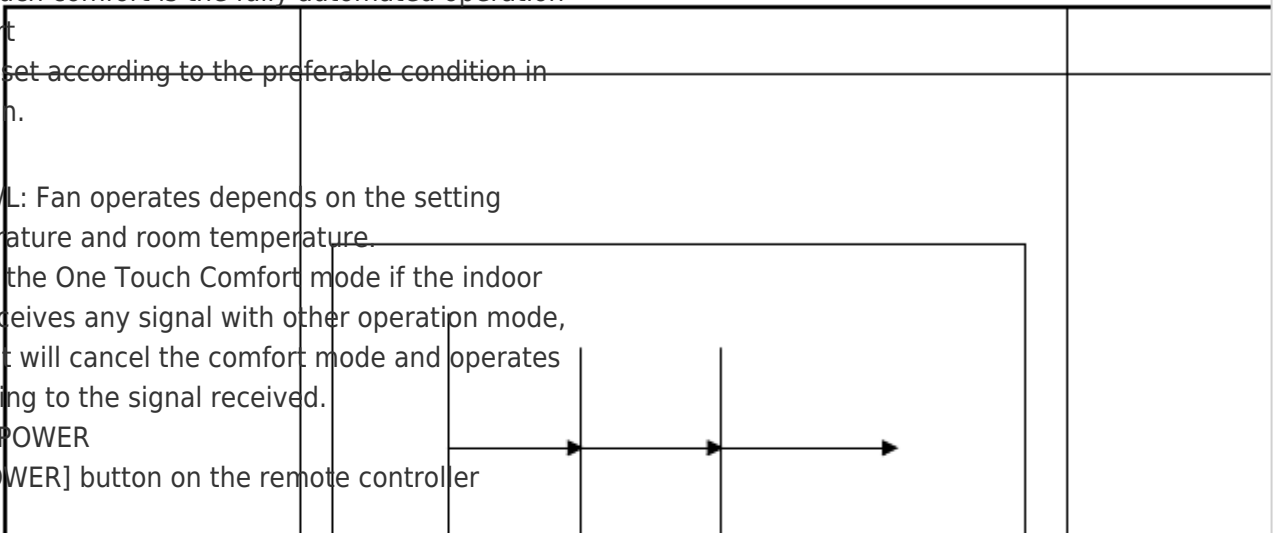

is pressed)

When [Hi-POWER] button is pressed while the indoor unit is in Auto, Cooling or Heating operation, Hi-

POWER mark is indicated on the display of the remote controller and the unit operates as follows.

1. Automatic operation

• The indoor unit operates in according to the

2. Cooling operation

• The preset temperature drops 1°C

3. Heating operation

• The preset temperature increases 2°C

4. The Hi-POWER mode can not be set in Dry operation

21. FILTER

When the elapsed time reaches 1000 hours after air

purifier operation, the FILTER indicator lights.

After cleaning the filters, turn off the FILTER indicator.

How to Turn Off FILTER Indicator

Press [RESET] button on the indoor unit.

NOTE :

If [RESET] button is pushed while the FILTER indicator is not lit, the indoor unit will start the automatic

operation.

When you want a temporary operation while the FILTER lamp lights, press [RESET] button to turn off

the FILTER lamp. (See page 42)

Operation flow and applicable data, etc.

AUTO

\* AUTO/L

0

12

25

current operation.

(The value of the preset temperature on the remote controller does not change.)

The indoor unit's fan speed level increase 1 tap

(The value of the preset temperature on the remote controller does not change.)

The indoor unit's fan speed level increase 1 tap

Operation condition for model to Europe market

When an indoor unit receives "One Touch Comfort Signal" from the remote controller, the indoor unit operates as following.

1) Air conditioner starts to operation when

L

2) Operation mode is set according to room


3) Target temperature is 24°C.

Time after operation

4) Louver position is set as stored position

starts (min)

5) Fan is controlled as followings.

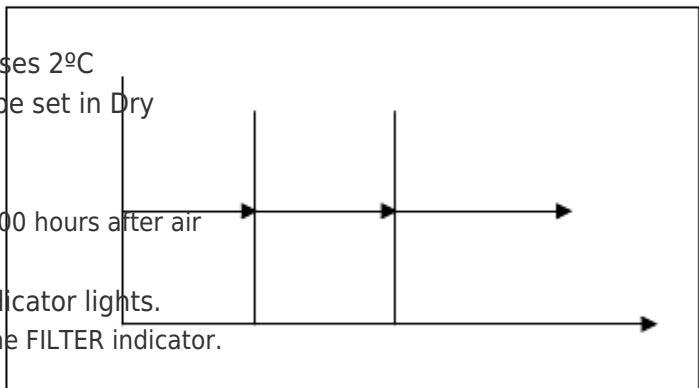

# FILE NO. SVM-11015

## Description

the signal is received, even if the air conditioner was OFF.

temperature, the same as AUTO mode. of the operating mode.

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
38  
39  
40  
41  
42  
43  
44  
45

Quick Links:

[Service Manual](#)

[Specifications](#)

[Indoor Unit](#)

## Chapters

[Service Manual 2](#)

[Table of Contents 24](#)

### Related Manuals for Toshiba RAS-10SKVP2-E

[Air Conditioner Toshiba RAS-10SAV-A Service Manual](#)

Split wall type (94 pages)



[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKVP2 series Owner's Manual](#)

Split type (6 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Owner's Manual](#)

Air conditioner (split type) (8 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Split type indoor/outdoor unit (121 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-10SKH-E Service Manual](#)

Split wall type air conditioner (62 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-10~16 SKV\(R\) Series Owner's Manual](#)

Split type (4 pages)

[Air Conditioner Toshiba RAS-10\(7\)~16\(7\)SKV Series Installation Manual](#)

Air conditioner (split type) (11 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

## Related Content for Toshiba RAS-10SKVP2-E

[ras-m16g3dv-e One-Touch Comfort](#)

Toshiba ras-m16g3dv-e

[RAS-25SKVP2-ND One-Touch Comfort](#)

Toshiba RAS-25SKVP2-ND

[RAS-B16N3KV2-E1 One-Touch Comfort](#)

Toshiba RAS-B16N3KV2-E1

[RAS-07SKHP-E One-Touch Comfort](#)

Toshiba RAS-07SKHP-E

[RAS-24N3KV2-A One Touch Comfort](#)

Toshiba RAS-24N3KV2-A

[RAS-18, 22SKV-E One Touch Comfort](#)

Toshiba RAS-18, 22SKV-E

[RAS-18SAV2-E1 One Touch Comfort](#)

Toshiba RAS-18SAV2-E1

[RAS-15EKCV-UL One-Touch Comfort](#)

Toshiba RAS-15EKCV-UL

This manual is also suitable for:

[Ras-10savg2-eRas-16savg2-eRas-13savg2-eRas-13skvp2-eRas-16skvp2-e](#)