

 
Name And Functions Of Indications On Remote Controller - Toshiba RAS-10SKVP2-E Service Manual

Split type indoor unit high wall, heat pump type outdoor unit heat pump type

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



9-4-3. Name and Functions of Indications on Remote Controller

[Display]

All indications, except for the clock time indicator, are displayed by pressing the

1

Transmission mark

This transmission mark
remote controller transmits signals to the indoor
unit.

2

Mode indicator

Indicates the current operation mode.



(AUTO : Automatic control, A : Auto changeover control,
: Cool,

3

Temperature indicator
Indicates the temperature setting.
(17°C to 30°C)

4

PURE indicator
Shows that the electrical air purifying operation is in progress.

5

FAN speed indicator
Indicates the selected fan speed.
AUTO or five fan speed levels
(LOW, LOW+, HIGH)
) can be shown.

Indicates AUTO when the operating mode is either AUTO or

10

11 2

1

13

7

12


9

6

15

indicates when the

: Dry,
: Heat)
, MED
, MED
+
: Dry.

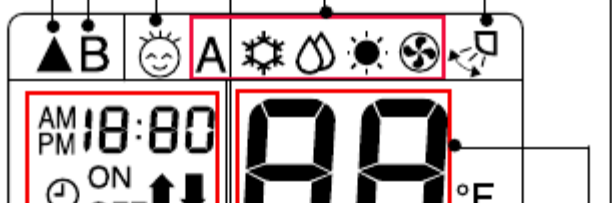

ManualsLib.com

14

4

5

3

6



TIMER and clock time indicator

The time setting for timer operation or the clock time is indicated.

The current time is always indicated except during TIMER operation.

7



Hi-POWER indicator

Indicates when the Hi-POWER operation starts.

Press the Hi-POWER button to start and press it again to stop the operation.



8

(PRESET) indicator

Flashes for 3 seconds when the PRESET button is pressed during operation.

The

button for more than 3 seconds while the mark is flashing.

Press another button to turn off the mark.



9



ManualsLib.com

POWER-SEL

Indicates the selected POWER-SEL level.

(

100%,

10


A, B change indicator remote controller

When the remote controller switching function is set, "B" appears in the remote controller display.

(When the remote controller setting is "A", there is no indication at this position.)

11

Comfort sleep

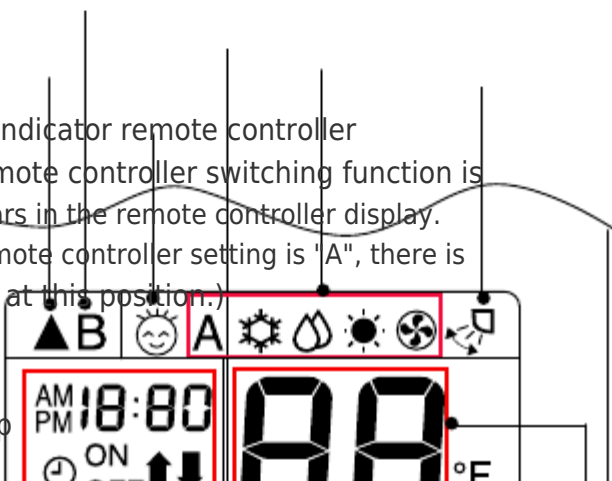

Indicates when comfort sleep is activated.

Press comfort sleep button to select

12

Quiet

Indicates when quiet is activated.

Press Fan button to start and press it again to select other fan speed for operation.



13



One-Touch

Indicates when one touch comfort is activated.

Press one-touch button to start the operation.

14

Swing



Indicates when louver is swing.

8

Press swing button to start the swing operation and press it again to stop the swing operation.



15

ECO indicator

Indicates when the ECO is in activated.

Press the ECO button to start and press it again to stop operation.



47

FILE NO. SVM-11015-1

ManualsLib.com

button.

mark is shown when holding down the

75%,

50%)

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
45
46
47
48
49
50
51
52

Quick Links:

[Service Manual](#)

[Specifications](#)

[Indoor Unit](#)

Chapters

[Service Manual 2](#)

[Table of Contents 24](#)

Related Manuals for Toshiba RAS-10SKVP2-E

[Air Conditioner Toshiba RAS-10SAV-A Service Manual](#)

Split wall type (94 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-10SKVP2 series Owner's Manual](#)

Split type (6 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Owner's Manual](#)

Air conditioner (split type) (8 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Split type indoor/outdoor unit (121 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-10SKH-E Service Manual](#)

Split wall type air conditioner (62 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-10~16 SKV\(R\) Series Owner's Manual](#)

Split type (4 pages)

[Air Conditioner Toshiba RAS-10\(7\)~16\(7\)SKV Series Installation Manual](#)

Air conditioner (split type) (11 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-10SKVP2-E

[RAS-M07G3DV-E Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-M07G3DV-E

[RAS-M07N4KVRG-E Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-M07N4KVRG-E

[RAS-25G3KVSG-ND Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-25G3KVSG-ND

[RAS-25E2KVG-ND Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-25E2KVG-ND

[RAS-B05BKVG-E Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-B05BKVG-E

[RAS-B05E2KVG-E Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-B05E2KVG-E

[RAS-M05J2KVSG-E Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-M05J2KVSG-E

[RAS-25N4KVRG-ND Name And Functions Of Indications On Remote Controller](#)

Toshiba RAS-25N4KVRG-ND

This manual is also suitable for:

[Ras-10savp2-eRas-16savp2-eRas-13savp2-eRas-13skvp2-eRas-16skvp2-e](#)