



Toshiba RAS-107SKV Series Owner's Manual

Toshiba split type air conditioners indoor/outdoor unit

1
2
3

--

•

Bookmarks

--

Quick Links

[Download this manual](#) See also: [Owner's Manual](#), [Installation Manual](#)



OWNER'S MANUAL



AIR CONDITIONER (SPLIT TYPE)

For general public use

Indoor unit

RAS-107, 137, 167 Skv Series

Outdoor unit


RAS-107, 137, 167 SAV Series

TOSHIBA





TOSHIBA

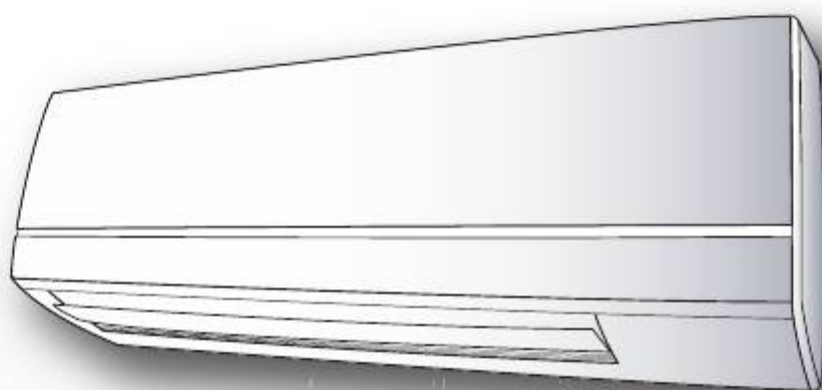

K
K
ANĀ

SKI
ENČINA
ENŠČINA

ManualsLib.com

[Next Page](#)

1
2
3

Related Manuals for Toshiba RAS-107SKV Series

[Air Conditioner Toshiba RAS-137SKV Series Installation Manual](#)

(160 pages)

[Air Conditioner Toshiba RAS-107SKV series Installation Manual](#)

(55 pages)

[Air Conditioner Toshiba RAS SKV Series Installation Manual](#)

Split type air conditioner (31 pages)

[Air Conditioner Toshiba RAS-107 Owner's Manual](#)

Air conditioner (18 pages)

[Air Conditioner Toshiba RAS-10\(7\)~16\(7\)SKV Series Installation Manual](#)

Air conditioner (split type) (11 pages)

[Air Conditioner Toshiba RAS-107SKV Owner's Manual](#)

Split type (4 pages)

[Air Conditioner Toshiba RAS-077SKV Owner's Manual](#)

(4 pages)

[Split type air conditioners Toshiba RAS-167SKV Series Installation Manual](#)

Indoor/outdoor unit (160 pages)

[Air Conditioner Toshiba RAS-077 Series Owner's Manual](#)

(45 pages)

[Air Conditioner Toshiba RAS-077KV Series Owner's Manual](#)

Air conditioner (split type) (21 pages)

[Air Conditioner Toshiba RAS-107 Owner's Manual](#)

(51 pages)

[Air Conditioner Toshiba RAS-077SKV-E6 Service Manual](#)

Split type air conditioner (104 pages)

[Air Conditioner Toshiba RAS-107SKV-E5 Technical Handbook](#)

(78 pages)

[Air Conditioner Toshiba RAS-077SKV-E7 Service Manual](#)

(104 pages)

[Air Conditioner Toshiba RAS-167SKV-E7 Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-107SKV-E3 Service Manual](#)

Split type (86 pages)

Summary of Contents for Toshiba RAS-107SKV Series

[Page 1](#) OWNER'S MANUAL ENGLISH ESPAÑOL FRANÇAIS ITALIANO DEUTSCH PORTUGUÊS POLSKI ČESKY HRVATSKI MAGYAR TÜRKÇE NEDERLANDS SVENSKA SUOMI NORSK DANSK ROMÂNĂ AIR CONDITIONER (SPLIT TYPE) EESTI For general public use LATVISKI Indoor unit RAS-107, 137, 167 SKV Series SLOVENČINA Outdoor unit SLOVENŠČINA RAS-107, 137, 167 SAV Series...

[Page 2](#) PRECAUTIONS FOR SAFETY REMOTE CONTROL FUNCTION • Do not install, repair, open or remove the cover. It may expose you to Infrared signal emitter dangerous voltages. Ask the dealer or the specialist to do this. DANGER • Turning off the power supply will not prevent potential electric shock. Set louver button (FIX) •...

[Page 3](#) TIMER OPERATION TROUBLESHOOTING (CHECK POINT) Setting ON/OFF Timer 1. Press

ON or OFF. The unit does not operate. Cooling is abnormally low. 2. Press SET : Set the timer. 3. Press CLR : Cancel the timer. • The power main switch is turned •...

This manual is also suitable for:

Ras-137skv seriesRas-167skv seriesRas-107sav seriesRas-137sav seriesRas-167sav series