



Asus RT-N56U Setup & User Manual

Asus rt-n56u wireless router

1
Table Of Contents
2
3
4
5
6
7
8

--

•

[Table of Contents](#)

•

Bookmarks

Table of Contents

1 Table of Contents

2 Get to Know the ASUS Router

2.1 Tech Specs - Connections and Expansion

2.2 Minimum System Requirements (Bb500/ Fibrehome500/ Bb1000/
Fibrehome1000)


3 Connecting to ASUS Router

[4 Switching Your Broadband Internet Service to HKBN](#)

[5 Tips on Internet Connection](#)

[Download this manual](#)

[See also: User Manual](#)

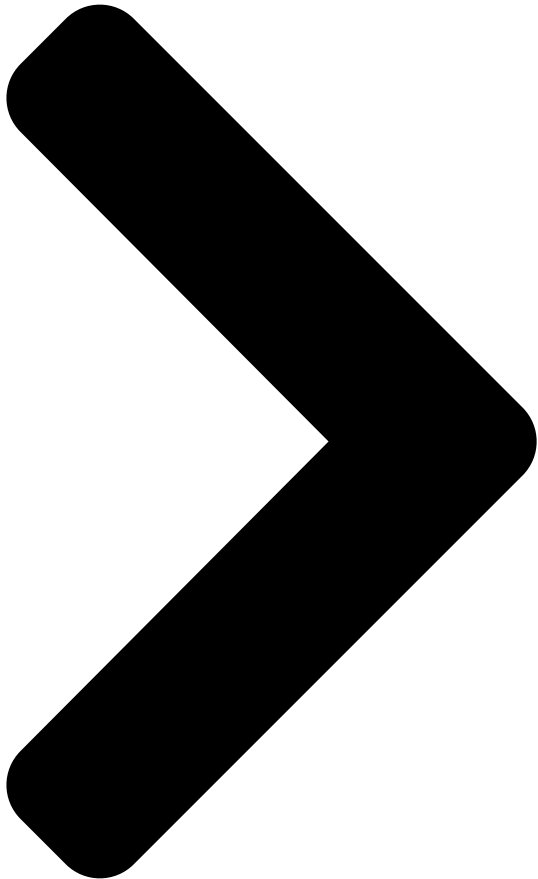



ASUS RT-N56U (RT-N56U) Setup User's Guide

0
HKBN_SETUP_ROUTER_ASUS_ENG_230315

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus RT-N56U

[Network Router Asus RT-N56U Quick Start Manual](#)

Dual-band wireless-n gigabit router (168 pages)

[Wireless Router Asus RT-N56U Quick Start Manual](#)

Dual-band wireless-n gigabit router (168 pages)

[Wireless Router Asus RT-N56U Quick Start Manual](#)

Extreme performance in style dual-band wireless-n gigabit router (153 pages)

[Wireless Router Asus RT-N56U User Manual](#)

Extreme performance in style dual-band wireless-n gigabit router (72 pages)

[Wireless Router Asus RT-N56U Quick Start Manual](#)

Extreme performance in style dual-band wireless-n gigabit router (72 pages)

[Wireless Router Asus RT-N56U Quick Start Manual](#)

Dual-band wireless-n gigabit router (70 pages)

[Wireless Router ASUS RT-N56U Quick Start Manual](#)

Dual-band wireless-n gigabit router extreme performance in style (60 pages)

[Wireless Router Asus RT-N56U Quick Start Manual](#)

Extreme performance in style dual-band wireless-n gigabit router (50 pages)

[Network Router Asus RT-N56U User Manual](#)

Extreme wireless n router (39 pages)

[Wireless Router Asus RT-N56U Network Setup Manual](#)

Dual band gigabit wireless n router (4 pages)

[Wireless Router Asus RT-N53 User Manual](#)

Dual-band wireless-n router (58 pages)

[Wireless Router Asus RT-N53 Quick Start Manual](#)

Dual-band wireless-n router (202 pages)

[Wireless Router Asus RT-N53 Quick Start Manual](#)

Dual-band wireless-n router (60 pages)

[Wireless Router Asus RT-N56U B1 User Manual](#)

Dual-band wireless-n gigabit router (70 pages)

[Wireless Router Asus RT-N16 Quick Start Manual](#)

Dual-band wireless-n750 gigabit router (147 pages)

[Wireless Router Asus RT-N600 User Manual](#)

Wireless-n600 dual band usb router (100 pages)

Summary of Contents for Asus RT-N56U

[Page 1](#) ASUS Wireless Router (RT-N56U) Setup User's Guide
HKBN_SETUP_ROUTER_ASUS_ENG_230315...

[Page 2: Table Of Contents](#)

1 Get to know the ASUS router2 Tech Specs - Connections and Expansion
.....2 Minimum System Requirements (bb500/ FibreHome500/ bb1000/ FibreHome1000) . 2
2 Connecting to ASUS router3 3 Switching your broadband Internet service to
HKBN6 4 Tips on Internet Connection

[Page 3: Get To Know The Asus Router](#)

Get to know the ASUS Router Get to know the ASUS router A. Tech Specs - Connections and Expansion USB Port USB LED LAN LED WAN LED LAN Port 5GHz LED 2.4GHz LED WAN Port Power LED AC Socket B. Minimum System Requirements (bb500/ FibreHome500/ bb1000/ FibreHome1000) To ensure that you have a fast and stable network, please refer to the following as a recommended minimum system requirement.

[Page 4: Connecting To Asus Router](#)

Make sure you have a LAN cable connected from the HKBN wall plate/ONT to the WAN port of your ASUS Router (RT-N56U). Using a second LAN cable, connect it from the Router LAN port to the computer LAN port. Once finished, switch on the power supply for the router and turn on the computer.

[Page 5](#) Create a [Router Login Name] and [Password] then press [Next] to continue to the connection setup. ASUS Wireless Router (RT-N56U) supports both 2.4GHz and 5GHz wireless connections. After creating the network name (SSID) and security key, it is recommended that you choose [Copy 2.4GHz to 5GHz settings], then click [Apply] to finish.

[Page 6](#) Connecting to ASUS Router Connecting to ASUS router Confirm all settings displayed are correct in the Network Configuration Summary then click [Next]. Before the new settings can be applied, the router will again ask for an authentication done by entering your new Login name and Password.

[Page 7: Switching Your Broadband Internet Service To Hkbn](#)

Switching your broadband Internet service to HKBN Switching your broadband Internet service to HKBN After logging in to the router through your browser, select [WAN] under [Advanced Settings] of router settings page. Choose [Automatic IP] under [WAN Connection Type], then click [Apply] to update the setting.

[Page 8: Tips On Internet Connection](#)

[Reset] button and wait the router to reboot to its factory default settings. Default Setting
Login Name/ Password IP Address SSID admin / admin 192.168.1.1 ASUS ASUS Wireless Router (RT-N56U) - The Reset Button is located to the next to USB port Reset Button
HKBN_SETUP_ROUTER_ASUS_ENG_230315...