



# TOSHIBA

Toshiba D-KVR20KU Owner's Manual

Dvd video recorder / video cassette recorder



1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

 
15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111



•

[Table of Contents](#)

- 

Troubleshooting



•

## Bookmarks

[Download this manual](#)

## Quick Links



Downloaded From [Disc-Player.com](http://Disc-Player.com) Toshiba Manuals



CASSETTE RECORDER



## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba D-KVR20KU

### [VCR Toshiba D-KVR20U Owner's Manual](#)

Dvd video recorder / video cassette recorder (111 pages)

### [DVR Toshiba D-KR4 Owner's Manual](#)

Toshiba d-kr4: installation guide (52 pages)

### [DVR Toshiba D-R4SU Owner's Manual](#)

(131 pages)

### [DVR Toshiba D-R2SU Owner's Manual](#)

Toshiba corporation owner's manual digital video dvd video recorder (151 pages)

### [DVR Toshiba D-R2SU Service Manual](#)

(54 pages)

### [DVR Toshiba D-R560KU Owner's Manual](#)

D-r560ku user's guide (117 pages)

### [DVR Toshiba D-RW2SU Owner's Manual](#)

D-rw2su user's guide (157 pages)

### [DVR Toshiba DR570KU Owner's Manual](#)

Dr570ku user's guide (118 pages)

### [DVR Toshiba D-R5SU Owner's Manual](#)

(58 pages)

### [DVR Toshiba D-VR4SU Service Manual](#)

Hi-fi vcr & dvd video recorder (166 pages)

### [DVR Toshiba D-R410KU Service Manual](#)

Toshiba d-r410ku dvd video recorder service manual (66 pages)

### [DVR Toshiba DR420KU Owner's Manual](#)

Dvd video recorder (111 pages)

### [DVR Toshiba D-R550 Owner's Manual](#)

Dvd video recorder (125 pages)

### [DVR Toshiba D-VR3SU Service Manual](#)

Dvd video recorder/video cassette recorder (217 pages)

### [DVR Toshiba DR20KB Owner's Manual](#)

Dr20 dvd recorder (76 pages)

### [DVR Toshiba D-R350SB Service Manual](#)

Dvd video recorder (55 pages)

## Summary of Contents for Toshiba D-KVR20KU

[Page 1](#) Disc Introduction Connections Basic Setup Management Recording Playback Editing Function Setup VCR Function Others TOSHIBA DVD VIDEO RECORDER / VIDEO CASSETTE RECORDER TOSHIBA DVD VIDEO RECORDER / VIDEO CASSETTE RECORDER D-KVR20KU D-KVR20KU Downloaded From Disc-Player.com Toshiba Manuals...

### [Page 2: Precautions](#)

• Used up batteries do not belong in the dust bin. • You can dispose of them at a collection point for used up batteries or special waste. Contact your council for details. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 2 E9KGBUD\_D-

### [Page 3: Important Safety Instructions](#)

Do not place the unit on the furniture that is capable of being tilted by a child and an adult leaning, pulling, standing or climbing on it. A falling unit can cause serious injury or even death. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 3 E9KGBUD\_D-KVR20KU\_EN.indd 3...

[Page 4](#) "standard definition" output. If there are questions regarding your TV set compatibility with this 480p DVD recorder, please contact Toshiba Customer Service. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 4 E9KGBUD\_D-KVR20KU\_EN.indd 4...

[Page 5](#) Authorized Service Center. Note • Remember to read the instructions along with the video head cleaner before use. • Clean video heads only when problems occur. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 5 E9KGBUD\_D-KVR20KU\_EN.indd 5 2008/05/28 16:57:06 2008/05/28 16:57:06...

### [Page 6: Table Of Contents](#)

Finalizing a Disc .....31 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 6...

[Page 7](#) Setting or Releasing the Title Protection ... 83 Setting or Clearing All Chapter Marks at Once..84 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 7 E9KGBUD\_D-KVR20KU\_EN.indd 7...

### [Page 8: Features](#)

You can delete titles which you do not need anymore. If you do not find any of the symbols listed above under the function heading, the operation is applicable to all media. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 8 E9KGBUD\_D-KVR20KU\_EN.indd 8...

[Page 9](#) Hide chapters ✓ ✓ ✓ ✓ ✓ ✓ Delete a title Create a ✓ playlist ✓ Protect a title ✓ : Available Gray: Not available \*CPRM compatible disc only. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 9 E9KGBUD\_D-KVR20KU\_EN.indd 9 2008/05/27 16:10:06 2008/05/27 16:10:06...

[Page 10](#) Performance of any other discs are not guaranteed. • CD-ROM • Compact Disc-Interactive (CD-I) • Toshiba is not liable for any damage or loss caused directly • Video Single Disc (VSD) • DVD-ROM or indirectly by the malfunction of this recorder, including, without limitation, any one of the following: •...

### [Page 11: Functional Overview](#)

• Do not touch the inner pins of the jacks on the rear Use to connect the S-video output of external device with an panel. Electrostatic discharge may cause permanent S-video cable. damage to the unit. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 11 E9KGBUD\_D-KVR20KU\_EN.indd 11 2008/05/27 16:10:09 2008/05/27 16:10:09...

### [Page 12: Installing The Batteries In The Remote Control](#)

This will prevent battery acid from leaking into the battery compartment. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 12 E9KGBUD\_D-KVR20KU\_EN.indd 12 2008/05/27 16:10:10...

[Page 13](#) Be sure to use [OPEN/CLOSE A] or [ A EJECT / C STOP] output mode. on the unit. 17. l/y ON/STANDBY button • Press to turn the unit on and off. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 13 E9KGBUD\_D-KVR20KU\_EN.indd 13 2008/05/27 16:10:11 2008/05/27 16:10:11...

### [Page 14: The Vcr / Dvd Recorder Switching](#)

DVD button VCR button DUBBING REC MODE REPEAT TIMER SET SEARCH ZOOM SE-R0295 Note • You cannot switch to another mode (DVD or VCR) in the timer-standby mode. Downloaded



From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 14 E9KGBUD\_D-KVR20KU\_EN.indd 14 2008/05/27 16:10:12 2008/05/27 16:10:12...

### [Page 15: Guide To On-Screen Displays And Menus](#)

4. Indicates a tape counter. 5. Audio status of the current cassette tape. Note • In some descriptions on this manual, only one disc type is indicated as an example. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 15 E9KGBUD\_D-KVR20KU\_EN.indd 15 2008/05/27 16:10:12 2008/05/27 16:10:12...

[Page 16](#) • If you press [DISPLAY] one more time, album name will be displayed. Album Name • If there is no artist, track or album name, "Not Available" will be displayed. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 16 E9KGBUD\_D-KVR20KU\_EN.indd 16 2008/05/27 16:10:13 2008/05/27 16:10:13...

### [Page 17: Main Menu](#)

CD Playback Mode 7. Slide Show: (JPEG files only) Random Play Program Play Allows you to select the display time of the slide show Slide Show mode. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 17 E9KGBUD\_D-KVR20KU\_EN.indd 17 2008/05/27 16:10:13 2008/05/27 16:10:13...

### [Page 18: Front Panel Display Guide](#)

Appears when HDMI output on the disc tray. mode (1080i) is selected. Appears when data is being Appears when HDMI output recorded on a disc. mode (1080p) is selected. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 18 E9KGBUD\_D-KVR20KU\_EN.indd 18 2008/05/27 16:10:14 2008/05/27 16:10:14...

### [Page 19: Connection To An External Tuner](#)

Code, which provides guidelines for proper grounding - in particular, specifying that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as possible. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 19 E9KGBUD\_D-KVR20KU\_EN.indd 19...

### [Page 20: Settings For The Video Input](#)

Select Video - L1 (Rear) Select Video Clock Video In PAUSE DivX S-Video In HDMI Reset All DUBBING REC MODE REPEAT TIMER SET SEARCH ZOOM Press [SETUP] to exit. SE-R0295 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 20 E9KGBUD\_D-KVR20KU\_EN.indd 20 2008/05/27 16:10:17 2008/05/27 16:10:17...

### [Page 21: Connection To A Tv](#)

DVD if you are not connecting DVD AUDIO OUT when you made either S-video or component video out connection. • Progressive signal will not be output from the VIDEO OUT or S-VIDEO OUT jack. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 21 E9KGBUD\_D-KVR20KU\_EN.indd 21 2008/05/27 16:10:18 2008/05/27 16:10:18...

### [Page 22: Connection To A Tv With An Hdmi™ Compatible Port](#)

Press [HDMI] 720 Progressive Press [HDMI] 1080 interlaced Press [HDMI] 1080 Progressive Press [HDMI] • The HDMI mode that is not supported by display device will be skipped. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 22 E9KGBUD\_D-KVR20KU\_EN.indd 22 2008/05/27 16:10:19 2008/05/27 16:10:19...

[Page 23](#) • If the connected equipment is not compatible with HDMI BITSTREAM, DTS sound will not be output. • When the power failure occurs, or when you unplug the unit, some problems in the HDMI setting might occur. Please check and set the HDMI setting again. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 23 E9KGBUD\_D-KVR20KU\_EN.indd 23...

### [Page 24: Connection To An Audio System](#)

Multi-channel Surround System is developed by the DTS, Inc. • Playing back a DVD using incorrect settings may generate noise distortion and may also damage the speakers. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 24 E9KGBUD\_D-KVR20KU\_EN.indd 24...

## [Page 25: Initial Setting](#)

-- : - - - - PAUSE DUBBING REC MODE REPEAT TIMER SET SEARCH ZOOM Proceed to step 3 in "Clock Setting" on page 26. SE-R0295 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 25 E9KGBUD\_D-KVR20KU\_EN.indd 25 2008/05/27 16:10:20 2008/05/27 16:10:20...

## [Page 26: Setting The Clock](#)

• For setting the day, year, hour and minute, [the Number buttons] can also be used. • You can set the built-in calendar from the year 2007 up to 2057. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 26 E9KGBUD\_D-KVR20KU\_EN.indd 26 2008/05/27 16:10:21...

## [Page 27: Formatting A Disc](#)

"Setup" menu only. To reformat (change disc format type) a disc, refer to "Reformatting a Disc Manually" on page 28 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 27 E9KGBUD\_D-KVR20KU\_EN.indd 27 2008/06/09 13:06:55...

## [Page 28: Choosing The Recording Format Of A Brand-New](#)

100% • This unit may not be able to reformat a disc that is not previously formatted by this unit e.g. DVD disc formatted by PC or another recorder. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 28 E9KGBUD\_D-KVR20KU\_EN.indd 28 2008/06/09 13:06:56...

## [Page 29: Setting A Disc To Protect](#)

Disc Protect ON Delete All Playlists To release the protection for the disc, select "Disc Protect ON OFF" at step 3, then follow rest of the procedures. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 29 E9KGBUD\_D-KVR20KU\_EN.indd 29 2008/05/27 16:10:25 2008/05/27 16:10:25...

## [Page 30: Playing The Discs In Other Dvd Players](#)

Clock Aspect Ratio (Video mode) End of Timer Rec DivX Dubbing Mode HDMI Make Recording Compatible Reset All Your setting will be activated. Press [SETUP] to exit. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 30 E9KGBUD\_D-KVR20KU\_EN.indd 30 2008/05/27 16:10:26 2008/05/27 16:10:26...

## [Page 31: Finalizing A Disc](#)

PLAY Finalizing SKIP STOP STOP SKIP This operation may take PAUSE awhile to be completed. DUBBING REC MODE Finalizing is completed. REPEAT TIMER SET SEARCH ZOOM SE-R0295 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 31 E9KGBUD\_D-KVR20KU\_EN.indd 31 2008/05/27 16:10:27 2008/05/27 16:10:27...

[Page 32](#) To play back discs other than DVD+RW on other DVD players, you will need to finalize. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 32 E9KGBUD\_D-KVR20KU\_EN.indd 32 2008/05/27 16:10:29...

## [Page 33: Information On Dvd Recording](#)

TV screen. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 33 E9KGBUD\_D-KVR20KU\_EN.indd 33 2008/05/27 16:10:29...

## [Page 34: Settings For A Recording](#)

Prohibiting additional record to the disc that has a title list created by other units. 5) Press [SETUP] to exit. Note • This function is also available for unfinalized DVD+R. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 34 E9KGBUD\_D-KVR20KU\_EN.indd 34 2008/05/27 16:10:31 2008/05/27 16:10:31...

## [Page 35: Recording Audio Select \(Xp\)](#)

4:3. audio data. • When the recording mode is set at other than XP, the unit records "Dolby Digital" audio automatically even if you selected "PCM". Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 35 E9KGBUD\_D-KVR20KU\_EN.indd 35

2008/05/27 16:10:32 2008/05/27 16:10:32...

### [Page 36: Basic Recording & One-Touch Timer Recording](#)

Press [INPUT SELECT ] to select the appropriate external input position (L1/L2) to which your external tuner is connected. Then select the desired channel to record on the external tuner. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 36 E9KGBUD\_D-KVR20KU\_EN.indd 36 2008/05/27 16:10:33 2008/05/27 16:10:33...

[Page 37](#) • When one-touch timer recording is finished and the power is turned off, the unit will switch to the timer-standby mode automatically if a timer recording has been programmed. Press [TIMER SET] to cancel the timer-standby mode to use the unit continuously. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 37 E9KGBUD\_D-KVR20KU\_EN.indd 37...

### [Page 38: Timer Recording](#)

[TIMER SET] to resume the timer-standby mode. • In the timer-standby mode, you can turn on the power and use the component (VCR or DVD) which is not currently timer-programmed. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 38 E9KGBUD\_D-KVR20KU\_EN.indd 38...

[Page 39](#) "VCR" will appear if VCR on the front panel display JAN/02 12 : 00AM 1 : 00AM timer recording have been set. L1/L2 REC To Mode 1 : 00 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 39 E9KGBUD\_D-KVR20KU\_EN.indd 39 2008/05/27 16:10:38 2008/05/27 16:10:38...

[Page 40](#) • Press [TIMER PROG.] to check the timer recording in progress. When the timer recording is proceeding, that program will be highlighted in red. In this case, you cannot select any other program. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 40 E9KGBUD\_D-KVR20KU\_EN.indd 40 2008/05/27 16:10:39 2008/05/27 16:10:39...

### [Page 41: Hints For Timer Recording](#)

E40 in the PROG. A timer programming list. PROG. B actual PROG. A PROG. B recording The first 2 minutes (at the longest) will be cut off. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 41 E9KGBUD\_D-KVR20KU\_EN.indd 41 2008/05/27 16:10:39 2008/05/27 16:10:39...

### [Page 42: Satellite Link](#)

"Recording" on page 99 for VCR. INSTANT 1.3x/0.8x TIME SLIP SKIP PLAY PLAY SKIP STOP STOP SKIP PAUSE DUBBING REC MODE REPEAT TIMER SET TIMER SET SEARCH ZOOM SE-R0295 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 42 E9KGBUD\_D-KVR20KU\_EN.indd 42 2008/05/27 16:10:40 2008/05/27 16:10:40...

[Page 43](#) The first 2 minutes (at the longest) will be cut off. The first 2 minutes (at the longest) will be cut off. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 43 E9KGBUD\_D-KVR20KU\_EN.indd 43 2008/05/27 16:10:41 2008/05/27 16:10:41...

### [Page 44: Settings For An External Device](#)

Supplied cables used in this connection are as follows: • RCA audio cable (L/R) x 1 • RCA video cable x 1 Please purchase the rest of the necessary cables at your local store. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 44 E9KGBUD\_D-KVR20KU\_EN.indd 44 2008/05/27 16:10:42...

### [Page 45: Recording From An External Device](#)

Start playback on the external device to record from. Press [C STOP] / [A EJECT / C STOP] on the unit to stop recording. This operation may take awhile to be completed. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 45 E9KGBUD\_D-KVR20KU\_EN.indd 45 2008/05/27 16:10:42 2008/05/27 16:10:42...

## [Page 46: Dv Dubbing](#)

• When the unit is in dubbing, "Pause Rec" will appear. 5. Channel position • When you select "DV" by using [INPUT SELECT ], "DV" will appear. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 46 E9KGBUD\_D-KVR20KU\_EN.indd 46 2008/05/27 16:10:44 2008/05/27 16:10:44...

## [Page 47: Dvc To Dvd Dubbing](#)

• Insert a recordable disc and make sure your DVC is in press [ENTER]. video mode. Then press [STOP C]. Use [INPUT SELECT ] to select "DV". AB-1234 0:00:00 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 47 E9KGBUD\_D-KVR20KU\_EN.indd 47 2008/05/27 16:10:46 2008/05/27 16:10:46...

## [Page 48: Dvc To Vcr Dubbing](#)

• A DV terminal is a terminal that can use the transmission mode conforming to the IEEE 1394 standards called "Fire Wire". It serves as the interface that connects the PC and peripheral device such as "i.Link" (registered trademark of SONY). It enables digital dubbing between DV devices with little degradation. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 48 E9KGBUD\_D-KVR20KU\_EN.indd 48...

## [Page 49: Dvd/Vcr Dubbing](#)

ENTER CLEAR RETURN INSTANT 1.3x/0.8x TIME SLIP SKIP PLAY PLAY PLAY SKIP STOP STOP SKIP PAUSE PAUSE DUBBING DUBBING REC MODE REPEAT TIMER SET SEARCH ZOOM SE-R0295 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 49 E9KGBUD\_D-KVR20KU\_EN.indd 49 2008/05/27 16:10:49 2008/05/27 16:10:49...

[Page 50](#) • This unit will automatically stop the duplication if playback with no image is for more than 3 minutes during VCR to DVD duplication. • Dubbing indicator will appear on the front panel display during dubbing. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 50 E9KGBUD\_D-KVR20KU\_EN.indd 50...

## [Page 51: Information On Playback](#)

"track number", "folder number" or "file number" respectively. Some discs may not have these numbers. MP3/WMA/JPEG/DivX® folder 1 folder 2 file 1 file 2 file 3 file 4 file 5 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 51 E9KGBUD\_D-KVR20KU\_EN.indd 51 2008/05/27 16:10:51 2008/05/27 16:10:51...

## [Page 52: Basic Playback](#)

Press [STOP C] once to stop playback temporarily. REPEAT TIMER SET SEARCH ZOOM • Refer to "Resume Playback" on page 58. SE-R0295 Note • Some discs may start playback automatically. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 52 E9KGBUD\_D-KVR20KU\_EN.indd 52 2008/05/27 16:10:52 2008/05/27 16:10:52...

## [Page 53: Playback From The Title List](#)

To eject the disc, press [OPEN/CLOSE A] to previous page. open the disc tray, then remove the disc before turning off the unit. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 53 E9KGBUD\_D-KVR20KU\_EN.indd 53 2008/05/27 16:10:53 2008/05/27 16:10:53...

## [Page 54: Playing Back An Audio Cd And A Cd-Rw/-R With Mp3/Wma/Jpeg Files](#)

4 MP3 file2 You must obtain any required permission from 5 WMA file1 copyright owners to download or use copyrighted 6 WMA file2 content. Toshiba cannot and does not grant such 1/ 2 permission. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 54 E9KGBUD\_D-KVR20KU\_EN.indd 54...

## [Page 55: Playing Back A Divx](#)

DivX® with the subtitle starts playback. The subtitle cannot be displayed when the setting is "OFF". • If there is more than one extension, the extension selection appears in the subtitle list. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 55 E9KGBUD\_D-KVR20KU\_EN.indd 55 2008/05/27 16:10:57...

[Page 56](#) - The subtitles that exceeds the playback time of the resolution which this unit does not support, the DivX® file will not be displayed. playback will be stopped and error message will appear. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 56 E9KGBUD\_D-KVR20KU\_EN.indd 56 2008/05/27 16:10:59...

### [Page 57: Using The Title/Disc Menu](#)

"Playback" menu if pictures in the pause mode are accompanying the disc for details. blurred. (Refer to page 90.) • [DISC MENU] or [TOP MENU] will not always be effective for all DVDs. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 57 E9KGBUD\_D-KVR20KU\_EN.indd 57 2008/05/27 16:11:00 2008/05/27 16:11:00...

### [Page 58: Special Playback](#)

2) Press [PLAY B] to return to the normal playback. Note • Forward/reverse speed will be indicated with icons as follows. forward (approx. speed) 20x: 40x: reverse (approx. speed) 20x: 40x: Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 58 E9KGBUD\_D-KVR20KU\_EN.indd 58 2008/05/27 16:11:00 2008/05/27 16:11:00...

### [Page 59: Rapid Playback](#)

3) Press [PLAY B] to return to the normal playback. Note • Only step by step forward playback is available for playing back DivX® files. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 59 E9KGBUD\_D-KVR20KU\_EN.indd 59 2008/05/27 16:11:03 2008/05/27 16:11:03...

### [Page 60: Zoom](#)

• To cancel the zoom function, select "x1.0" using [K / L], then press [ENTER] at step 3. • You cannot slide the zoomed picture on some JPEG files. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 60 E9KGBUD\_D-KVR20KU\_EN.indd 60 2008/05/27 16:11:05...

### [Page 61: Chasing Playback During Recording](#)

DVD-RW in VR mode, with the Resume ON 1:01 recording mode LP, EP or SLP. To stop recording, press [STOP C] again. To cancel the resume, press [STOP C] again. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 61 E9KGBUD\_D-KVR20KU\_EN.indd 61 2008/05/27 16:11:08 2008/05/27 16:11:08...

### [Page 62: Simultaneous Playback And Recording](#)

(refer to "Hints for Timer Recording" on page 41). playback reaches the scene recorded 1 minute before, the forwarding playback will automatically return to the normal playback. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 62 E9KGBUD\_D-KVR20KU\_EN.indd 62 2008/05/27 16:11:08 2008/05/27 16:11:08...

### [Page 63: Search](#)

(title/chapter/time) are shown as a denominator. 1/ 5 1/ 5 0:01:00 / 1:23:45 DVD Video total number total time of titles of the title total number of chapters Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 63 E9KGBUD\_D-KVR20KU\_EN.indd 63 2008/05/27 16:11:09 2008/05/27 16:11:09...

### [Page 64: Time Search](#)

[ENTER]. After the search, playback will start automatically. Note • Time search is available only in the same track, file or title. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 64 E9KGBUD\_D-KVR20KU\_EN.indd 64 2008/05/27 16:11:11 2008/05/27 16:11:11...

### [Page 65: Slide Show](#)

CD 1/ 5 0:00:15 / 0:05:00 Random Note • To cancel random playback, press [STOP C] twice during random playback. "OFF" appears on the display menu. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 65 E9KGBUD\_D-KVR20KU\_EN.indd 65 2008/05/27 16:11:12 2008/05/27 16:11:12...

## [Page 66: Program Playback](#)

• To cancel program playback, press [STOP C] twice during program playback. "OFF" appears on the TV screen. • You may also select a desired track using [the Number buttons] at step 4. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 66 E9KGBUD\_D-KVR20KU\_EN.indd 66 2008/05/27 16:11:13 2008/05/27 16:11:13...

## [Page 67: Selecting The Format Of Audio And Video](#)

Note • Some discs will only allow you to change the soundtrack from the disc menu. Press [DISC MENU] or [TOP MENU] to display the disc menu. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 67 E9KGBUD\_D-KVR20KU\_EN.indd 67 2008/05/27 16:11:14 2008/05/27 16:11:14...

## [Page 68: Switching Virtual Surround System](#)

EP or SLP, select "Type 1" or "Type 2". ("Type 2" is more effective.) When playing back discs with a few noises such as DVD-video, select "OFF". Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 68 E9KGBUD\_D-KVR20KU\_EN.indd 68 2008/05/27 16:11:15 2008/05/27 16:11:15...

## [Page 69: Adjusting Black Level](#)

• You can adjust black level setting only during playback. • The setting will be kept even when the unit is turned off. • The default setting is "ON". Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 69 E9KGBUD\_D-KVR20KU\_EN.indd 69 2008/05/27 16:11:18 2008/05/27 16:11:18...

## [Page 70: Information On Disc Editing](#)

10. Preview window: Preview of the selected title is displayed here. 11. Playback status: Indicating the current playback status of the selected title. Press [RETURN] to exit the title list. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 70 E9KGBUD\_D-KVR20KU\_EN.indd 70 2008/05/27 16:11:19 2008/05/27 16:11:19...

## [Page 71: Deleting Titles](#)

Title List Title List JAN/21/08 7:00AM L1 SLP EMPTY TITLE 7:00AM (2:00:00) JAN/21/08 1 D elete the title No.5 Empty Empty Empty 1 / 1 1 / 1 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 71 E9KGBUD\_D-KVR20KU\_EN.indd 71 2008/05/27 16:11:20 2008/05/27 16:11:20...

[Page 72](#) Title will be deleted. Press [RETURN] or [STOP C] to exit. Data will be written onto the disc momentarily. Writing to Disc This operation may take awhile to be completed. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 72 E9KGBUD\_D-KVR20KU\_EN.indd 72 2008/05/27 16:11:20 2008/05/27 16:11:20...

## [Page 73: Creating/Deleting Playlist](#)

• To delete all titles in the playlist, refer to "Erasing All Playlist" on page 74. • When a playlist contains 99 titles or more, or 999 chapters or more, "Add to Playlist" cannot be selected. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 73 E9KGBUD\_D-KVR20KU\_EN.indd 73 2008/05/27 16:11:22 2008/05/27 16:11:22...

## [Page 74: Erasing All Playlist](#)

Data will be written onto the disc momentarily. This operation may take awhile to be completed. Note • Deleting a playlist will not increase the available recording time on the disc. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 74 E9KGBUD\_D-KVR20KU\_EN.indd 74 2008/05/27 16:11:24 2008/05/27 16:11:24...

## [Page 75: Editing Discs](#)

[ENTER]. Title List JAN/ 1/08 12:00AM L1 LP 12:00AM (2:00:00) JAN/ 1/08 L1 LP Play From Start Edit Title Delete Add To Playlist 1 / 2 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 75 E9KGBUD\_D-KVR20KU\_EN.indd 75 2008/05/27 16:11:25 2008/05/27 16:11:25...

[Page 76](#) • You can enter up to 30 letters. Note • Undefined letters in a title name are shown by "\*". If you delete them, adjoining letters may change to "\*" or other. Downloaded From Disc-



### [Page 77: Setting Chapter Marks](#)

Data will be written onto the disc momentarily. able to add according to recorded time and number of chapters. This operation may take awhile to be completed. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 77 E9KGBUD\_D-KVR20KU\_EN.indd 77 2008/05/27 16:11:28 2008/05/27 16:11:28...

### [Page 78: Hiding Chapters](#)

Then use [K / L] to select "Visible", then press [ENTER] 1 / 1 at the step 6 above. Data will be written onto the disc momentarily. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 78 E9KGBUD\_D-KVR20KU\_EN.indd 78 2008/05/27 16:11:30 2008/05/27 16:11:30...

### [Page 79: Deleting A Part Of A Title](#)

"Scene Delete" before the number of chapter marks reaches 999.) • The recordable disc space will not increase even after deleting a part of a title on the playlist. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 79 E9KGBUD\_D-KVR20KU\_EN.indd 79 2008/05/27 16:11:32...

[Page 80](#) You can check the preview by pressing [ENTER]. awhile to be completed. • Before and after 5 seconds of the deleted point will be playback for preview. start point end point Before editing Edited Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 80 E9KGBUD\_D-KVR20KU\_EN.indd 80 2008/05/27 16:11:33 2008/05/27 16:11:33...

### [Page 81: Dividing A Title](#)

99 (-RW) or 49 (+RW), and the number of recording chapters reaches the maximum of 999 (-RW) or 254 (+RW). Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 81 E9KGBUD\_D-KVR20KU\_EN.indd 81 2008/05/27 16:11:34 2008/05/27 16:11:34...

### [Page 82: Combining Titles](#)

Data will be written onto the disc momentarily. • If either one of the two original titles is deleted, the This operation may take combined new title is also deleted. awhile to be completed. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 82 E9KGBUD\_D-KVR20KU\_EN.indd 82 2008/05/27 16:11:36 2008/05/27 16:11:36...

### [Page 83: Setting Or Releasing The Title Protection](#)

(VR mode DVD-RW, DVD+RW/+R only): Select "Disc Protect OFF ON" from the DVD Menu, then select "Yes". Refer to "SETTING A DISC TO PROTECT" on page 29. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 83 E9KGBUD\_D-KVR20KU\_EN.indd 83 2008/05/27 16:11:37 2008/05/27 16:11:37...

### [Page 84: Setting Or Clearing All Chapter Marks At Once](#)

• Maximum number of chapter for video mode DVD is 99 chapters per title. • The interval for auto chapter may be up to two minutes different from the time option you set. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 84 E9KGBUD\_D-KVR20KU\_EN.indd 84 2008/06/09 13:06:58...

### [Page 85: List Of The Default Settings](#)

TV-G TV-Y7 TV-Y Canadian French Rating 18 ans+ Set the viewing limitation according to Canadian → page 92 16 ans+ French language ratings. 13 ans+ 8 ans+ Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 85 E9KGBUD\_D-KVR20KU\_EN.indd 85 2008/05/27 16:11:40 2008/05/27 16:11:40...

[Page 86](#) → page 98 Note • Your change to each setting stays on even when the power is off. • An item which is not currently available is grayed in the settings. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 86 E9KGBUD\_D-KVR20KU\_EN.indd 86 2008/05/28 16:57:09...

## [Page 87: General Setting](#)

Refer 1 to 7 on pages 88 to 90 and REPEAT TIMER SET SEARCH ZOOM set the selected item. SE-R0295 When you finish with the setting, press [SETUP] to exit. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 87 E9KGBUD\_D-KVR20KU\_EN.indd 87 2008/05/27 16:11:40 2008/05/27 16:11:40...

[Page 88](#) [OPEN/CLOSE A] to activate the using [the Number buttons] in password input parental lock level. window. Password will be cleared and parental levels will be set to "OFF". Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 88 E9KGBUD\_D-KVR20KU\_EN.indd 88 2008/05/27 16:11:41 2008/05/27 16:11:41...

[Page 89](#) 96kHz PCM, select "96kHz". 96kHz sound will be output. Note When playing back disc with copyright protection • Even if you select "96kHz", the sound will be down sampled at 48kHz. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 89 E9KGBUD\_D-KVR20KU\_EN.indd 89 2008/05/27 16:11:42 2008/05/27 16:11:42...

[Page 90](#) , press 4-digit code using [the Number buttons]. Code Input • When you finish entering the code, press [ENTER]. Refer to the language code table on page 106. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 90 E9KGBUD\_D-KVR20KU\_EN.indd 90 2008/05/27 16:11:43 2008/05/27 16:11:43...

## [Page 91: Display](#)

[ENTER]. Use [K / L] to select a desired item, then press [ENTER]. OSD Language Screen Saver FL Dimmer V-Chip Submenu will appear. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 91 E9KGBUD\_D-KVR20KU\_EN.indd 91 2008/05/27 16:11:43 2008/05/27 16:11:43...

[Page 92](#) 16 ans+ Unsuitable for ages under 16 13 ans+ Unsuitable for ages under 13 8 ans+ Unsuitable for ages under 8 General audience lower Exempt program Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 92 E9KGBUD\_D-KVR20KU\_EN.indd 92 2008/05/27 16:11:45 2008/05/27 16:11:45...

## [Page 93: Ver.2](#)

Coarse Language Suggestive Dialogue TV-PG, TV-14 Note • Changing the main rating to block or view automatically changes all its sub ratings to the same (block or view). Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 93 E9KGBUD\_D-KVR20KU\_EN.indd 93 2008/05/27 16:11:45 2008/05/27 16:11:45...

## [Page 94: Video](#)

When you finish with the setting, height picture with both sides trimmed when playing back wide-screen picture. press [SETUP] to exit. If you have a widescreen TV: Select "16:9 Wide". Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 94 E9KGBUD\_D-KVR20KU\_EN.indd 94 2008/05/27 16:11:46 2008/05/27 16:11:46...

## [Page 95: Divx](#)

Reset All Italian Playback Swedish Display Video Recording Clock DivX HDMI Your setting will be activated. Reset All When you finish with the setting, press [SETUP] to exit. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 95 E9KGBUD\_D-KVR20KU\_EN.indd 95 2008/05/27 16:11:47 2008/05/27 16:11:47...

## [Page 96: Hdmi](#)

Y/Cb/Cr, HDMI signal is output as RGB regardless of the setting. General Setting Playback Display Format Video HDMI Audio Format Recording RGB Range Clock HDMI CEC YCbCr DivX HDMI Reset All Your setting will be activated. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 96 E9KGBUD\_D-KVR20KU\_EN.indd 96 2008/05/27 16:11:48 2008/05/27 16:11:48...

## [Page 97: Ver.2](#)

General Setting Playback Display Format Video HDMI Audio RGB Range Recording RGB Range Normal Clock HDMI CEC Enhanced DivX HDMI Reset All Your setting will be activated. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 97



E9KGBUD\_D-KVR20KU\_EN.indd 97 2008/05/27 16:11:49 2008/05/27 16:11:49...

### [Page 98: Reset All](#)

- Clock setting - OSD language setting - Parental lock setting - DivX® VOD code - V-Chip setting  
- Timer programs Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 98 E9KGBUD\_D-KVR20KU\_EN.indd 98 2008/05/27 16:11:49 2008/05/27 16:11:49...

### [Page 99: Vcr Functions](#)

To prevent accidental recording on a recorded cassette tape, remove its erase- protection tab. To record on it later, cover erase-protection tab the hole with cellophane tape. Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 99 E9KGBUD\_D-KVR20KU\_EN.indd 99 2008/05/27 16:11:50 2008/05/27 16:11:50...

### [Page 100: One-Touch Timer Recording \(Otr\)](#)

Press [TIMER SET] to cancel the standby mode for using the unit continuously. 100 EN 100 EN Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 100 E9KGBUD\_D-KVR20KU\_EN.indd 100 2008/05/27 16:11:51 2008/05/27 16:11:51...

### [Page 101: Time Search](#)

• Still/slow mode will stop after 5 minutes to prevent damage to the cassette tape and the video head. • To return to playback from the picture search/still/ slow mode, press [PLAY B]. EN 101 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 101 E9KGBUD\_D-KVR20KU\_EN.indd 101 2008/05/27 16:11:51 2008/05/27 16:11:51...

### [Page 102: Troubleshooting](#)

The unit does not operate properly. • When static electricity, etc., causes the unit to operate abnormally, unplug the unit and then plug it in again. 102 EN 102 EN Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 102 E9KGBUD\_D-KVR20KU\_EN.indd 102 2008/05/27 16:11:52 2008/05/27 16:11:52...

[Page 103](#) • The title does not have the multilingual audio tracks. cannot be changed. • The DVD-video prohibits the changing of the language for the sound track. EN 103 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 103 E9KGBUD\_D-KVR20KU\_EN.indd 103 2008/05/27 16:11:52 2008/05/27 16:11:52...

[Page 104](#) • The motor may rotate for the duration of approximately 5 minutes for efficient operation. This is not a malfunction. playback / recording is stopped. 104 EN 104 EN Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 104 E9KGBUD\_D-KVR20KU\_EN.indd 104 2008/05/27 16:11:52 2008/05/27 16:11:52...

### [Page 105: Frequently Asked Questions](#)

- Can I program a timer recording with cable/satellite box? Yes, you can. Select "L1" or "L2" as your recording channel, and leave the cable/satellite box on (pages 20, 38-41). EN 105 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 105 E9KGBUD\_D-KVR20KU\_EN.indd 105 2008/05/27 16:11:53...

### [Page 106: Language Code](#)

6258 Yiddish 5655 Gujarati 5367 Portuguese 6266 Yoruba 7161 Hausa 5447 Quechua 6367 Zulu 7267 Hebrew 5569 Rhaeto-Romance 6459 Hindi 5455 Romanian 6461 106 EN 106 EN Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 106 E9KGBUD\_D-KVR20KU\_EN.indd 106 2008/05/27 16:11:53 2008/05/27 16:11:53...

### [Page 107: Glossary](#)

DVD players. Finalization files on CD-RW/-R from the computer and play back the is recommended before playing them back on other unit. files on this unit. EN 107 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 107 E9KGBUD\_D-KVR20KU\_EN.indd 107 2008/05/27 16:11:53 2008/05/27 16:11:53...

### [Page 108: Specifications](#)

Digital audio output Output 1 (rear) COAXIAL Output level 500 mVp-p (75Ω) Jack RCA jack DV input IEEE 1394 Jack DV input jack (4 pin) 108 EN 108 EN Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 108 E9KGBUD\_D-KVR20KU\_EN.indd 108 2008/05/27 16:11:53 2008/05/27 16:11:53...

### [Page 109: Limited Warranty](#)

Digital Audio Video ("DAV") Product - Exchange Warranty Toshiba America Consumer Products, L.L.C. ("TACP") makes the following limited warranties to original consumers in the United States. THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY PERSON RECEIVING THIS DAV PRODUCT AS A GIFT FROM THE ORIGINAL CONSUMER PURCHASER AND TO NO OTHER PURCHASER OR TRANSFEREE.

[Page 110](#) LIMITED WARRANTY 110 EN 110 EN Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 110 E9KGBUD\_D-KVR20KU\_EN.indd 110 2008/05/27 16:11:54 2008/05/27 16:11:54...

[Page 111](#) LIMITED WARRANTY EN 111 Downloaded From Disc-Player.com Toshiba Manuals E9KGBUD\_D-KVR20KU\_EN.indd 111 E9KGBUD\_D-KVR20KU\_EN.indd 111 2008/05/27 16:11:57 2008/05/27 16:11:57...