 


Exploded Views And Parts List - Toshiba RAS-10SAVP-E Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118



•

-

Troubleshooting

•

Bookmarks



Toshiba ilmalämpöpumppujen myynti, huolto ja asennus: Jäähdytinpalvelu RefGroup Oy, Vantaa

13-1. Indoor Unit

RAS-B10SKVP-E, RAS-B13SKVP-E, RAS-B16SKVP-E

241

216 213



237

205

247

202

* The parts in the following parts list are conformed to RoHS.
Therefore be sure to use the following parts for repairing and replacing.

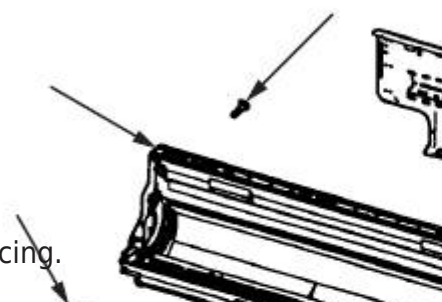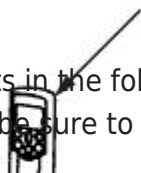

Location

Part

No.

No.

201

43005709

Panel Ass'y, Front

202

43009694

Grille, Air Inlet

204

43080512

Filter, Air, Right

205

43080521

Filter, Air, Left

206

43009693

Louver, Horizontal

209

4302C067

Motor, Fan, DC

210

4302D003

Motor, Louver

211

4306A024

Cord, Motor, Louver

212

43039363

Band, Motor, Left

213

43039321

Base, Bearing

214

43020346

Fan, Cross Flow

215

43039314

Band, Motor

216


43020253

Bearing

217

4301V028

Holder, Pipe

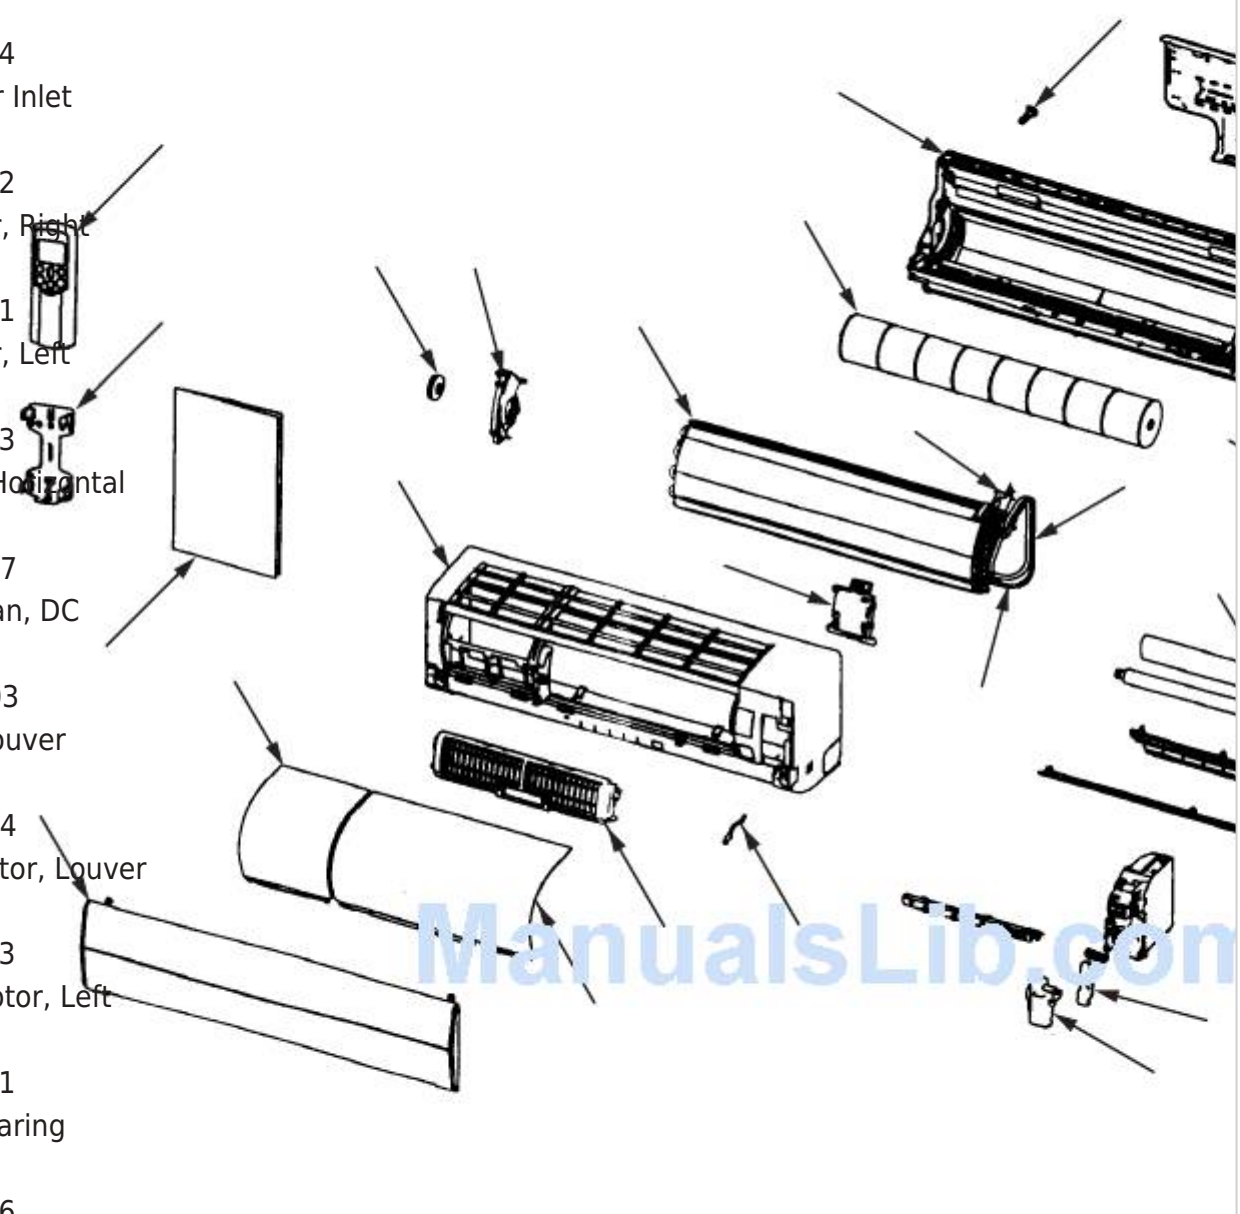

ManualsLib.com

215				
216				
217				

218

43049701

Pipe, Shield (B16SKVP-E)

219

43049698

Pipe, Shield

(B10SKVP-E, B13SKVP-E)

221

43047671

Pipe Ass'y, Connecting, Gas

(B10SKVP-E, B13SKVP-E)

222

43047672

Pipe Ass'y, Connecting, Gas

(B16SKVP-E)

13. EXPLODED VIEWS AND PARTS LIST

225, 226

201

246

245

204

Description

www.ilmalämpöpumput.com

240

238

214

230

218, 219

221, 222, 224

229

Location

Part

No.

No.

223

43049674

224


43047673

225

43044821


226

43044822

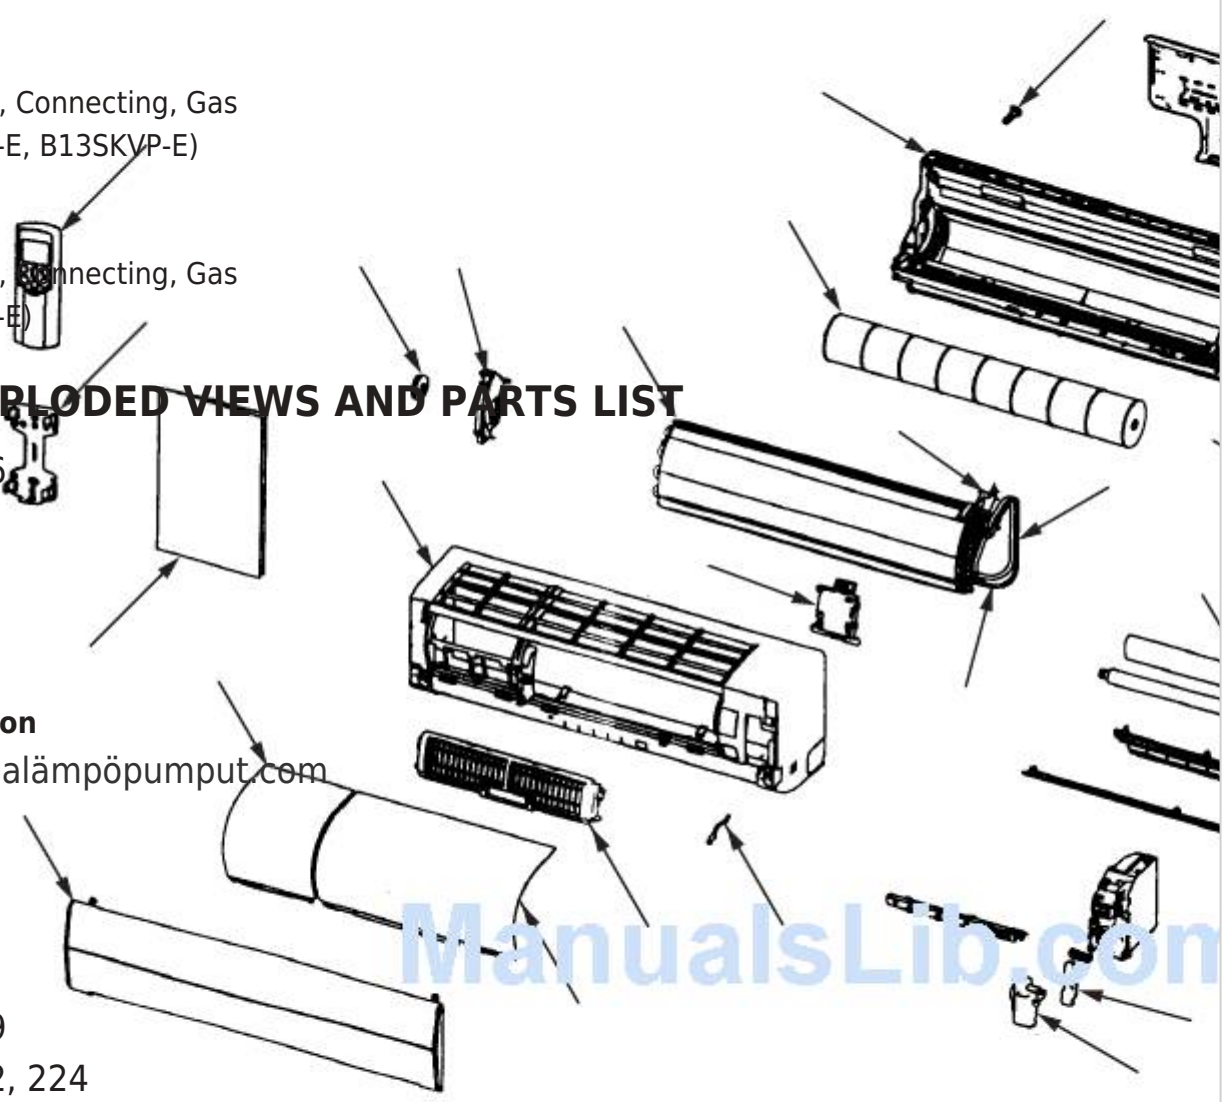

ManualsLib.com

227
 43039324
 229
 43019904
 230
 43049770
 232
 43062256
 233
 43062247
 234
 43082293
 237
 43083071
 238
 43003311
 239
 43070188
 240
 43079268
 241
 43066014
 245
 43080528
 246
 43080563
 247
 4308N971
 - 108 -


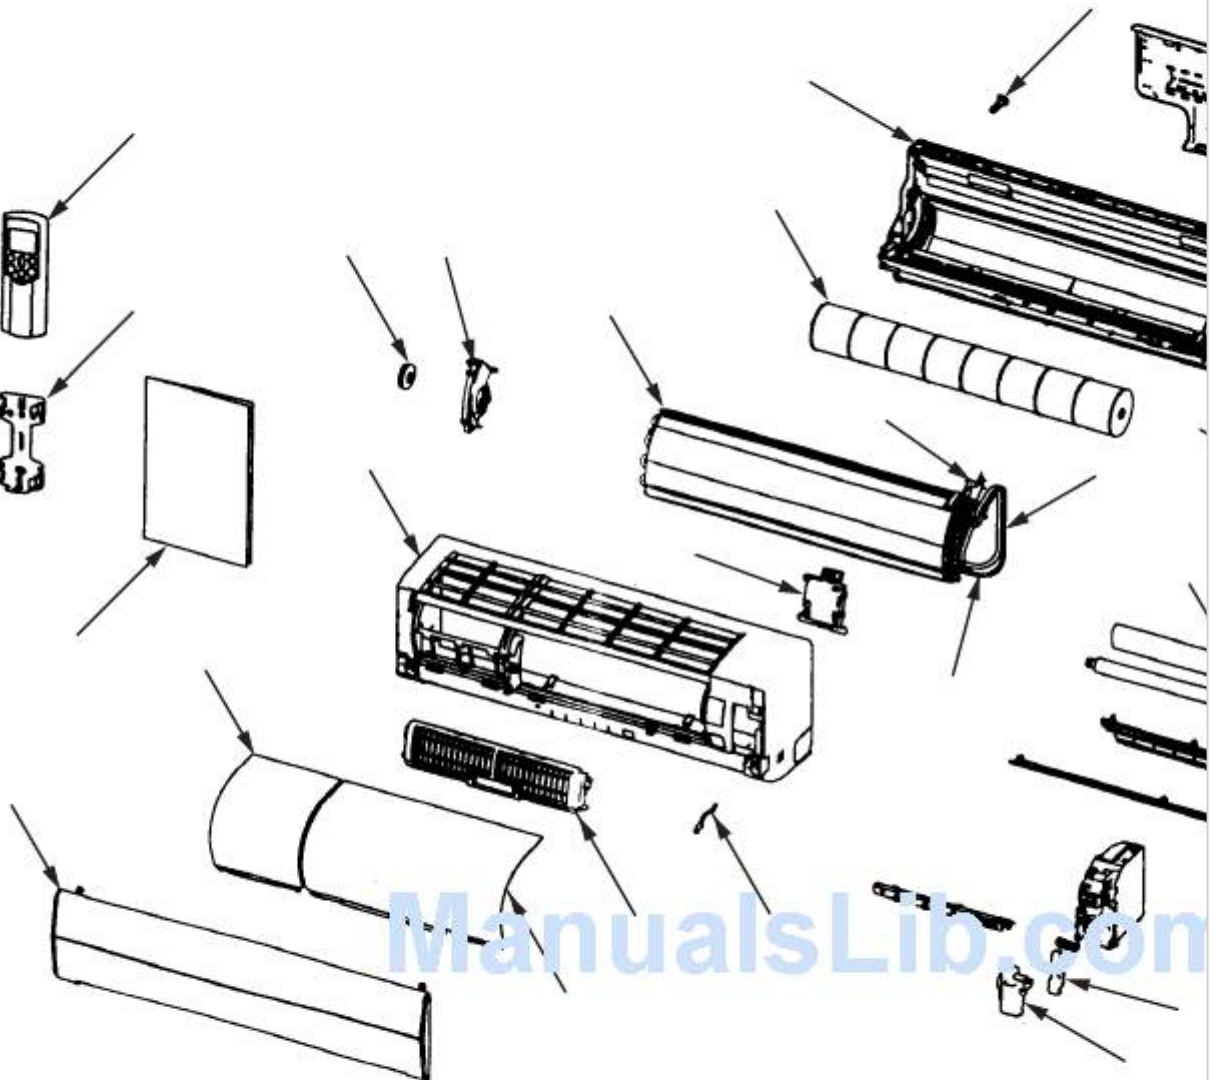


234
 217
 212
 223
 210
 239
 206
 233
 232

Description

Spring (B16SKVP-E)
 Pipe Ass'y, Connecting,
 Liquid
 Evaporator Ass'y
 (B10SKVP-E, B13SKVP-E)

Evaporator Ass'y
 (B16SKVP-E)
 Guide, Drain
 Holder, Sensor
 Holder, Evaporator, Right
 Cover, Terminal
 Cover, Lead
 Plate, Installation
 Holder, Remote Controller
 Body Ass'y, Back
 Hose, Drain
 Cap, Drain
 Remote Controller,
 WH-H04JE
 Plasma Pure Filter
 Generator Ass'y, HV
 Owner's Manual
 209
 215
 211
 227

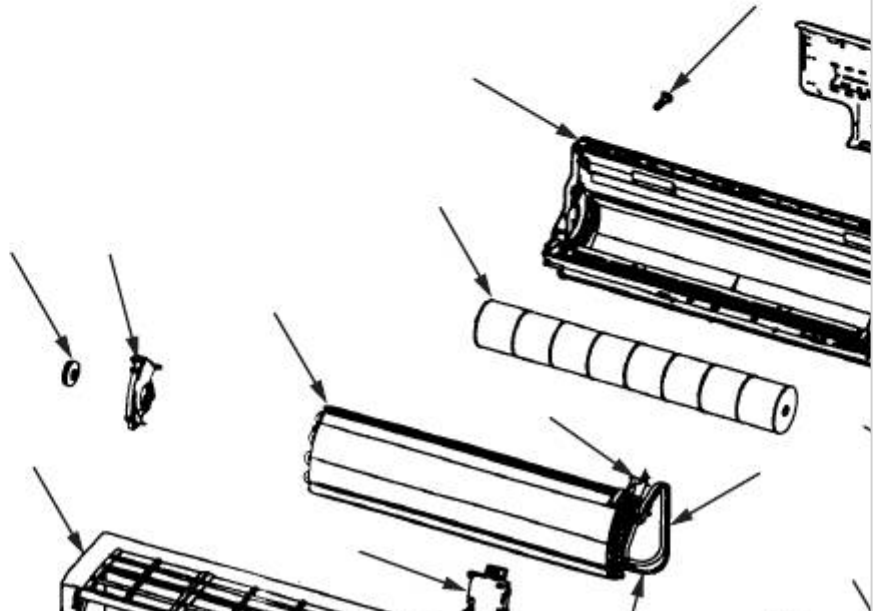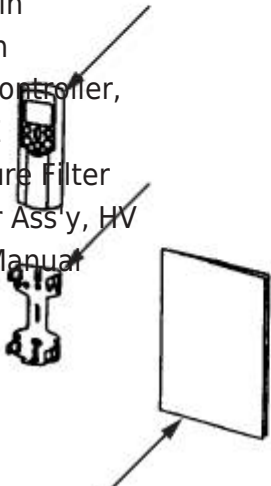

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

107

108

109

110

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

Related Manuals for Toshiba RAS-10SAVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-16SKV Series Owner's Manual](#)

(52 pages)

Related Content for Toshiba RAS-10SAVP-E

[RAS-2M10G3AVG-E Exploded Views And Parts List](#)

Toshiba RAS-2M10G3AVG-E

[RAS-5M34G3AVG-E Exploded Views And Parts List](#)

Toshiba RAS-5M34G3AVG-E

[MMU-UP0031YHP-ETR Exploded Views And Parts List](#)

Toshiba MMU-UP0031YHP-ETR

[RAV-GV1101AT8P-TR Exploded Views And Parts List](#)

Toshiba RAV-GV1101AT8P-TR

[Carrier MMU-UP0151YHP-UL Exploded Views And Parts List](#)

Toshiba Carrier MMU-UP0151YHP-UL

[Carrier TCB-IFDMR01UP-UL Exploded Views And Parts List](#)

Toshiba Carrier TCB-IFDMR01UP-UL

[RAV-GM562ATP-TR Exploded Views And Parts List](#)

Toshiba RAV-GM562ATP-TR

[MMD-UP0721HFP-UL Exploded Views And Price List Of Parts](#)

Toshiba MMD-UP0721HFP-UL

This manual is also suitable for:

[Ras-b10skvp-eRas-16savp-eRas-10skvp-ndRas-10savp-ndRas-13skvp-ndRas-13savp-nd](#) ... [Show all](#)