

Specifications Of Electrical Parts - Toshiba RAS-10SAVP-E Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118



-

-

Troubleshooting

•

Bookmarks



Toshiba ilmalämpöpumppujen myynti, huolto ja asennus: Jäähdytinpalvelu RefGroup Oy, Vantaa

6. SPECIFICATIONS OF ELECTRICAL PARTS

6-1. Indoor Unit

RAS-B10SKVP-E, RAS-B13SKVP-E, RAS-B16SKVP-E

RAS-10SKVP-ND, RAS-13SKVP-ND, RAS-16SKVP-ND

No.

Parts name

1			
Fan motor (for indoor)			
2			
Room temp. sensor (TA-sensor)			
3			

Heat exchanger temp. sensor (TC-sensor)

4

Heat exchanger temp. sensor (TCJ-sensor)

5

Louver motor

6-2. Outdoor Unit

RAS-10SAVP-E, RAS-13SAVP-E, RAS-16SAVP-E

RAS-10SAVP-ND, RAS-13SAVP-ND, RAS-16SAVP-ND

No.

Parts name

1				
Reactor				
2				
Outside fan motor				
3				
Suction temp. sensor (TS sensor)				
4				
Discharge temp. sensor (TD sensor)				
5				
Outside air temp. sensor (TO sensor)				
6				
Heat exchanger temp. sensor (TE sensor)				
7				

Terminal block (6P)

8

Compressor

9

Coil for P.M.V.

10

Coil for 4-way valve

11

Cord heater assembly (-ND model only)

12

Heater fuse assembly (-ND model only)

Type

MF-280-30-5R

(-)

(-)

(-)

MP24Z3N

Model name

CH-57

ICF-140-43-4R

(Inverter attached)

(Inverter attached)

(Inverter attached)

(Inverter attached)

DA111A1F-24F

CAM-MD12TF

STF

CSC-2

ManualsLib.com

Specifications

DC280-340V, 30W

10kΩ at 25°C

10kΩ at 25°C

10kΩ at 25°C

Output (Rated) 1W, 16 poles, DC12V

Rating

L = 10mH, 16A

DC140V, 43W

10kΩ (25°C)

62kΩ (20°C)

10kΩ (25°C)

10kΩ (25°C)

20A, AC250V

3-phases 4-poles 750W

DC12V

AC220-240V

AC230V, 75W

AC250V, 3,15A

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
19
20
21
22
23
24
25
26

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

Related Manuals for Toshiba RAS-10SAVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-16SKV Series Owner's Manual](#)

(52 pages)

Related Content for Toshiba RAS-10SAVP-E

[RAV-GV1101AT8P-TR Specifications Of Electrical Parts](#)

Toshiba RAV-GV1101AT8P-TR

[RAV-GM562ATP-TR Specifications Of Electrical Parts](#)

Toshiba RAV-GM562ATP-TR

[RAV-HM301SDTY-E Specifications Of Electrical Parts](#)

Toshiba RAV-HM301SDTY-E

[RAS-24J2KVG-UA Specifications Of Electrical Parts](#)

Toshiba RAS-24J2KVG-UA

[RAV-GV1101ATP-TR Specifications Of Electrical Parts](#)

Toshiba RAV-GV1101ATP-TR

[RAV-GM901CTP Series Specifications Of Electrical Parts](#)

Toshiba RAV-GM901CTP Series

[RAS-B07G3KVSG-E Specifications Of Electrical Parts](#)

Toshiba RAS-B07G3KVSG-E

[RAV-GM561ATP-NZ Specifications Of Electrical Parts](#)

Toshiba RAV-GM561ATP-NZ

This manual is also suitable for:

[Ras-b10skvp-eRas-16savp-eRas-10skvp-ndRas-10savp-ndRas-13skvp-ndRas-13savp-nd](#) ... [Show all](#)