

Louver Control; Louver Position; Air Direction Adjustment; Swing - Toshiba RAS-10SAVP-E Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118



-

-

Troubleshooting

•

Bookmarks



Toshiba ilmalämpöpumppujen myynti, huolto ja asennus: Jäähdytinpalvelu RefGroup Oy, Vantaa

Item

9. Louver control	
<p>This function controls the air direction of the indoor unit.</p> <p>1) Louver position</p> <ul style="list-style-type: none">• The position is automatically controlled according to the operation mode (COOL/HEAT).• The set louver position is stored in memory by the microcomputer, and the louver returns to the stored position when the next operation is performed. (Cooling/heating memory position) <p>The angle of the louver is indicated as the horizontal angle is 0°.</p> <p>When the louver closes fully, it directs approx. 28° upward.</p> <p>1) Louver position in cooling operation</p> <p>Cooling operation/AUTO (COOL)</p>	

Initial setting of "Cooling storage position"

Louver : Directs downward (23°)

2) Louver position in heating operation

Heating operation/

AUTO (HEAT)

Initial setting of

"Heating storage position"

"Heating storage position"

Louver :

Louver :

Directs downward (81°)

Directs downward (81°)

3) Louver position in dry operation

Dry operation

Initial setting of "Cooling storage position"

Louver : Directs downward (23°)

2) Air direction adjustment

Horizontal blowing



3) Swing

- Swing operation is performed in width 35° with the stop position as the center.

- If the stop position exceeds either upper or lower limit position, swing operation is performed in width 35° from the limit which the stop position exceeded.

Operation flow and applicable data, etc.

"Cooling storage position"

Louver : Directs downward (23°)

In case that the following temp. is obtained

Powerful

during 12 minutes or 12 to 25 minutes

from start of heating operation:

Room temp. (Ta) < Set temp. (Tsc) -3.0

"Heating storage position"

Louver : Directs downward (81°)

Only when the operation frequency is

COOL Min-Hz under condition of

Room temp. (Ta) < Set temp. (Tsc) +1.0

Louver : Directs downward (8°)

Air direction

Inclined

Blowing

blowing

downward

www.ilmalämpöpumput.com

Powerful

Louver : Directs downward (8°)

SLEEP MODE operation

Inclined

Horizontal

 
blowing

blowing

- 37 -

Description

ManualsLib.com



Horizontal
Louver angle
(0°)

SLEEP MODE operation

In case that the following temp. is obtained during 12 to 25 minutes from start of heating operation:
Room temp. (Ta) > Set temp. (Tsc) -3.0
-
or when 25 minutes or more passed from start of heating operation
"Cooling storage position"
Louver : Directs downward (23°)
• The louver position can be arbitrarily set up by pushing [FIX] button.
• Swing
When pushing [SWING] button during operation, the louver starts swinging.



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
34
35
36
37
38
39
40
41

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

Related Manuals for Toshiba RAS-10SAVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-16SKV Series Owner's Manual](#)

(52 pages)

Related Content for Toshiba RAS-10SAVP-E

[RAS-10S3AV-E Louver Control](#)

Toshiba RAS-10S3AV-E

[RAS-M05G3KVSG-E Louver Control](#)

Toshiba RAS-M05G3KVSG-E

[RAS-18S3KV-E Louver Control](#)

Toshiba RAS-18S3KV-E

[RAS-M07N4KVRG-E Louver Control](#)

Toshiba RAS-M07N4KVRG-E

[RAS-25G3KVSG-ND Louver Control](#)

Toshiba RAS-25G3KVSG-ND

[RAS-25E2KVG-ND Louver Control](#)

Toshiba RAS-25E2KVG-ND

[RAS-13S3KV-E Louver Control](#)

Toshiba RAS-13S3KV-E

[RAS-B05BKVG-E Louver Control](#)

Toshiba RAS-B05BKVG-E

This manual is also suitable for:

[Ras-b10skvp-eRas-16savp-eRas-10skvp-ndRas-10savp-ndRas-13skvp-ndRas-13savp-nd](#) ... [Show all](#)