

C Heat Operation (-Nd Model Only) - Toshiba RAS-10SAVP-E Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Toshiba ilmalämpöpumppujen myynti, huolto ja asennus: Jäähdytinpalvelu RefGroup Oy, Vantaa

Item

20. 8°C HEAT operation

Pushing the [8°C] button on the remote (-ND mode only)

controller starts HEAT operation with set temp. 8°C. The air conditioner is controlled according to the room temperature 8°C as a standard.

The room temperature may be a little off the room temperature 8°C due to the room size or installation condition of the unit.

During stop

Push [8°C] button.



OPERATION lamp
ON 8°C HEAT
operation starts
Push [8°C]

button.

NO

Do you stop 8°C
HEAT operation?

YES

Push
button

Operation stop

Contents of which setting can be changed during 8°C HEAT operation

Operation flow and applicable data, etc.

During operation

Push [8°C] button.

Shifts to [8°C]

HEAT operation.

NO

Do you stop 8°C
HEAT operation?

YES

Push
button

Operation stop

SWING (louver swing)

FIX (louver position)

FAN (fan speed)

PURE (pure operation)

www.ilmalämpöpumput.com

<Start>

During stop of air conditioner


• Pushing [8°C] button turns on the Operation lamp (Green) of the main unit is turned on and the HEAT operation of set temp. 8°C starts.

During operation of air conditioner

- Pushing [8°C] button shifts the operation to HEAT operation with set temp. 8°C.
- In case of COOL (including automatic cooling) or DRY operation, 8°C HEAT operation starts approx. 3 minutes after operation stop.

In case of HEAT operation, the operation shifts to 8°C HEAT operation as it is.

* If the timer operation has been set up before 8°C HEAT operation, the setup is released

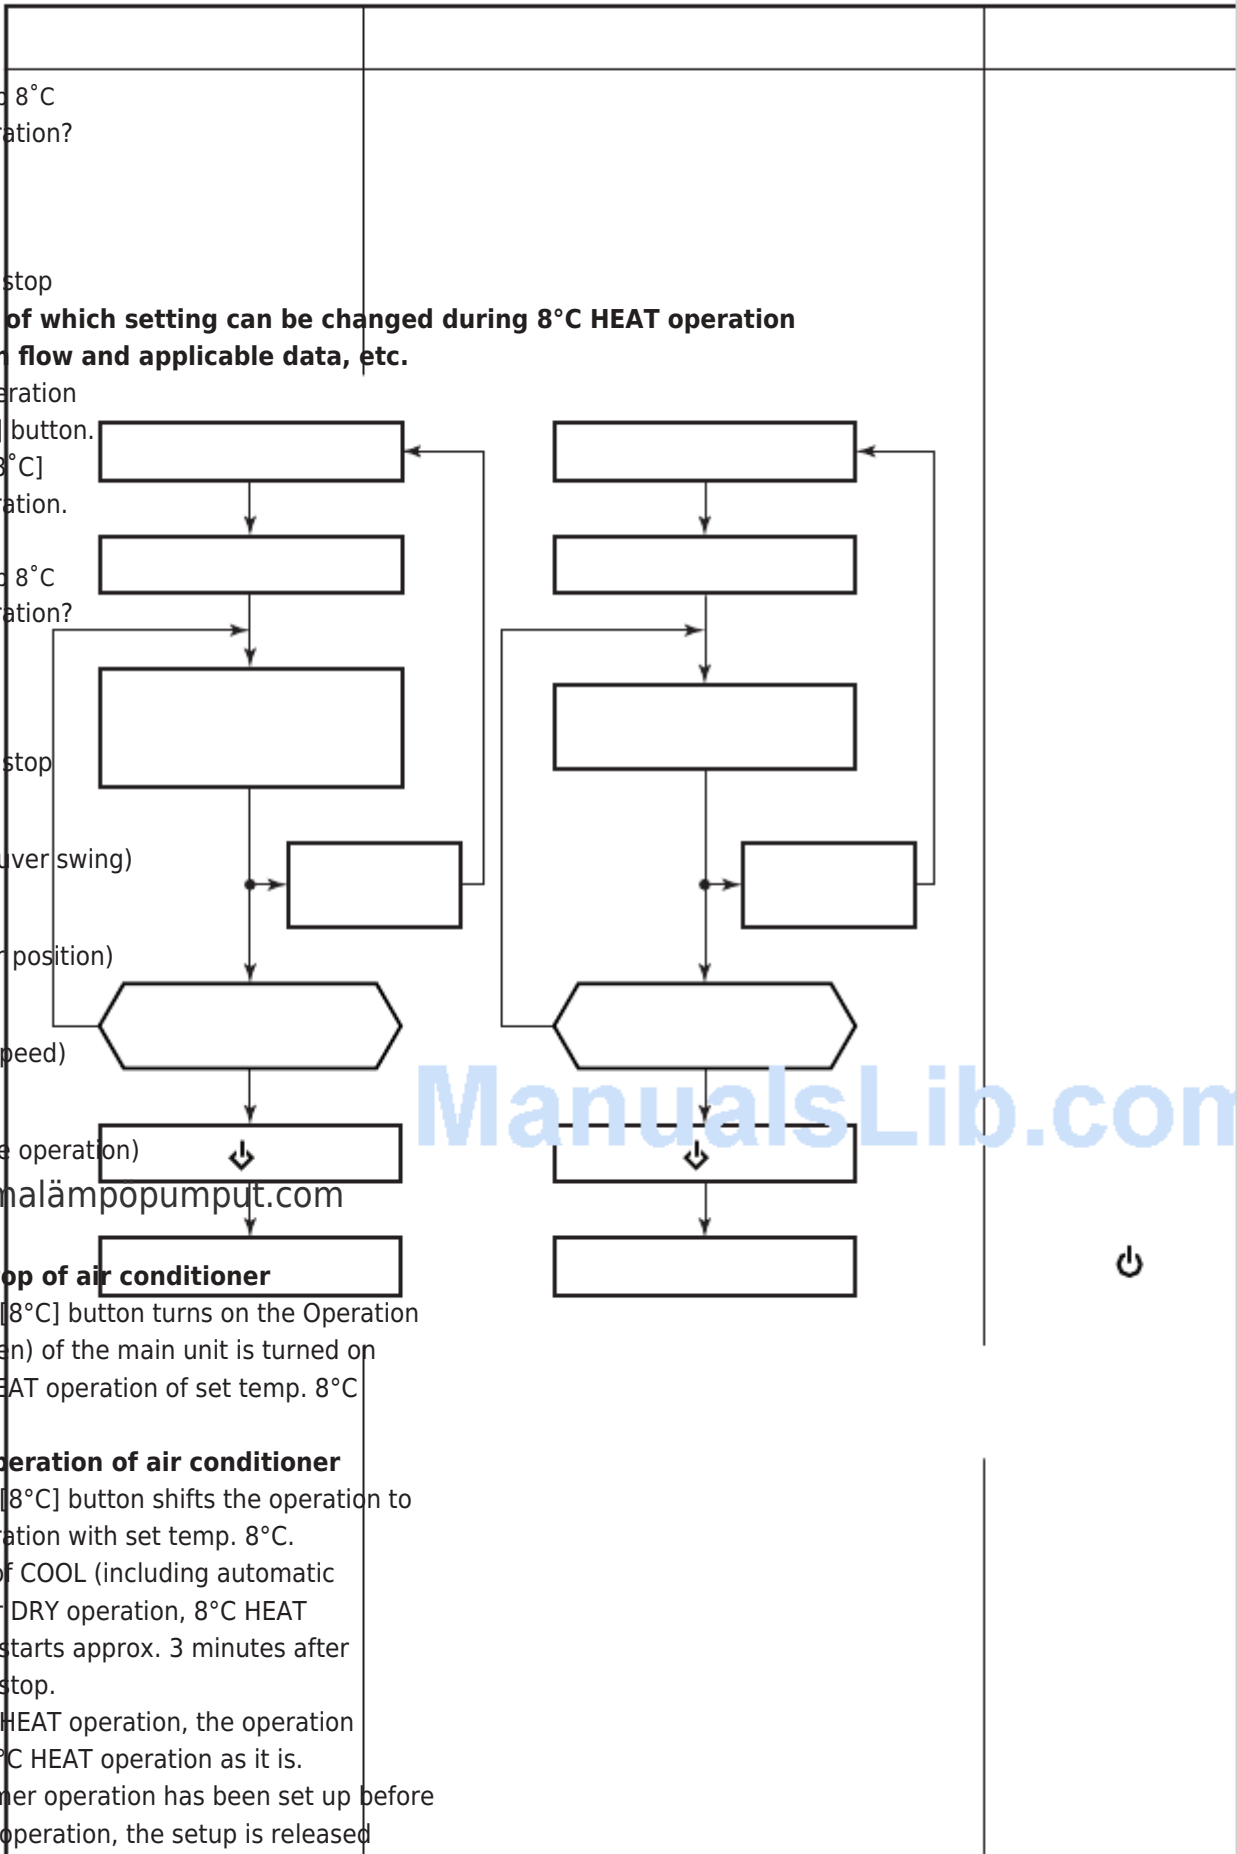

ManualsLib.com

when 8°C HEAT operation starts.

* When [8°C] button is pushed again during Push [8°C]

8°C HEAT operation, the status returns to button.

that before 8°C HEAT operation.

* When the operation shifts from 8°C HEAT operation to the normal HEAT operation, the cold draft preventive control works.

Therefore the hot air may blow out after approx. 5 minutes.


<Stop>

Pushing

- 47 -

Description

button stops the operation.

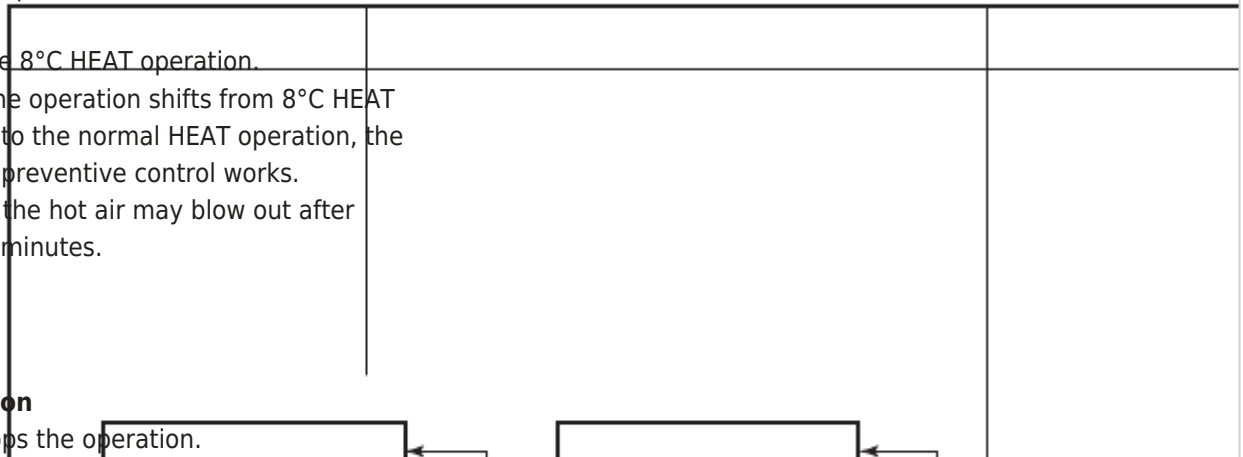

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
44
45
46
47
48
49
50
51

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

Related Manuals for Toshiba RAS-10SAVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-16SKV Series Owner's Manual](#)

(52 pages)

Related Content for Toshiba RAS-10SAVP-E

[RAS-M10PKVP-E In Heating Operation> \(Heat Pump Model\)](#)

Toshiba RAS-M10PKVP-E

[RAS-B10SKVP-E In Heating Operation> \(Heat Pump Model\)](#)

Toshiba RAS-B10SKVP-E

[RAS-4M23SAV-E In Heating Operation> \(Heat Pump Model\)](#)

Toshiba RAS-4M23SAV-E

[RAS-M10PKVP-E In Heating Operation> \(Heat Pump Model\)](#)

Toshiba RAS-M10PKVP-E

[RAS-M10PKVP-E In Heating Operation> \(Heat Pump Model\)](#)

Toshiba RAS-M10PKVP-E

[RAS-M16PKVP-E In Heating Operation> \(Heat Pump Model\)](#)

Toshiba RAS-M16PKVP-E

[RAS-M10SMUV-E In Heating Operation> \(Heat Pump Model\)](#)

Toshiba RAS-M10SMUV-E

[RAS-22BKV-A1 Defrost Control \(Only In Heating Operation\)](#)

Toshiba RAS-22BKV-A1

This manual is also suitable for:

[Ras-b10skvp-eRas-16savp-eRas-10skvp-ndRas-10savp-ndRas-13skvp-ndRas-13savp-nd](#) ... [Show all](#)