 


Specifications - Toshiba RAS-10SAVP- E Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118



•

-

Troubleshooting

•

Bookmarks



Toshiba ilmalämpöpumppujen myynti, huolto ja asennus: Jäähdytinpalvelu RefGroup Oy, Vantaa

2-1. Specifications

RAS-B10SKVP-E/RAS-B13SKVP-E/RAS-B16SKVP-E, RAS-10SAVP-E/RAS-13SAVP-E/RAS-16SAVP-E

Indoor

Unit model

Outdoor

Cooling capacity			
Cooling capacity range			
Heating capacity			
Heating capacity range			
Power supply			
Operation mode			
Running current			
Indoor			

Remote controller holder mounting screw
 Plasma pure filter
 Installation manual
 Owner's manual
 Drain nipple
 Outdoor
 unit
 Water-proof rubber cap

• The specifications may be subject to change without notice for purpose of improvement.

2. SPECIFICATIONS

RAS-B10SKVP-E

RAS-10SAVP-E

(kW)									
(kW)									
(kW)									
(kW)									
Cooling									
(A)									
0.15									
(W)									
30									
(%)									
87									
Cooling									
(A)									
2.57/2.45/2.34	3.15/3.00/2.87	4.00/3.82/3.66	4.40/4.20/4.02	6.18/5.90/5.65	6.83/6.43/6.25				
(W)									
460									
(%)									
82									
(A)									
3.30/3.15/3.02									
(Cooling/Heating)									
(Cooling/Heating) (dB•A)									
(Cooling/Heating) (dB•A)									
(Cooling/Heating) (dB•A)									
RAS-B10SKVP-E									
(mm)									
(mm)									
(mm)									
(kg)									
(W)									
(Cooling/Heating) (m ³ /h)									
RAS-10SAVP-E									
(mm)									
(mm)									
(mm)									
(kg)									
(W)									
DA111A1F-24F									
(W)									
(Cooling/Heating) (m ³ /h)									
Flare connection									
(m)									
(m)									
(m)									
(kg)									
(Cooling/Heating) (°C)									
2 (Ø3.1 × 16L)									
www.ilmalämpöpumput.com									
RAS-B13SKVP-E									
RAS-13SAVP-E									
2.5									
0.5-3.5									
0.6-4.5									
3.2									
0.6 - 6.1									

ManualsLib.com

0.6 - 6.9

1 Ph/50Hz/220-240 V, 1 Ph/60Hz/220 V

Heating

Cooling

0.15

0.15

30

30

87

87

Heating

Cooling

600

820

87

93

4.55/4.35/4.17

5.10/5.08

4.12/4.42

42/43

33/36

27/27

46/47

RAS-B13SKVP-E

250

790

208

9

30

550/620

570/640

RAS-13SAVP-E

550

780

290

38

750

Twin rotary type with DC-inverter variable speed control

DA111A1F-24F

43

1740/1620

1950/1620

Flare connection

Ø6.35

Ø6.35

Ø9.52

Ø9.52

Ø6.35

Ø6.35

Ø9.52

Ø9.52

25

15

10

R410A

R410A

1.05

3 Wires : includes earth (Outdoor)

4 Wires : includes earth

21-32/0-28

21-32/0-28

5-46/-15-24

5-46/-15-24

1

1

2

1

6 (Ø4 × 25L)

6 (Ø4 × 25L)

2 (Ø3.1 × 16L)

ManualsLib.com

[Previous Page](#)
[Next Page](#)

1
2
3
4
5
6
7
8
9

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

Related Manuals for Toshiba RAS-10SAVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-16SKV Series Owner's Manual](#)

(52 pages)

Related Content for Toshiba RAS-10SAVP-E

[MMD-UP0181HP-E Specifications](#)

Toshiba MMD-UP0181HP-E

[MMU-UP0091HP-E Specifications](#)

Toshiba MMU-UP0091HP-E

[MMU-UP0031YHP-E Specifications](#)

Toshiba MMU-UP0031YHP-E

[RAS-B13S4KVDG-E Specifications](#)

Toshiba RAS-B13S4KVDG-E

[RAV-HM561MUTP-E\(TR\) Specifications](#)

Toshiba RAV-HM561MUTP-E(TR)

[RAV-HM301MUTP-E Specifications](#)

Toshiba RAV-HM301MUTP-E

[RAV-GM561ATP-TR1 Specifications](#)

Toshiba RAV-GM561ATP-TR1
[MMD-UP0481HFP-E Specifications](#)
Toshiba MMD-UP0481HFP-E

This manual is also suitable for:

[Ras-b10skvp-eRas-16savp-eRas-10skvp-ndRas-10savp-ndRas-13skvp-ndRas-13savp-nd](#) ... [Show all](#)