

Auto Restart Function; How To Set The Auto Restart Function - Toshiba RAS-10SAVP-E Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118



-

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Toshiba ilmalämpöpumppujen myynti, huolto ja asennus: Jäähdytinpalvelu RefGroup Oy, Vantaa

9-3. Auto Restart Function

This indoor unit is equipped with an automatic restarting function which allows the unit to restart operating with

the set operating conditions in the event of a power supply being accidentally shut down.

The operation will resume without warning three minutes after power is restored.

This function is not set to work when shipped from the factory. Therefore it is necessary to set it to work.

9-3-1. How to Set the Auto Restart Function

To set the auto restart function, proceed as follows:

The power supply to the unit must be on ; the function will not set if the power is off.

Push the [RESET] button located in the center of the front panel continuously for three seconds. The unit receives the signal and beeps three times. The unit then restarts operating automatically in the event of power supply being accidentally shut down.

• **When the unit is standby (Not operating)**

Operation

Push [RESET] button for more than three seconds. (Less than 10 seconds)

RESET
FILTER
TIMER

• **When the unit is in operation**

Operation

Push [RESET] button for more than three seconds. (Less than 10 seconds)

RESET
FILTER
TIMER

• After restarting the air conditioner by the AUTO RESTART OPERATION, the louver swing (AUTO) operation resumes.

• While the filter check indicator is on, the RESET button has the function of filter reset button. The unit is on standby.

The unit starts to operate.

The unit beeps three times and continues to operate.

If the unit is not required to operate at this time, push [RESET] button once more or use the remote controller to turn it off.

The unit is in operation.

The unit stops operating.

The unit beeps three times.

If the unit is required to operate at this time, push [RESET] button once more or use the remote controller to turn it on.

www.ilmalämpöpumput.com

Motions

↓

↓

After approx. three seconds,

Motions

↓

↓

After approx. three seconds,

- 50 -



The green indicator is on.

The green indicator flashes for 5 seconds.

The green indicator is on.

The green indicator is turned off.

The green indicator flashes

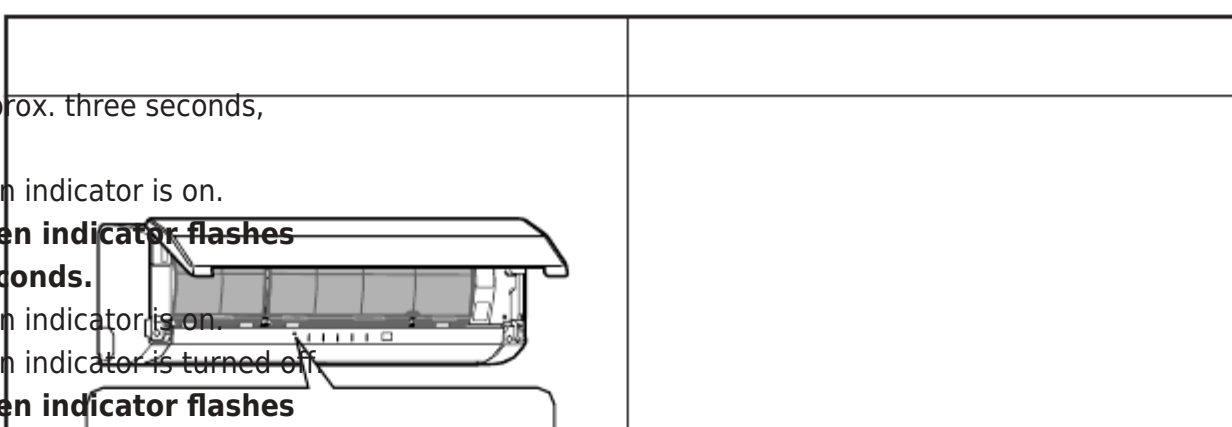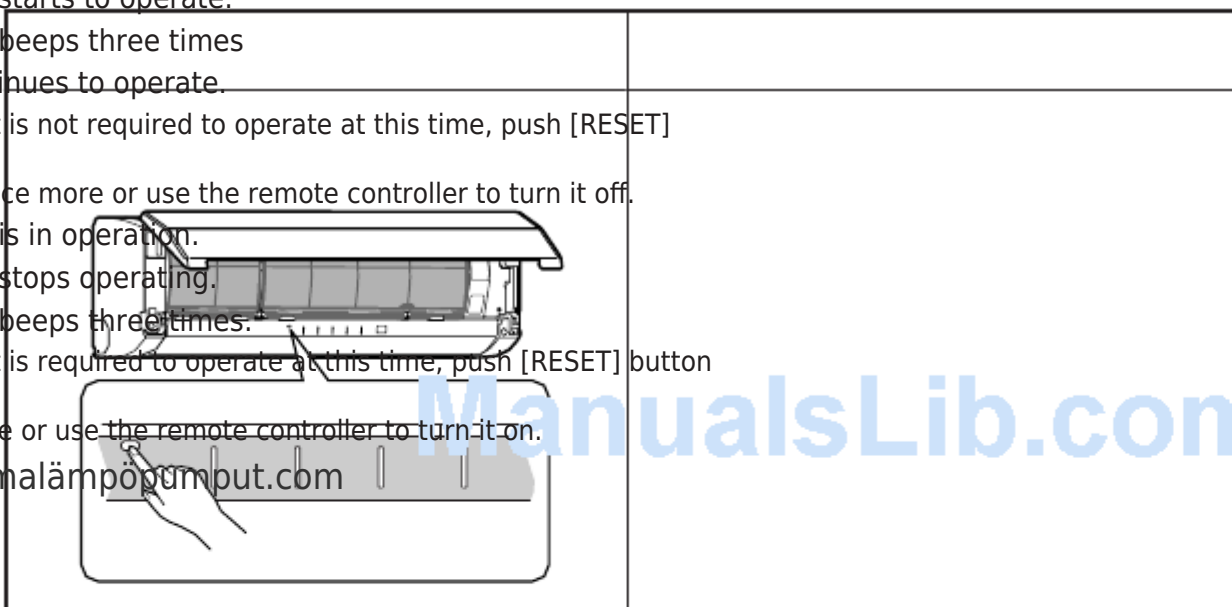

for 5 seconds.

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
47
48
49
50
51
52
53
54

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

Related Manuals for Toshiba RAS-10SAVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-16SKV Series Owner's Manual](#)

(52 pages)

Related Content for Toshiba RAS-10SAVP-E

[RAS-B07G3KVSG-E Auto Restart Function](#)

Toshiba RAS-B07G3KVSG-E

[RAS-25S4KVDG-ND Auto Restart Function](#)

Toshiba RAS-25S4KVDG-ND

[RAS-07G3KVSG-TR Auto Restart Function Setting](#)

Toshiba RAS-07G3KVSG-TR

[RAS-M18G3KVSG-TR Auto Restart Function Setting](#)

Toshiba RAS-M18G3KVSG-TR

[RAS-B22PKVSG-TR Auto Restart Function](#)

Toshiba RAS-B22PKVSG-TR

[RAS-25S4KVPG-ND Auto Restart Function](#)

Toshiba RAS-25S4KVPG-ND

[RAS-10S3AV-E Auto Restart Function](#)

Toshiba RAS-10S3AV-E

[RAS-M05G3KVSG-E Auto Restart Function](#)

Toshiba RAS-M05G3KVSG-E

This manual is also suitable for:

[Ras-b10skvp-eRas-16savp-eRas-10skvp-ndRas-10savp-ndRas-13skvp-ndRas-13savp-nd](#) ... [Show all](#)