



# How To Cancel The Auto Restart Function; Power Failure During Timer Operation; Filter Indicator; How To Turn Off Filter Indicator - Toshiba RAS-10SAVP-E Service Manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118



-

- 

Troubleshooting



•

## Bookmarks





Toshiba ilmalämpöpumppujen myynti, huolto ja asennus: Jäähdytinpalvelu RefGroup Oy, Vantaa

### 9-3-2. How to Cancel the Auto Restart Function

To cancel auto restart function, proceed as follows :

Repeat the setting procedure : the unit receives the signal and beeps three times.

The unit will be required to be turned on with the remote controller after the main power supply is turned off.

- **When the system is on stand-by (not operating)**

#### Operation

Push [RESET] button for more than three seconds. (Less than 10 seconds)

RESET  
FILTER  
TIMER

- **When the system is operating**

## Operation

Push [RESET] button for more than three seconds. (Less than 10 seconds)

RESET  
FILTER  
TIMER

### 9-3-3. Power Failure During Timer Operation

When the unit is turned off because of power failure during timer operation, the timer operation is cancelled. In that case, set the timer operation again.

#### NOTE :

The Everyday Timer is reset while a command signal can be received from the remote controller even if it stopped due to a power failure.

The unit is on standby.

The unit starts to operate.

The unit beeps three times and continues to operate.

If the unit is not required to operate at this time, push [RESET] button once more or use the remote controller to turn it off.

PURE  
OPERATION

The unit is in operation.

The unit stops operating.

The unit beeps three times.

If the unit is required to operate at this time, push [RESET] button once more or use the remote controller to turn it on.

PURE  
OPERATION

[www.ilmalämpöpumput.com](http://www.ilmalämpöpumput.com)

## Motions

↓

↓

After approx. three seconds,

### Motions

↓

↓

After approx. three seconds,

### 9-4. FILTER Indicator

When the elapsed time reaches 1000 hours after air purifier operation, the FILTER indicator lights.

After cleaning the filters, turn off the FILTER indicator.

#### 9-4-1. How to Turn Off FILTER Indicator

Push [RESET] button on the indoor unit.

#### NOTE :

If [RESET] button is pushed while the FILTER indicator is not lit, the indoor unit will start the automatic

operation.

When you want a temporary operation while the FILTER lamp lights, push [RESET] button to turn off the FILTER lamp.

- 51 -

The green indicator is on.

The green indicator is on.

The green indicator is turned off.

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1  
...  
48  
49  
50  
**51**  
52  
53  
54  
55

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

## Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

### Related Manuals for Toshiba RAS-10SAVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)



[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-16SKV Series Owner's Manual](#)

(52 pages)

## Related Content for Toshiba RAS-10SAVP-E

[RAS-10S3AV-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-10S3AV-E

[RAS-M05G3KVSG-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-M05G3KVSG-E

[RAS-18S3KV-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-18S3KV-E

[RAS-M07G3DV-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-M07G3DV-E

[RAS-M07N4KVRG-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-M07N4KVRG-E

[RAS-25G3KVSG-ND How To Cancel The Auto Restart Function](#)

Toshiba RAS-25G3KVSG-ND

[RAS-25E2KVG-ND How To Cancel The Auto Restart Function](#)

Toshiba RAS-25E2KVG-ND

[RAS-13S3KV-E How To Cancel The Auto Restart Function](#)

Toshiba RAS-13S3KV-E

This manual is also suitable for:

[Ras-b10skvp-eRas-16savp-eRas-10skvp-ndRas-10savp-ndRas-13skvp-ndRas-13savp-nd](#) ... [Show all](#)