

Operation Characteristic Curve - Toshiba RAS-10SAVP-E Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118



-

•

Troubleshooting

•

Bookmarks




Toshiba ilmalämpöpumppujen myynti, huolto ja asennus: Jäähdytinpalvelu RefGroup Oy, Vantaa

2-2. Operation Characteristic Curve

RAS-B10SKVP-E, RAS-B13SKVP-E, RAS-B16SKVP-E

<Cooling>

10
9
8
7
6
5
4
3

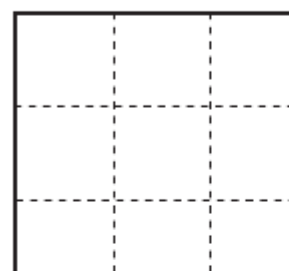

2

• Conditions

Indoor : DB 27°C/WB 19°C

Outdoor : DB 35°C

Air flow : High

1

Pipe length : 5m

Voltage : 230V

0

0

20

40

Compressor speed (rps)

RAS-10SKVP-ND, RAS-13SKVP-ND, RAS-16SKVP-ND

<Cooling>

10

9

8

7

6

5

4

3

2

• Conditions

Indoor : DB 27°C/WB 19°C

Outdoor : DB 35°C

Air flow : High

1

Pipe length : 5m

Voltage : 230V

0

0

20

40

Compressor speed (rps)

60

80

100

120

60

80

100

120

www.ilmalämpöpumput.com

<Heating>

10

9

8


7

6


5

4

Current (A)

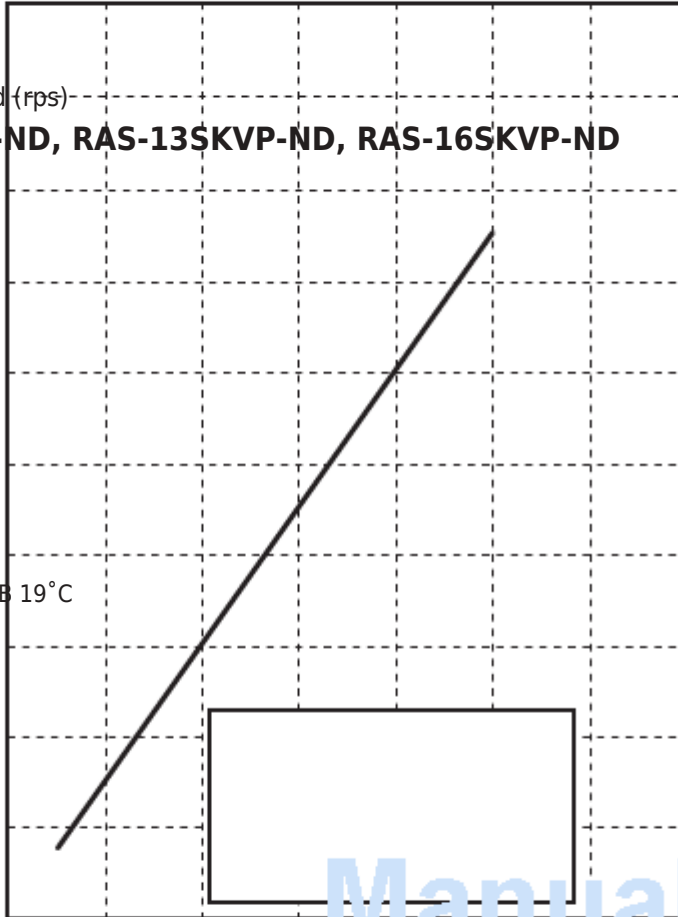


Current (A)

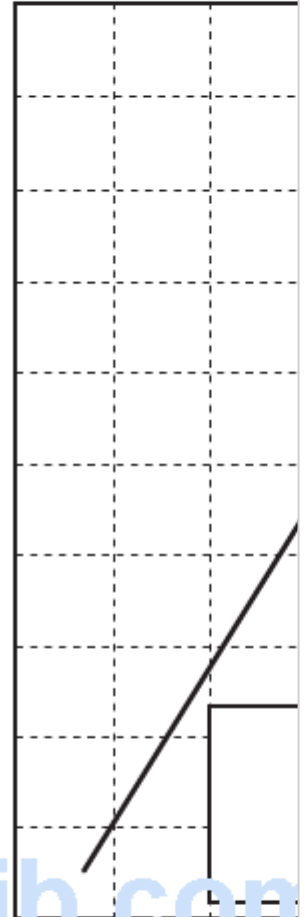


ManualsLib.com

3
2
1
0
140
0
20
Compressor speed (rps)
<Heating>
10
9
8
7
6
5
4
3
2
1
0
140
0
20
Compressor speed (rps)
- 7 -
• Conditions
Indoor : DB 20°C
Outdoor : DB 7°C/WB 6°C
Air flow : High
Pipe length : 5m
Voltage : 230V
40
60
80
100
• Conditions
Indoor : DB 20°C
Outdoor : DB 7°C/WB 6°C
Air flow : High
Pipe length : 5m
Voltage : 230V
40
60
80
100
120
140
120
140

Current (A)

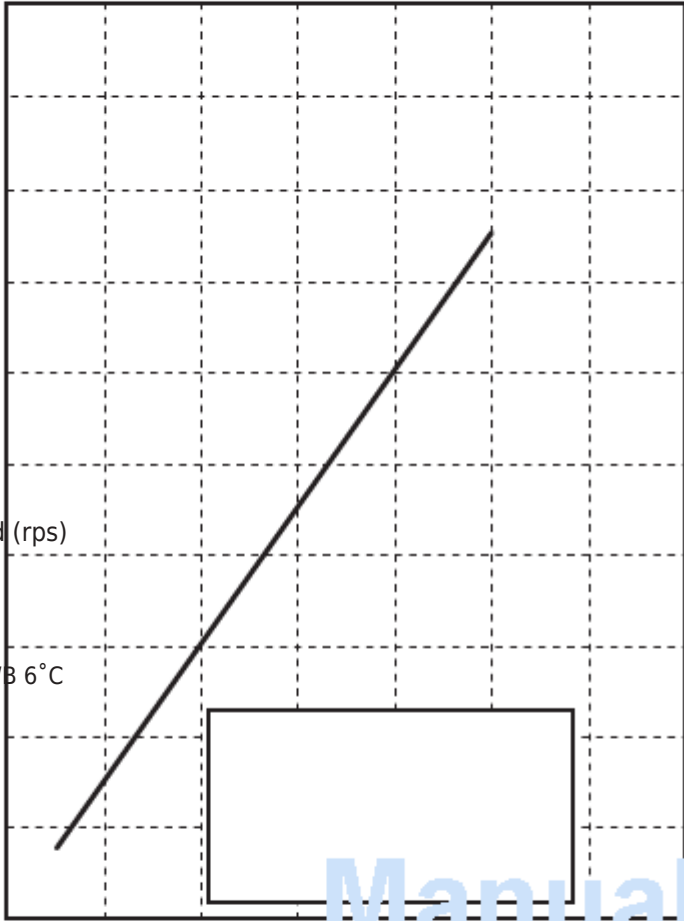

Current (A)

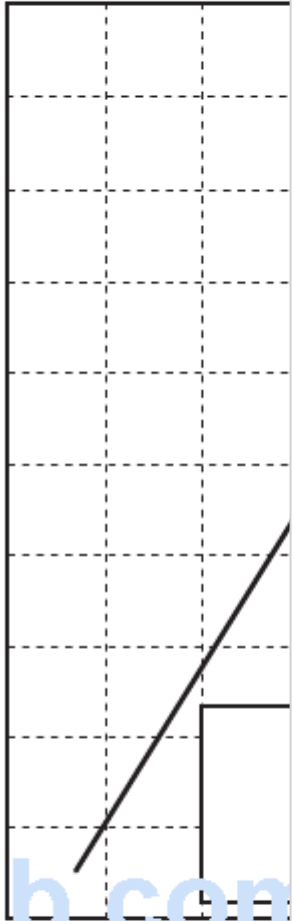

ManualsLib.com

[Previous Page](#)
[Next Page](#)

1
...
4
5
6
7
8
9
10
11

Quick Links:

[Service Manual](#)

[Specifications](#)

[How to Diagnose the Trouble](#)

[How to Replace the Main Parts](#)

[Exploded Views and Parts List](#)

Chapters

[Table of Contents](#) 2

[Operation Description 9-2. 1. Basic Operation](#) 28

Related Manuals for Toshiba RAS-10SAVP-E

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(148 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type air conditioner (91 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type; for general public use (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Owner's Manual](#)

Split type (31 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Installation Manual](#)

Split type air conditioner (19 pages)

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Installation Manual](#)

(132 pages)

[Air Conditioner Toshiba RAS-4M23SAV-E Service Manual](#)

Split type (121 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type (117 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-16SKV Series Owner's Manual](#)

(52 pages)

Related Content for Toshiba RAS-10SAVP-E

[RAV-GM302ATP-E Operation Characteristic Curve](#)

Toshiba RAV-GM302ATP-E

[RAV-GP561ATW-E 1-3.Operation Characteristic Curve](#)

Toshiba RAV-GP561ATW-E

[RAV-SM1104AT8P-E Operation Characteristic Curve](#)

Toshiba RAV-SM1104AT8P-E

[RAV-SP1104AT8-E1 Operation Characteristic Curve](#)

Toshiba RAV-SP1104AT8-E1

[RAV-GM2241AT8-TR Operation Characteristic Curve](#)

Toshiba RAV-GM2241AT8-TR

[RAV-SM304SDT-TR Operation Characteristic Curve](#)

Toshiba RAV-SM304SDT-TR

[RAV-GM1601AT8P-E Operation Characteristic Curve](#)

Toshiba RAV-GM1601AT8P-E

[RAV-GM1601ATP-E \(TR\) Operation Characteristic Curve](#)

Toshiba RAV-GM1601ATP-E (TR)

This manual is also suitable for:

[Ras-b10skvp-eRas-16savp-eRas-10skvp-ndRas-10savp-ndRas-13skvp-ndRas-13savp-nd](#) ... [Show all](#)