



Sanyo LCD-22VT11DVD Instruction Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Features](#)

[2 Remote Control Buttons](#)

[3 Lcd Tv and Operating Buttons](#)

[Download this manual](#)

See also: [Service Manual](#)



INSTRUCTION MANUAL

SA
LCD-2

Table of Contents

[Next Page](#)

1
2
3
4
5

Chapters

[Table of Contents](#) 3

[Features](#) 33

Related Manuals for Sanyo LCD-22VT11DVD

[TV DVD Combo Sanyo LCD-22VT11DVD Service Manual](#)

Lcd tv dvd built-in (93 pages)

[TV Sanyo LCD-22XR9DA Service Manual](#)

Lcd tv (51 pages)

[TV Sanyo LCD-24XR10F Service Manual](#)

Lcd tv (50 pages)

[TV Sanyo LCD-27XA2 Service Manual](#)

Lcd television (40 pages)

[TV Sanyo LCD-24XR12F Service Manual](#)

Lcd tv (37 pages)

[TV Sanyo LCD-24XAZ10F Instruction Manual](#)

Lcd tv (29 pages)

[TV Sanyo LCD-24K40 Service Manual](#)

Lcd television (56 pages)

[TV Sanyo LCD-32XR11F Instruction Manual](#)

Lcd tv (40 pages)

[TV Sanyo LCD-32XR11 Service Manual](#)

Lcd tv (37 pages)

[TV Sanyo LCD-39XZ12F Service Manual](#)

Lcd tv (37 pages)

[TV Sanyo LCD-37XR1 Instruction Manual](#)

Lcd tv (37 pages)

[TV Sanyo LCD-46XR11F Instruction Manual](#)

Lcd tv (40 pages)

[TV Sanyo LCD-50XR12F Service Manual](#)

Lcd tv (37 pages)

[TV Sanyo LCD-32XR1 Instruction Manual](#)

Lcd (37 pages)

[TV Sanyo LCD-32XH3 Service Manual](#)

Lcd television (57 pages)

[TV Sanyo LCD-46XR10DKH Service Manual](#)

Lcd idtv (41 pages)

Summary of Contents for Sanyo LCD-22VT11DVD

[Page 3: Table Of Contents](#)

Contents Features2 Managing Stations: Sorting Channel List 15 Introduction
..... 2 On-Screen Information 15 Preparation 2 Media Playback Using Media
Browser16 Safety Precautions3 Viewing Photos via USB16 Media Browser

[Page 4: Features](#)

Introduction Features • Remote controlled colour LCD TV. Please read the corresponding instructions of this handbook prior to the first usage of the device, even • Fully integrated Terrestrial digital TV (DVB-T - MPEG2 when the usage of electronic devices is familiar - MPEG4) to you.

[Page 5: Safety Precautions](#)

Safety Precautions Lightning In case of storm and lightning or when Read the following recommended safety going on holiday, disconnect the power precautions carefully for your safety. cord from the wall outlet. Power Source Replacement Parts The TV set should be operated only from a 220-240 V When replacement parts are required, make sure that AC, 50 Hz outlet.

[Page 6: For Eu Users](#)

Your SANYO product is designed and coaxial cable, may in some circumstances create a manufactured with high quality materials fi...

[Page 7: Package Contents](#)

Note: The HDMI connection between PC and TV Environmental Information may cause radio interference in which case it is • This television is designed to consume less energy recommended to use VGA(DSUB-15) connection. to save environment. Package Contents You not only help to save the environment but also you can save money by reducing electricity bills thanks to the energy effi...

[Page 8: Remote Control Buttons](#)

Remote Control Buttons Standby Image size/ Expand (in TXT mode) Sleep timer Numeric buttons Return / Exit (in DTV mode) / Index page (in TXT mode) Cursor up / Page up (in TXT mode) Cursor left Programme up (Page down in DTV mode) Programme down (Page up in DTV mode) Mono-Stereo / Dual I-II / Current language Previous Programme / Swap...

[Page 9: Lcd Tv And Operating Buttons](#)

LCD TV and Operating Buttons FRONT and REAR VIEW Control buttons VIEW Control Buttons 1. Standby On/Off button 2. TV/AV button 3. Programme Up/Down buttons- Volume Up/Down buttons Note:You can use +/- buttons to change volume. If you want to change channels, press P/V/ AV button once and then use +/- buttons.

[Page 10: Viewing The Connections - Side Connectors](#)

S/PDIF Coaxial Out outputs digital audio signals of the currently watched source. Use an SPDIF coaxial cable to transfer audio signals to a device that has S/PDIF input Viewing the Connections - Side Connectors CI Slot is used for inserting a CI card. A CI card allows you to view all the channels that you subscribe to.

[Page 11: Using Digital Multimedia Connectors](#)

Using Digital Multimedia Using Side AV Connectors Connectors You can connect a range of optional equipment to your LCD TV using side connectors of the TV. • You can connect USB devices to your TV by using • For connecting a camcorder or camera , you should the USB input of the TV.

[Page 12: Connecting To A Dvd Player Via Component Sockets \(Ypbpr\) Or Scart Cable](#)

Connecting to a DVD Player Remote Control Handset via Component Sockets Inserting Batteries (YPbPr) or Scart Cable • Remove the battery cover located on the back of the handset by gently pulling backwards from the • Some DVD players are connected through indicated part.

[Page 13: Input Selection](#)

Volume Setting Input Selection • Press " V+" button to increase the volume. Press "V-" Once you have connected external systems to button to decrease the volume. A volume level scale

your TV, you can switch to different input sources. (slider) will be displayed on the screen.

[Page 14: First Time Installation](#)

Blue button (Filter): Views filtering options. SUBTTL: Press SUBTITLE button to view Select Genre menu. Using this feature, you can search the programme guide database in accordance with the genre. Info available in the programme guide will be searched and results matching your criteria will be listed.

[Page 15: Installation](#)

Installation Press "MENU" button on the remote control and select Installation by using " " or " " button. Press OK button and the following menu screen will be displayed. To select the "Yes" or "No" option, highlight the item by using "..."

[Page 16: Digital Manual Search](#)

Digital Manual Search Press OK to cancel. Select Yes by pressing " " or " " button and press OK to delete all of the channels. Managing Stations: Channel List The TV sorts all stored stations in the Channel List. You can edit this channel list, set favourites or set active stations to be listed by using the Channel List In manual channel scan, the number of the multiplex...

[Page 17: Deleting A Channel](#)

will be displayed. Select Yes if you want to move the channel and press OK. • Press OK button to process. Selected channel is now moved. Deleting a Channel You can press GREEN button to tag/untag all channels; YELLOW button to tag/untag channel. •...

[Page 18: Media Playback Using Media Browser](#)

The information banner gives information on the a subtitle file and press OK button, you can select or channel selected and the programmes on it. The deselect that subtitle file. The following menu will be name of the channel is displayed, along with its displayed while playing a video fi...

[Page 19: Media Browser Settings](#)

Jump (Numeric buttons): Jump to selected file using 0..9 (Numeric buttons): The TV will jump to the the numeric buttons. file starting with the letter you input via the numeric buttons on your remote control. Jump function can be performed by digit keys, 0..9 : Jump.

[Page 20: Changing Image Size: Picture Formats](#)

14:9 Changing Image Size: Picture This zooms up the wide picture (14:9 aspect ratio) to Formats the upper and lower limits of the screen. • Programmes can be watched in different picture formats, depending on the transmission received. • You can change the aspect ratio (image size) of the TV for viewing the picture in different zoom modes.

[Page 21: Configuring Picture Settings](#)

Game Mode: When Game Mode is set to On, specific Configuring Picture Settings game mode settings, which are optimized for better You can use different picture settings in detail. video quality, will be loaded. Press "MENU" button and select the Picture icon Note: When Game Mode is on, some items in the by using "..."

[Page 22: Configuring Sound Settings](#)

AVL: Automatic Volume Limiting (AVL) function sets the Configuring Sound Settings sound to obtain fixed output level between programmes Sound settings can be configured according to your (For instance, volume level of advertisements tend to personal preferences. be louder than programmes).

[Page 23: Using A Conditional Access Module](#)

Using a Conditional Access Configuring Language Module Preferences IMPORTANT: Insert or remove the CI module only You can operate the TV's language settings using when the TV is SWITCHED OFF. this menu. • In order to watch certain digital channels, a conditional Press "MENU"...

[Page 24: Language Settings](#)

Language Settings Parental Settings Menu Operation • Select an item by using “ ” or “ ” button. • Use “ ” or “ ” button to set an item. • Press OK button to view more options. In the configuration menu, highlight the Language Menu Lock: Menu lock setting enables or disables Settings item by pressing “...”

[Page 25: Timers](#)

• Select YES by using “ ” or “ ” buttons to delete the Timers timer. Select NO to cancel. To view Timers menu, press “MENU” button and Configuring Date/Time Settings select Channel List icon by using “ ” or “ ” button. Press OK button to view Channel List menu.

[Page 26: Configuring Source Settings](#)

Scan Encrypted: When this setting is on, search Configuring Source Settings process will locate the encrypted channels as well. If You can enable or disable selected source options. The it is set as Off, encrypted channels will not be located TV will not switch to the disabled source options when in automatic search or manual search.

[Page 27: Other Features](#)

Teletext Other Features Displaying TV Information: Programme Number, Teletext system transmits information such as news, Programme Name, Sound Indicator, time, teletext, sports and weather on your TV. Note that is the signal channel type and resolution information is displayed degrades, for example in poor/adverse weather on the screen when a new programme is entered or conditions, some text errors may occur or the teletext “INFO”...

[Page 28: Tips](#)

Tips Screen Care: Clean the screen with a slightly damp, soft cloth. Do not use abrasive solvents as they may damage the coating layer of the TV screen. For your safety, unplug the mains plug when cleaning the set. When moving the TV, hold it properly from the bottom part.

[Page 29: Appendix A: Pc Input Typical Display Modes](#)

Appendix A: PC Input Typical Appendix B: AV and HDMI Signal Display Modes Compatibility (Input Signal Types) The display has a maximum resolution of 1360 x 768. The following table is an illustration of some of the Source Supported Signals Available typical video display modes.

[Page 30: Appendix C: Supported Dvi Resolutions](#)

Appendix C: Supported DVI Resolutions When connecting devices to your TV's connectors by using DVI converter cables (not supplied), you can refer to the following resolution information. 24Hz 25Hz 30Hz 50Hz 60Hz 480i 480p 576i 576p 720p 1080i 1080p Appendix D: Supported File Formats for USB Mode Format Remarks File...

[Page 31: Appendix E: Software Upgrade](#)

Appendix E: Software Upgrade • Your TV is capable of finding and updating new software upgrades over broadcast channels. • For broadcast channels search, TV looks the available channels stored in your settings. So before software upgrade search, it is advised to auto search and update all available channels. 1) Software upgrade search via user interface •...

[Page 32: Specifications](#)

Specifications TV BROADCASTING PAL/SECAM B/G D/K K' I/I' L/L' RECEIVING CHANNELS VHF (BAND I/III) UHF (BAND U) HYPERBAND NUMBER OF PRESET CHANNELS 1000 CHANNEL INDICATOR On Screen Display RF AERIAL INPUT 75 Ohm (unbalanced) OPERATING VOLTAGE 220-240V AC, 50 Hz. AUDIO German + Nicam Stereo AUDIO OUTPUT POWER (W...

[Page 33: Features](#)

Features Contents Features 31 General Properties General Properties.....31 • DVD / CD / CD-R / CD-RW / MP3 / JPEG / MPEG Safety Information32 / DivX playback. Notes on Discs 32 • NTSC/PAL playback (according to disc content) On handling discs

[Page 34: Safety Information](#)

On cleaning Safety Information • Before playing, clean the disc with a cleaning cloth. CAUTION Wipe the disc from the center out. DVD Player is a class 1 laser product. However this product

uses a visible laser beam which could cause hazardous radiation exposure.

[Page 35: Dvd Control Panel Buttons](#)

DVD Control Panel Buttons A. Disc loader B. Play / Pause Plays/pauses the disc. When DVD menu (root menu) is active, this button functions as "button select" (selects the highlighted item in menu) if this is not prohibited by the disc.

[Page 36: General Operation](#)

General Operation You can operate DVD, movie CD, music or picture CD's content by using the proper buttons on your remote control. Below are main functions of commonly used remote control buttons. Buttons on the Movie Picture Music Remote Control Playback Playback...

[Page 37: General Playback](#)

Reverse stepping is not available. General Playback For your convenience: Basic Play If you attempt to enter a number greater than the total Press on the power button time of the current title, the time search box disappears Please insert a disc to the loader. and "...

[Page 38: Preferences](#)

Preferences SPDIF OUTPUT You can set Spdif Output as PCM or RAW. If you select DEFAULT PCM from SPDIF Output in DVD menu and play DVD If you choose RESET and press SELECT, the factory- with Dolby audio, you can get audio output with two presets are loaded.

[Page 39: Some Functions \(Angle, Zoom Etc\) Do Not Work](#)

Some functions (Angle, Zoom etc) do DVD has a structure consisting of two 0.6-mm thin discs, which are adhered to each other. Since the not work thinner the disc, the higher the density at which the • These functions are not available on the DVD. information can be recorded, a DVD disc has a greater •...

[Page 40: Disc Types Compatible With This Unit](#)

Disc Types Compatible with This Unit Specifications DVD: SS/SL 4.7" (DVD-5) CD-DA SS/DL 4.7" (DVD-9) CD-R Types of Discs Supported DS/SL 4.7" (DVD-10) CD-RW DS/DL 4.7" (DVD-18) MP-3/JPEG MPEG-2 Video Standard Decoding (MPEG-1 supported) Full-Screen Video Display of 720 x 576 (PAL) & 720 x 480 (NTSC) pixels Video Type 50 and 60 Hz frame refresh rates (PAL &...