



Sanyo LED-32XR11F Instruction Manual

Led-lcd tv

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Table of Contents](#)

[2 Identification of Controls](#)

[3 Remote Control Unit](#)

[4 Setting up](#)

[5 Connections](#)


[6 Connecting an Hdmi Device](#)

[7 Using Usb Multi Media Player](#)

[8 Specifications](#)

[Download this manual](#)

See also: [Service Manual](#)

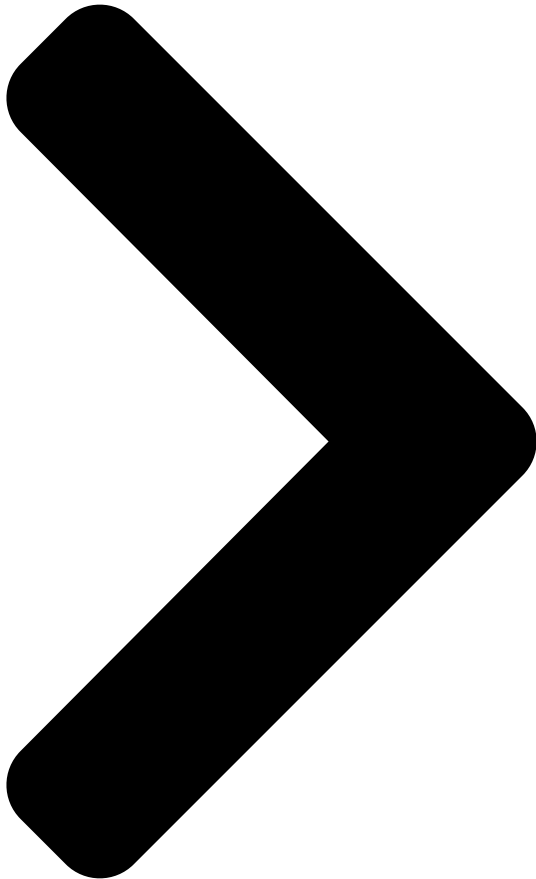

INSTRUCTION MANUAL

LED-LCD TV

Before connecting, operating or adjusting this product, please read the manual completely.

Please keep this manual for future reference.

LED-32XR11F



Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo LED-32XR11F

[Led/lcd tv Sanyo LED-32XR11F Service Manual](#)

(36 pages)

[LCD TV Sanyo LED-46XR10FH Service Manual](#)

Led-lcd tv (48 pages)

[LCD TV Sanyo LED-46XR123D Service Manual](#)

Led-lcd tv with 3d function (37 pages)

[LCD TV Sanyo LED-24XR113D Service Manual](#)

Led-lcd tv with 3d function (52 pages)

[LCD TV Sanyo LED-22XZ11F Service Manual](#)

Led-lcd tv (38 pages)

[LCD TV Sanyo LED-42XR11F Service Manual](#)

(36 pages)

[LCD TV Sanyo LED-22XR11F Instruction Manual](#)

Led-lcd tv (40 pages)

[LCD TV Sanyo 1 682 351 01 Service Manual](#)

(38 pages)

[LCD TV Sanyo LCD55L4 Instruction Manual](#)

55" stereo hdtv lcd television with led edge-lighting and usb socker, 1080p (40 pages)

[LCD TV Sanyo LCD-32CA9S Service Manual](#)

(39 pages)

[LCD TV Sanyo LCD-32XF7 Service Manual](#)

Sanyo lcd-32xf7 lcd television service manual (51 pages)

[LCD TV Sanyo LCD-32XF7 Service Manual](#)

Chassis series ue6-l (50 pages)

[LCD TV Sanyo LCD-46XR11F Service Manual](#)

(36 pages)

[LCD TV Sanyo LCD-40XZ10F Instruction Manual](#)

(41 pages)

[LCD TV Sanyo LCD-19K40 Instruction Manual](#)

(44 pages)

[LCD TV Sanyo LCD-47XR9KH Service Manual](#)

(36 pages)

Summary of Contents for Sanyo LED-32XR11F

[Page 1](#) LED-32XR11F INSTRUCTION MANUAL LED-LCD TV Before connecting, operating or adjusting this product, please read the manual completely. Please keep this manual for future reference.

[Page 2: Table Of Contents](#)

Contents Important Information Important Safety Precautions Important Notice Identification of Controls Setting Up Connections First Time Configuration / Basic Operations Memorizing the Channels Programme Edit Adjusting the Picture Adjusting the Sound Adjusting Basic Settings

[Page 3: Important Information](#)

IMPORTANT INFORMATION If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as: ! Using cabinets or stands recommended by the manufacturer of the television. ! Only using furniture that can safely support the television.

[Page 4: Important Safety Precautions](#)

Important Safety Precautions Electrical energy can perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety. But **IMPROPER USE CAN RESULT IN POTENTIAL ELECTRICAL SHOCK OR FIRE HAZARD**. In order to prevent potential danger, please observe the following instructions when installing, operating and cleaning the product.

Page 5 Important Safety Precautions (Continued) 15. Stand---Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. Do not place the product on an unstable trolley, stand, tripod or table. Placing the product on an unstable base **SOURCE MENU** can cause the product to fall, resulting in serious personal injuries as well as damage to the product.

[Page 6: Important Notice](#)

Important Notice About Temperature Do not use in hot and cold rooms (locations) When the unit is used in rooms (locations) with low temperature, the picture may leave trails or appear slightly delayed. This is not a malfunction, and the unit will recover when the temperature returns to normal.

[Page 7: Identification Of Controls](#)

Identification of Controls Main Unit (front/bottom view) 1. Remote sensor Receives signals from the remote control. Do not block. 2. Power indicator Lights blue when in operating mode. Lights red when in standby mode. **INPUT MENU** 3. **POWER** Press this button to turn the unit ON from **STANDBY** mode. Press it **INPUT MENU** again to turn the set back to **STANDBY**.

[Page 8: Remote Control Unit](#)

Identification of Controls (Continued) Remote control unit 1. **POWER**: Switches the TV power on or Standby. 2. **S.MODE**: Selects sound mode. **INPUT** 3. **P .MODE**: Selects picture mode. 4. **FAV.LIST**: Displays the favorite channel list. 5. **FAV+ / FAV-**: Selects the favorite channel. 6.

[Page 9: Setting Up](#)

Setting Up You should select a location for the TV: Selecting a location Where direct light does not reflect on the screen. · That has indirect and soft lighting. · Where the TV has access to an antenna or cable TV connection. ·...

[Page 10: Connections](#)

Connections Cautions Before Connecting When connecting an external device to the TV, make sure that the TV and the device are turned off. Check the plugs on the ends of cables to make sure that they are the correct type before you try plugging them into jacks on the TV.

[Page 11: Connecting An Hdmi Device](#)

Connections (Continued) Insert MP3 player headphone plug into the MUSIC jack on the back of Connecting a MP3 player the TV. Be sure to insert fully, otherwise it may not sound right. **MP3 player** To listen to music from MP3 player through TV 1.

[Page 12: Connecting A Computer](#)

Connections (Continued) To connect a computer: Connecting a computer Connect a D-Sub cable between the D-Sub jack on the computer and the D-Sub input jack on the unit. Connect an Audio cable between the **AUDIO** output on the computer and **AUDIO** input jack on the unit. To play video from the computer: 1.

[Page 13: First Time Configuration/Basic Operations](#)

First Time Configuration/Basic Operations Turning on your TV for the first time The first time you use the TV, you need to configure your TV: To configure your TV: Energy Save Mode Make sure that you have inserted the batteries in the To use this TV for displaying in a store, please select [Store/Dynamic].

[Page 14](#) Basic Operations (Continued) Selecting the input source Input Source To select the input source: Press INPUT button. The Input Source list appears. Press 6 or 5 to select the input source, then press OK or 4 to confirm your choice. Component The TV switches to the selected source.

[Page 15: Basic Operations](#)

Basic Operations (Continued) Press the INFO button to display the information banner. The Displaying the Information Banner information banner displays current status information such as the channel number and signal source. Depending on the mode, different information is displayed. In DTV mode, more information will be displayed.

[Page 16: Basic Operations](#)

Basic Operations (Continued) On-screen menu overview PICTURE menu SOUND menu PICTURE SOUND TIME OPTION LOCK CHANNEL PICTURE SOUND TIME OPTION LOCK CHANNEL Sound Mode User Picture Mode User Treble Contrast Bass Brightness Balance Colour Auto Volume Sharpness Surround Sound Tint Select Move Return...

[Page 17: Memorizing The Channels](#)

Memorizing the Channels Note: If the Lock System is On, CHANNEL menu can not be operated without password. For details, please see <Setting Child and Rating Locks> section. Auto Tuning will completely re-tune the TV and can be used to Auto Tuning update the channel list.

[Page 18: Programme Edit](#)

Memorizing the Channels & Programme Edit Use the Manual Tuning operation if desired channels can not be preset ATV manual tuning - analogue only - by Auto Tuning or if you would like to preset channels to specific position numbers one by one. In CHANNEL menu, press 6 to select ATV Manual PICTURE...

[Page 19: Programme Edit](#)

Programme Edit (Continued) You can create a favourite channel list so you can quickly browse Setting up a favourite channel list through your favourite channels by pressing FAV.LIST, then selecting a channel from the favourite channel list. Navigate to the CHANNEL menu, press 5 to select PICTURE SOUND...

[Page 20: Skipping Channels](#)

Programme Edit (Continued) Skipping channels You can skip unnecessary channels so that only the channels you want to watch can be selected by CH / CH . You can still tune to the skipped channel by using the number buttons. PICTURE SOUND TIME...

[Page 21: Adjusting The Picture](#)

Adjusting the Picture Adjusting the picture To adjust the picture: Press MENU. The on-screen menu opens with the PICTURE PICTURE SOUND TIME OPTION LOCK CHANNEL menu displayed, then press 6 to access. Picture Mode User Contrast Brightness Press 6 to highlight an option, press 3 to adjust the option;...

[Page 22: Adjusting The Sound](#)

Adjusting the Sound To adjust the sound: Adjusting the sound Press MENU. The on-screen menu opens. Press 3 or 4 to select SOUND menu, press 6 to access. PICTURE SOUND TIME OPTION LOCK CHANNEL Press 6 or 5 to highlight an option, press 3 or 4 to adjust the Sound Mode...

[Page 23: Adjusting Basic Settings](#)

Adjusting Basic Settings Adjusting basic settings To adjust basic settings: Press MENU. The on-screen menu opens. PICTURE SOUND TIME OPTION LOCK CHANNEL Press 3 to display OPTION menu, press 6 to access. OSD Language English English Audio Languages Press 6 or 5 to select

an option, press to adjust the...

[Page 24: Setting Clock & Timer](#)

Setting Clock & Timer To set TV clock Setting TV clock – For DTV programs, the clock displays the current time using time data received from your TV service provider. This information is based on a digital channel and does not need to be set manually, but you need to select your time zone PICTURE SOUND...

[Page 25: Setting Sleep Timer](#)

Setting Clock & Timer (continued) To set Sleep timer Setting Sleep timer Sleep timer lets you select the amount of time before your TV turns itself off automatically. This setting is cleared when the TV is turned off. PICTURE SOUND TIME OPTION LOCK...

[Page 26: Setting Child And Rating Locks](#)

Setting Child and Rating Locks You can prevent your children from watching TV by locking the TV and using age ratings. To enable child lock and rating feature, you must set Lock System to On through LOCK menu. Also you can set Lock System to On to lock CHANNEL menu to protect some TV settings from being accidentally changed.

[Page 27](#) Setting Child and Rating Locks (continued) Setting parental ratings To set and enable parental ratings - digital only - Some digital broadcasters rate their programmes according to age. You can set your TV to display only programmes with age ratings higher than your child's age. Before setting parental ratings, you have to enable the lock system.

[Page 28: Teletext & Subtitle](#)

Teletext & Subtitle What Is Teletext? Your System receives Teletext signals broadcast by a TV network, and decodes them into graphical format for viewing. News, weather and INPUT sports information, stock exchange prices and programme previews are among the many services available. To Turn On/Off Teletext Select a TV channel providing the Teletext program.

[Page 29: Adjusting The Computer Image & Setting Hotel Mode](#)

Adjusting the Computer Image & Setting Hotel Mode Before adjusting the screen, make sure that you select the Adjusting the PC image correct source (D-SUB). To adjust the computer image: PICTURE SOUND TIME OPTION LOCK CHANNEL Press MENU. The on-screen menu opens with PICTURE menu displayed.

[Page 30: Using Music Player /Using Usb Multi Media Player](#)

Using MUSIC Player & Using USB Multi Media Player Using MUSIC player You can connect your MP3 player to MUSIC jack on the TV side to listen to music from your TV. Be sure to switch to MUSIC source firstly by pressing INPUT button. During music playing and you want to save power, please go to OPTION menu and set Audio Only to Power Saving, then a message "Audio Only, it will go to power saving mode"...

[Page 31: Using Usb Multi Media Player](#)

Using USB Multi Media Player Media 1: Viewing Photos With the photo viewer, you can: • View photos (in JPG, BMP or PNG format). • View photos with background music. • Pan, zoom, and rotate photos. • Mark photos so you can just slide show those marked photos. Note: The photo viewer supports JPG, BMP, PNG format images, but not all JPG, BMP, or PNG files are compatible with the TV due to technical update.

[Page 32: Music Playback](#)

Using USB Multi Media Player Press continuously for additional options Pause Prev. Next Stop RepeatAll Music Playlist Info. Rotate Rotate Zoom In Zoom Out Move View Previous photo Stop Show information Rotate clockwise Show playlist Play/Pause Next photo Rotate counter-clockwise Zoom out Play/stop background music Zoom in...

[Page 33](#) Using USB Multi Media Player After you open the USB device, you can use 5 to navigate and select folders or music files, then press OK to open the highlighted folder or press to start music play from current music file. Below we will take it as an example that your desire music files are contained in a folder.

[Page 34](#) Using USB Multi Media Player Media 3: Playing Movie With the USB movie player, you can: Play compatible movie (in AVI, MPG, MPEG, DAT, MP4, TS, or MKV/MOV format). Repeat playing any specified section (A-B repeat). Mark movie files so you can just play back those movie files. Note: The USB movie player supports AVI, MPG, MPEG, DAT, MP4, TS, MKV/MOV format images, but not all AVI, MPG, MPEG, DAT, MP4, TS, MKV/MOV files are compatible with the TV due to technical update.

[Page 35](#) Using USB Multi Media Player Press continuously for additional options
00:02:30/01:40:38 00:02:30/01:40:38 Pause Prev. Next Stop RepeatAll Set A Playlist Info. Slow View Step View Goto Time Zoom In Zoom Out Aspect Ratio Fast reverse Information Slow motion Zoom in Picture size Previous Stop...

[Page 36](#) Using USB Multi Media Player Media 4: Playing text With the USB text viewer, you can: View compatible text (in TXT format). View text with background music. Mark specific text files so you can just view those specific text files. Note: The USB text viewer supports TXT format files, but not all TXT files are compatible with the TV due to technical update.

[Page 37: Troubleshooting](#)

Troubleshooting If, after reading these operating instructions, you have additional questions related to the use of your television, please call the services center in your local area. Before calling service, please check the symptoms and follow suggested solutions. Remote Control Problem Possible Solutions The batteries could be weak.

[Page 38: Specifications](#)

Specifications Type: Integrated Digital TV Panel: 80 cm TFT LCD (with LED backlight) Analogue TV system: PAL-B/G (CCIR), NTSC(AV) Australia: Digital TV system: Compliant Standard: DVB-T, 7 MHz Bandwidth Video Decoding: MP@ML & MP @ HL @ I Audio Decoding: Dolby Digital, MPEG (&II) Audio Sampling Rate: 32, 44.1, 48 kHz New Zealand: Compliant Standard: DVB-T , 8 MHz Bandwidth...

[Page 39: Appendix: Installing The Stand](#)

Appendix: Installing the Stand If the stand is provided, please read these instructions thoroughly before attempting this installation. You must install your TV into the stand in order for it to stand upright on a cabinet or other flat surface. If you intend to mount your TV on a wall or other vertical surface, you must remove the stand column.

[Page 40](#) 5944039260 Ver. 1.0...