

The Self-Diagnosis Function Display And What Is Detected; When Using Rcs-Bh80Bg.wl - Sanyo SPW-C256VH Technical Data & Service Manual

4-way air discharge semi-concealed wall-mounted ceiling-mounted concealed-duct

1	
2	
3	
4	
5	
Table Of Contents	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267

268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317

318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367

368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417

418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467

468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517

--	--


•

[Table of Contents](#)

•

Bookmarks

--

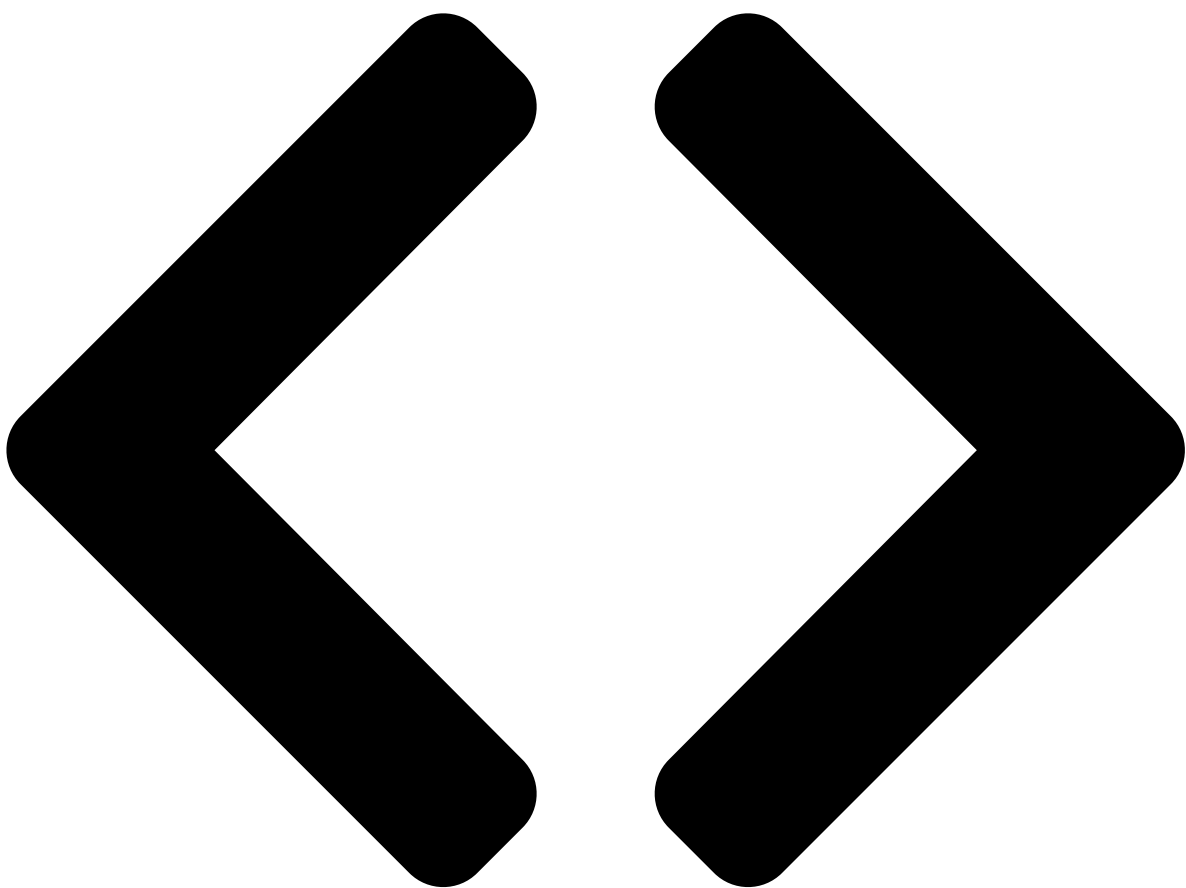

8-22. Common to All Models

1. The Self-Diagnosis Function Display and What is Detected

Alarm Display in the table below indicates the content of alarms that are displayed when a wired remote control is connected. For information on how to deal with the alarms, refer to the Mounting Instructions for the indoor unit or to Test Run or servicing materials.

Communication error in the remote control circuit			
Communication error either in the in/outdoor operation line or the sub-bus of the outdoor unit			
Operation of indoor protection device			
Operation of outdoor protection device			
Error in the indoor thermistor			

Error in the outdoor thermistor			
Error in the indoor EEPROM			
Error in the outdoor EEPROM			
Error related to the compressor			
Error in indoor settings			
Error in outdoor settings			
Inconsistency in Air/Heat (Including an auto-temp setting for a model without auto-temp settings)			
Oil Alarm (Same as operation of outdoor protection device)			
Test Run			
When using RCS-BH80BG-WL			
If you have either an outdoor maintenance remote control or a wired remote control and a service checker special wiring (623 178 5082 : for service use) at hand, you can get more detailed information about an alarm by connecting one to the service connector as in the diagram. For information such as how to connect to receivers, etc., refer to the Users Manual that came attached with the service checker special wiring.		○	●
		●	●
		●	○
		○	●
2. Room Temperature Sensor Settings		○	○
Common to All Models		○	○
• The indoor unit and the wireless remote control are equipped with indoor temperature sensors. The sensing of indoor temperature works via one of them.		○	○
• When the unit is shipped, it is set to the indoor unit, but to switch to the remote control, press the Sensor button (diagram at right) inside the remote control's cover and then check to make sure that Main Sensor on the LCD screen goes off.		●	○
		○	○
Even when the Sensor switch has been set to the remote control, if the unit does not receive any room temperature data from the remote control for ten minutes, it automatically switches back to the indoor unit sensor, so be sure to install the remote control facing the receiver.		○	○
Error Detected		○	●
Alarm Display		○	○
E01-E03, E08-E14, E17, E18			
E04-E07, E15, E16, E19-E31			
P01, P09-P14			
P02-P08, P15-P31			
F01-F03, F10-F11			
F04-F09, F12-F28			
F29			
F30, F31			
H01-H31			
L01-L03 L05-L09			
L04, L10-L31			
WL Remote Control LED Display			
Run			
Timer			
: Off /			
: On /			
Service			

Connector

8-25

Standby

Blinking

Alternately

Alternately

Alternately

Alternately

Simultaneously

Simultaneously

Simultaneously

Simultaneously

Alternately

Alternately

Simultaneously

: Blinking (0.5 sec. intervals)

Fig. 8-36

Sensor Button

Fig. 8-37

[Previous Page](#)
[Next Page](#)

1

...

514

515

516

517

Quick Links:

[Indoor Unit](#)

[Technical Data](#)

[Outdoor Unit](#)

[Unit Specifications](#)

Related Manuals for Sanyo SPW-C256VH

[Air Conditioner Sanyo Big PACi 18 Series Technical Data & Service Manual](#)

Big pack i dc inverter (275 pages)

[Air Conditioner Sanyo ECOi C0705DXHN8 Brochure & Specs](#)

2 and 3 pipe electric vrf systems (10 pages)

[Air Conditioner Sanyo MINI ECO-i SPW-CR365GXH56B Service Manual](#)

(252 pages)

[Air Conditioner Sanyo SPW-T253G56 Service Manual](#)

Split system air conditioner (71 pages)

[Air Conditioner Sanyo SPW-D253G56 Service Manual](#)

Split system air conditioner (66 pages)

[Air Conditioner Sanyo SPW-CR365GXH56 Technical Data Manual](#)

Mini eco-i system (346 pages)

[Air Conditioner Sanyo Mini ECO-i SPW-ASR74GXH56\(A/B\) Installation Instructions Manual](#)

System air conditioner (49 pages)

[Air Conditioner Sanyo SPW-C1155DXHN8 Technical Data & Service Manual](#)

2-way eco-i multi system (242 pages)

[Air Conditioner Sanyo SPW-U253GH56 Service Manual](#)

Split system air conditioner (108 pages)

[Air Conditioner Sanyo SPW-T253GH56 Service Manual](#)

Split system (106 pages)

[Air Conditioner Sanyo SPW-D253GH56 Service Manual](#)

Split system (108 pages)

[Air Conditioner Sanyo SPW-C0705DZH8 Technical Data Manual](#)

3-way eco-i multi system 5 series (703 pages)

[Air Conditioner Sanyo SPW-C483GYH8 Service Manual](#)

Eco multi system (235 pages)

[Air Conditioner Sanyo SPW-CR1503GDYH8 Technical Data & Service Manual](#)

W-eco multi system series (377 pages)

[Air Conditioner Sanyo SPW-FTR124EH56 Installation And Operation Manual](#)

Dc inverter air conditioner for refrigerant r410a (32 pages)

[Air Conditioner Sanyo SPW-CR363GVH8 Service Manual](#)

(262 pages)

Related Content for Sanyo SPW-C256VH

[SAP-K181AA If A Sensor Is Defective](#)

Sanyo SAP-K181AA

[SAP-K181GJH If A Sensor Is Defective](#)

Sanyo SAP-K181GJH

[SAP-K71GH If A Sensor Is Defective](#)

Sanyo SAP-K71GH

[CM2472 Trouble Diagnosis By Error Monitop Lamps](#)

Sanyo CM2472

[SAP-K71GJA-S If A Sensor Is Defective](#)

Sanyo SAP-K71GJA-S

[SAP-K71GJHA If A Sensor Is Defective](#)

Sanyo SAP-K71GJHA

[SPW-C0705DZH8 The Self-Diagnosis Function Display And What Is](#)

[Detected](#)

Sanyo SPW-C0705DZH8

[C4272R Sensor Temperature Display Function \(Displayed Both When Operating And Stopped\)](#)

Sanyo C4272R

This manual is also suitable for:

[Spw-c486vh8Spw-c606vh8Spw-xdr124gh56\(a/b\)Spw-x125hSpw-xm125hSpw-c366vh](#) ... [Show all](#)

[Save PDF](#)