



# **TOSHIBA**

Toshiba HDR5010KB Quick Start Manual



1  
2

--


•

Bookmarks

--

## Quick Links

[Download this manual](#) See also: [Owner's Manual](#)

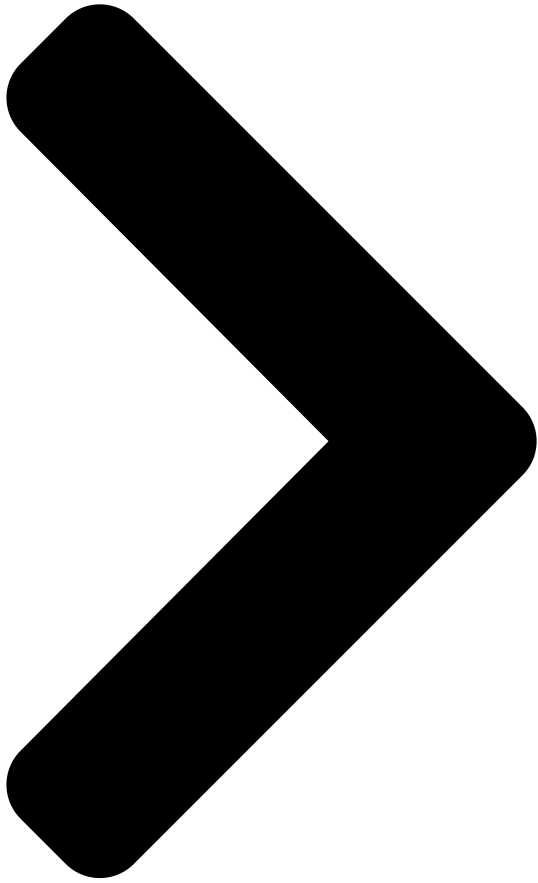

Enlarged version



### ③ Connecting Equipment

r |

wall socket. Only switch on the wall socket when all cables have been attached.  
Please refer to page 13 of the User Guide for information on connecting equipment using  
a HDMI cable, a USB cable, a USB Flash drive or an audio system using a SPDIF cable.

r

22/07/2010 10:46



Inserting the Batte

[Next Page](#)

1  
2

## Related Manuals for Toshiba HDR5010KB

[DVR Toshiba HDR5010KB Owner's Manual](#)

Toshiba hdr5010kb digital tv recorder owner's manual (48 pages)

[DVR Toshiba HDR5010 Owner's Manual](#)

Freeview hd tv recorder (48 pages)

[TV Receiver Toshiba HDR5010KB Quick Start Manual](#)

Digital tv recorder (2 pages)

[DVR Toshiba DVS32-240-2T Software Manual](#)

Xvs - dvs - hvs digital video recorder (105 pages)

[DVR Toshiba HDS-M5200 series User Manual](#)

Stand alone digital video recorder (103 pages)

[DVR Toshiba SURVEILLIX KV-KLR Operation Manual](#)

(124 pages)

[DVR Toshiba D-RW2SU Owner's Manual](#)

D-rw2su user's guide (157 pages)

[DVR Toshiba D-R410KU Owner's Manual](#)

D-r410ku user's guide (101 pages)

[DVR Toshiba DR430KU Owner's Manual](#)

Dvd video recorder (110 pages)

[DVR Toshiba DR430KU Owner's Manual](#)

Dr430ku user's guide (103 pages)

[DVR Toshiba SD-100X Owner's Manual](#)

Toshiba dvd video player sd-100x (47 pages)

[DVR Toshiba RD-XS54SU Owner's Manual](#)

Hdd/dvd video recorder (199 pages)

[DVR Toshiba v632uk Owner's Manual](#)

(28 pages)

[DVR Toshiba DR570KU Owner's Manual](#)

Dr570ku user's guide (118 pages)

[DVR Toshiba RD-97DTKB Service Manual](#)

Hdd & dvd (75 pages)

[DVR Toshiba SD-1600 Owner's Manual](#)

Toshiba dvd player owner's manual sd-1600 (46 pages)

## Summary of Contents for Toshiba HDR5010KB

### [Page 1: Inserting The Batteries Into The Remote Control](#)

DVD recorder. Cable not supplied. HDR5010KB QUICK START MANUAL Plug a HDMI cable between the HDMI OUT socket of the recorder and your TV. Cable not supplied. Plug the supplied AC mains adapter between the power socket of the recorder and a standard © 2010 Toshiba Corporation wall socket. Only switch on the wall socket when all cables have been attached. Digital TV recorder Remote control Batteries AC mains adapter Please refer to page 13 of the User Guide for information on connecting equipment using (2xR3/AAA) a HDMI cable, a SCART cable, a USB Flash drive or an audio system using a SPDIF cable.

### [Page 2: Overview Of The Remote Control](#)

( / / / buttons). 5. A summary screen, like the one below, is shown. Press the [OK] button to exit the automatic tuning INFO - Displays programme and recording information. process. SAVER - Displays the screen saver. 2& TV/RAD - Switches between Digital TV channels and Digital Radio channels. - Turns the TV's sound on/off\*. Ch. +/- - Selects the next/previous channel. \*Once the remote control has - Returns to the previous channel watched. Switches between 4 been programmed to operate your and 24 hours advance in EPG. equipment. HDMI 2 - Switches the

input mode to HDMI 2. USB - Switches the input mode to USB. Congratulations the Digital TV recorder is now ready to use. STB - Switches the Digital TV recorder on/into Standby. U-MAN-002-09 © 2010 Toshiba Corporation. Printed in UK 78-010-043-10 HD5010KB Quick Start Guide.indd 2 22/07/2010 10:46...