

Chapter 1 Product Introduction; Before You Proceed; Motherboard Overview - Asus Z170-K User Manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85



•

[Table of Contents](#)

•

Bookmarks



Product introduction

1.1

Before you proceed

Take note of the following precautions before you install motherboard components or change

any motherboard settings.

- Unplug the power cord from the wall socket before touching any component.

- Before handling components, use a grounded wrist strap or touch a safely grounded

object or a metal object, such as the power supply case, to avoid damaging them due to static electricity.

• Hold components by the edges to avoid touching the ICs on them.

• Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that came with the component.

• Before you install or remove any component, ensure that the ATX power supply is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, or components.

1.2

Motherboard overview

Before you install the motherboard, study the configuration of your chassis to ensure that the

motherboard fits.



Unplug the power cord before installing or removing the motherboard. Failure to do so can cause you physical injury and damage to motherboard components.

1.2.1

Placement direction

When installing the motherboard, place it into the chassis in the correct orientation. The edge

with external ports goes to the rear part of the chassis as indicated in the image.

1.2.2

Screw holes

Place six screws into the holes indicated by circles to secure the motherboard to the chassis.

Do not overtighten the screws! Doing so can damage the motherboard.

ASUS Z170-K



1

1-1

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
8
9
10
11
12
13
14
15

Quick Links:

[Motherboard Overview](#)

[Motherboard Layout](#)

[System Memory](#)

[Connectors](#)

[Onboard Led](#)

Related Manuals for Asus Z170-K

[Motherboard Asus B150-A Technical Manual](#)

Pin definition (18 pages)

[Motherboard Asus Z170-K Quick Start Manual](#)

(11 pages)

[Motherboard Asus Z170-P Manual](#)

(86 pages)

[Motherboard Asus Z170 PRO GAMING Manual](#)

(96 pages)

[Motherboard Asus Z170 PRO GAMING User Manual](#)

(100 pages)

[Motherboard Asus Z170-A User Manual](#)

(130 pages)

[Motherboard Asus Z170M-E D3 User Manual](#)

(85 pages)

[Motherboard Asus Z170-P D3 User Manual](#)

(85 pages)

[Motherboard Asus Z170-AR Manual](#)

(130 pages)

[Motherboard Asus SABERTOOTH Z170 MARK 1 Accessory Installation Manual](#)

(10 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus Z170I PRO GAMING Manual](#)

(86 pages)

[Motherboard Asus SABERTOOTH Z170 Manual](#)

(174 pages)

[Motherboard Asus Z170-E Manual](#)

(128 pages)

[Motherboard Asus Z170-DELUXE Series User Manual](#)

(186 pages)

[Motherboard Asus Z170-PRO Manual](#)

(170 pages)

Related Content for Asus Z170-K

[Z790-AYW OC WIFI Chapter 1: Product Introduction](#)

Asus Z790-AYW OC WIFI

[Pro Q670M-CE Chapter 1: Product Introduction](#)

Asus Pro Q670M-CE

[Pro Q670M-CE D4 Chapter 1: Product Introduction](#)

Asus Pro Q670M-CE D4

[PRIME B760M-F D4 Chapter 1: Product Introduction](#)

Asus PRIME B760M-F D4

[PRIME A620-PLUS WIFI6 Chapter 1: Product Introduction](#)

Asus PRIME A620-PLUS WIFI6

[Z790 GAMING WIFI7 Chapter 1: Product Introduction](#)

Asus Z790 GAMING WIFI7

[PRIME X299-A Series Chapter 1: Product Introduction](#)

Asus PRIME X299-A Series

[A620M-AYW WIFI Chapter 1: Product Introduction](#)

Asus A620M-AYW WIFI

This manual is also suitable for:

Z170-p

[Save PDF](#)