



Sanyo DVD-SL33 Instruction Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

Table Of Contents

19



•

[Table of Contents](#)

•

Bookmarks

Quick Links

[1 Playable Discs](#)

[Download this manual](#)

See also: [Service Manual](#) , [Instruction Manual](#)



DVD-SL33

DVD-SL330

18

[Table of Contents](#)

[Next Page](#)

S

1
2
3
4
5

Related Manuals for Sanyo DVD-SL33

[DVD Player Sanyo DVD-SL33 Instruction Manual](#)

Sanyo instruction manual dvd video player dvd-sl33 (38 pages)

[Dvd video player Sanyo DVD-SL33 Service Manual](#)

(30 pages)

[DVD Player Sanyo DVD-SL33 Service Manual](#)

(20 pages)

[DVD Player Sanyo DVD-SL330 Service Manual](#)

(42 pages)

[DVD Player Sanyo DVD-SL330\(AU\) Service Manual](#)

(42 pages)

[DVD Player Sanyo Fisher DVD-SL30 Service Manual Supplement](#)

Dvd video player (18 pages)

[DVD Player Sanyo DVD-SL33KR Service Manual](#)

(32 pages)

[DVD Player Sanyo DVD-SL33KR Service Manual](#)

(32 pages)

[DVD Player Sanyo DVD-SL38KR Service Manual](#)

(33 pages)

[DVD Player Sanyo DVD-SL25 Service Manual](#)

(39 pages)

[DVD Player Sanyo DVD-SL25 Instruction Manual](#)

(21 pages)

[DVD Player Sanyo DVD-SL22 Service Manual](#)

(38 pages)

[DVD Player Sanyo DVD-SL20 Service Manual](#)

(36 pages)

[DVD Player Sanyo DVD-SL20V Service Manual](#)

(46 pages)

[DVD Player Sanyo DVD-SL22 Instruction Manual](#)

(16 pages)

[DVD Player Sanyo DVD-SL40 Service Manual](#)

(14 pages)

Summary of Contents for Sanyo DVD-SL33

[Page 1](#) DVD-SL33 INSTRUCTION MANUAL DVD-SL330 DVD Player PICTURE z/ON LAST MEMO OPEN/CLOSE MODE PROGRAM REPEAT A-B REPEAT /RANDOM ANGLE ON SCREEN ZOOM ANGLE REPLAY SUBTITLE CHANGE SETUP MENU SUBTITLE ON/OFF AUDIO TOP MENU RETURN REV SLOW FWD SLOW PAUSE/STEP PREV NEXT...

[Page 2](#) PRECAUTIONS CAUTION - INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM. ADVARSEL - USYNLIG LASER STRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION, UNDGÅ UDSÆTTELSE FOR STRÅLING. VARNING - OSYNLIG LASER STRÅLNING NÅR DENNA DEL ÄR ÖPPNAD CLASS 1 LASER PRODUCT OCH SPÄRR ÄR URKOPPLAD.

[Page 3](#) CONTROLS Front Panel z/ON OPEN/CLOSE 5. Stop button (n) 1. Disc tray 2. Open/Close button (q) 6. Play button (a) 7. Skip/Next/Previous buttons (f, e) 3. Display 4. Remote sensor (IR) 8. Power button (z/ON) FL Display Digital REP 1...

[Page 4: Inserting Batteries](#)

REMOTE CONTROL Controls 1. Power button (z/ON) 2. Last memory button (LAST MEMO) 3. Picture mode button (PICTURE MODE) 4. Open/Close button (OPEN/CLOSE) 5. A-B repeat button (A-B REPEAT) 6. Repeat button (REPEAT) 7. Angle replay button (ANGLE REPLAY) PICTURE z/ON LAST MEMO OPEN/CLOSE...

[Page 5](#) CONNECTIONS Before connections Do not connect the unit to a VCR directly. The playback picture will be distorted because DVD disc are copy protected. When you connect the unit to your TV and other equipment, be sure to turn off the power and disconnect all of the equipment from the wall outlet until all the connections have been made.

[Page 6: Playable Discs](#)

Connecting to a digital multi-channel AV amplifier The AV amplifier has to be able to process the DTS audio signal in order to play a DVD with DTS. If it cannot, then you will not be able to The digital multi-channel sound of a DVD can best be decoded and hear the DVD.

[Page 7: Basic Operation](#)

- Press the n button. The unit stops completely. 1. Press the z/ON button. "SANYO" logo appears on the TV screen. To turn off the power, press the z/ON button. "----" blinks, and then "NO DISC" appears on the FL display.

[Page 8: Various Playing Functions](#)

VARIOUS PLAYING FUNCTIONS " " may appear on the TV screen during operation. This icon means that the function is not available on the disc now. Selecting a DVD Menu [DVD] Chapter Search [DVD] 1. Press the MENU button. The main menu screen will appear. 1.

[Page 9](#) Frame by Frame Advance Playback [DVD] [VCD] Repeat Playback Press the k PAUSE/STEP button during play. Each time the button is Press the REPEAT button during playback (or programmed playback) pressed, the picture advances one frame. of the title (or track) you want repeat. Press the a PLAY button to return to normal play.

[Page 10: Selecting Audio Soundtrack Language \(Multi-Language\) \[Dvd\]](#)

Programmed Play [VCD] [CD] Notes: In some cases, the subtitle language is not changed to the se- Up to 20 selections can be programmed. lected one. When a disc supporting closed caption is played, the subtitle and Programming procedure the closed caption may overlap each other on the TV screen. In 1.

[Page 11: Selecting On-Screen Information](#)

Selecting on-screen information Example for Audio CD: 1. Press the ON SCREEN button during play. Press the ON SCREEN button repeatedly to show the disc information (Title, Chapter, Title elapsed playing time, Language, etc.). Track elapsed playing time Example for DVD: 02:29 1.

[Page 12: Before Starting](#)

MP3 OPERATION Before Starting MP3 CD Playback This unit can play back the CD that has recorded music data, MP3 files. 1. Load the MP3 CD. The file system is ISO9660 Level 1 and Level 2. "FILE" appears on the display and a label of contents in the first If the CD has both audio CD tracks and MP3 files, only audio CD directly appears on the screen, tracks are played.

[Page 13: Picture Cd Operation](#)

PICTURE CD OPERATION You can view images from KODAK Picture/JPEG files. If you press the MENU button, the file list appears. The file system is ISO9660 level 1 and level 2. Example: If the CD has both audio CD tracks and KODAK Picture/JPEG files, only audio CD tracks are played.

[Page 14: Setting Language](#)

INITIAL SETTINGS FOR DVD Once the initial settings have been completed, the unit can always be Setting Display operated under the same conditions. 1. Press the SETUP button in the stop

mode. The setup screen The settings will be retained in the memory until they are changed, appears.

[Page 15](#) Setting digital out Setting Parental If the operation DIGITAL OUT socket is connected to the amplifier, you 1. Press the SETUP button in the stop mode. The setup screen must set as follows. appears. 1. Press the SETUP button in the stop mode. The setup screen appears.

[Page 16: Language Code List](#)

LANGUAGE CODE LIST Enter the appropriate code number for the initial settings "Audio", "Subtitle" and "DVD Menu". Code Language Language Code Language Language Code Language Language abbreviation abbreviation abbreviation 6565 Afar 7369 Interlingue 8278 Kirundi 6566 Abkhazian 7375 Inupiak 8279 Romanian 6570 Afikaans...

[Page 17: Troubleshooting Guide](#)

TROUBLESHOOTING GUIDE If you have followed the instructions and are having difficulty operate the unit, locate the SYMPTOM in the left column below. Check the corresponding POSSIBLE CAUSE and CORRECTIVE ACTION columns to locate and remedy the problem. SYMPTOM POSSIBLE CAUSE CORRECTIVE ACTION No picture.

[Page 18: Specifications](#)

(75Ω) AUDIO OUT: IMPORTANT INFORMATION L: 2 V rms Because its products are subject to continuous improvement, SANYO R: 2 V rms reserves the right to modify product designs and specifications without notice and without incurring any obligation. SANYO Electric Co., Ltd.

This manual is also suitable for:

[Dvd-sl330](#)