



Toshiba 19SLV411U Owner's Manual

1
2
3
4
5
6
7
8
9

Table Of Contents

10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[Download this manual](#) See also: [Owner's Manual](#)



19SLV411U

24SLV411U

TOSHIBA

32SLV411U
Leading Innovation >>>

For an overview of steps for setting up your new TV, see page 11.

Note: To display a High Definition picture, the TV must be receiving a High Definition signal (such as an over-the-air High Definition TV broadcast, a High Definition digital cable program, or a High Definition digital satellite program). For details, please contact your TV antenna installer, cable provider, or satellite provider.

Owner's Manual

All Rights Reserved

Owner's Record

The model number and serial number are on the back of your LCD TV / DVD combination.

Record these numbers in the spaces below.

Refer to these numbers whenever you communicate with your Toshiba dealer about this LCD TV / DVD combination.

Model number:

Serial number:

HDA51L19001

TOSHIBA
Leading Innovation >>>

Owner's Manual

[Table of Contents](#)

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

Related Manuals for Toshiba 19SLV411U

[TV DVD Combo TOSHIBA 24SLV411U Owner's Manual](#)

Integrated high definition lcd tv/dvd combination (337 pages)

[TV DVD Combo Toshiba 19SLV411U Owner's Manual](#)

Integrated high definition lcd tv/dvd combination (111 pages)

[LCD TV Toshiba 19SLV411U Specifications](#)

Brochure (2 pages)

[TV DVD Combo Toshiba 19SLV411U Energy Manual](#)

Energy guide (1 page)

[LCD TV Toshiba 24SLV411U Specifications](#)

Toshiba 24slv411u: specifications (2 pages)

[TV DVD Combo Toshiba 32SLV411U Specifications](#)

Led dvd combo hdtv (2 pages)

[DVD Player Toshiba 24SLV411U Energy Manual](#)

Energy guide (1 page)

[TV DVD Combo Toshiba 32SLV411U Energy Manual](#)

Energy guide (1 page)

[TV Toshiba 19SL410U Specifications](#)

19" class led hdtv (2 pages)

[TV Toshiba 19SL738B Owner's Manual](#)

Digital series (61 pages)

[TV Toshiba 19S1400 Series Owner's Manual](#)

Led tv (27 pages)

[TV Toshiba 13A26 Owner's Manual](#)

(15 pages)

[TV Toshiba 19A25 Service Manual](#)

(33 pages)

[TV Toshiba 19AV500U Owner's Manual](#)

Integrated high definition lcd television (57 pages)

[TV Toshiba 19BV500B Owner's Manual](#)

19" bv series (36 pages)

[TV Toshiba 19DV500B Owner's Manual](#)

(45 pages)

Summary of Contents for Toshiba 19SLV411U

Page 1 For an overview of steps for setting up your new TV, see page 11. Refer to these numbers whenever you Note: To display a High Definition picture, the TV must be communicate with your Toshiba dealer about receiving a High Definition signal (such as an over-the-air High this LCD TV / DVD combination.

Page 2: Safety Precautions

Dear Customer, CHILD SAFETY: Thank you for purchasing this Toshiba LCD TV / DVD combination. This manual will help you use the It Makes A Difference How and Where You Use

Your Flat many exciting features of your new LCD TV / DVD Panel Display combination.

[Page 3: Important Safety Instructions](#)

- ALWAYS turn off the TV and unplug the power Important Safety Instructions cord to avoid possible electric shock or fire. 1) Read these instructions. • NEVER allow your body to come in contact with any broken glass or liquid from the damaged 2) Keep these instructions.

[Page 4](#) Care (The sturdy tie and hook is applicable to 32SLV411U.) For better performance and safer operation of your TOSHIBA LCD TV / DVD combination, follow these 26) The apparatus shall not be exposed to dripping or recommendations and precautions: splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.

[Page 5: Choosing A Location For Your Lcd Tv / Dvd Combination](#)

If these sounds become frequent or continuous, damage to the LCD panel. unplug the power cord and contact a Toshiba 2) Place the TV on a sturdy, level surface that can Authorized Service Provider.

[Page 6: Removing The Pedestal Stand](#)

TV. drops of water form on the outside of the glass. In the same way, moisture may condense on this unit's 19SLV411U VESA Mounting Pattern internal optical pick-up lens, one of the most crucial internal parts of the unit.

[Page 7: Notes On Discs](#)

Notes on copyright Notes on discs The unauthorized recording, use, distribution, or On handling discs revision of copyrighted materials including, without limitation, television programs, videotapes, and DVDs, • Do not touch the playback side of the disc. Handle is prohibited under the Copyright Laws of the United the disc as shown in the figure below.

[Page 8: Playable Discs](#)

Because of problems and errors that can occur equipment. during the creation of DVD and CD software and/ or the manufacture of DVD and CD discs, Toshiba cannot assure that this LCD TV / DVD combination will successfully play every disc bearing the DVD and CD logos.

[Page 9: Trademark Information](#)

LCD Display technology EXPOSURE. and are not an indication of malfunction; - TO PREVENT DIRECT EXPOSURE TO LASER therefore, Toshiba is not responsible for BEAM, NEVER OPEN THE ENCLOSURE. perceived issues resulting from these VISIBLE LASER RADIATION MAY BE symptoms.

[Page 10: Table Of Contents](#)

Unlocking programs temporarily44 Acceptable signal formats for PC IN and HDMI terminals ...75 Using the input lock feature44 Limited United States Warranty LCD TV/DVD Combination ..76 Locking channels44 Limited Canadian Warranty for Toshiba Brand Flat Panel Televisions77...

[Page 11: Chapter 1: Introduction](#)

- The following are just a few of the many exciting objects to allow proper ventilation. Inadequate features of your new Toshiba widescreen, integrated ventilation may cause overheating, which will damage the TV. THIS TYPE OF DAMAGE HD, LCD TV / DVD combination:...

[Page 12: Tv Front, Top And Side Panel Controls And Connections](#)

Chapter 1: Introduction TV front, top and side panel controls and connections 19SLV411U / 24SLV411U / 32SLV411U Left side panel TV front Power On / Standby LED — INPUT / EXIT — Repeatedly press to change the Power LED (Green) = Power indicator source you are viewing.

[Page 13: Tv Back Panel Connections](#)

USB port — To access JPEG or MP3 files. is shared with HDMI 1 analog audio input terminal, and its use can be configured in the Audio Setup menu (□ page 45). Note: 19SLV411U and

32SLV411U are used for illustration purposes.

[Page 14: Chapter 2: Connecting Your Tv](#)

® (ColorStream is Toshiba's brand of component video.) These cables are typically color-coded red, green, and Connecting TV to a power source blue. Separate audio cables are required for a complete connection.

[Page 15: Connecting A Vcr, And Antenna, Cable Tv](#)

Chapter 2: Connecting your TV Connecting a VCR, and antenna, Connecting a camcorder Cable TV You will need: standard A/V cables • To view the camcorder video: You will need: Select the VIDEO video input source on the TV.* coaxial cables •...

[Page 16: Connecting A Dvd Player With Colorstream ® \(Component Video\)](#)

Chapter 2: Connecting your TV Connecting a DVD player with Connecting a satellite receiver ColorStream ® (component video) Green Blue White White You will need: You will need: standard audio cables • component video cables standard audio cables • • –...

[Page 17: Connecting An Hdmi Or Dvi Device To The Hdmi Input](#)

Chapter 2: Connecting your TV To view the HDMI device video: Connecting an HDMI or DVI Select the HDMI 1 or HDMI 2 video input source on the device to the HDMI ® input TV.* The HDMI input on your TV receives digital audio To select the video input source, press on the INPUT...

[Page 18: Regza-Link ® Connection](#)

This feature is limited to models incorporating • ® Toshiba's REGZA-LINK . However, Toshiba is not liable for those operations. Refer to the individual instruction manuals for compatibility information. Note: This feature may not work properly depending on the devices that are connected.

[Page 19: Connecting A Digital Audio System](#)

Chapter 2: Connecting your TV Press t or u to select either Dolby Digital or PCM, Connecting a digital audio system depending on your device. □ "Selecting the optical audio output format" on page The TV's DIGITAL AUDIO OUT terminal outputs a 40).

[Page 20: Connecting A Personal Computer \(Pc\)](#)

Chapter 2: Connecting your TV Signal names for mini D-sub 15-pin connector • Connecting a personal computer (PC) Signal Signal Signal With either the PC IN or HDMI connection, you can watch name name name your computer's display on the TV and hear the sound Ground Reserved from the TV's speakers.

[Page 21: Chapter 3: Using The Remote Control](#)

Chapter 3: Using the remote control Preparing the remote control for Installing the remote control batteries The remote control can operate your LCD TV / Open the battery lid at the bottom of DVD combination and control the basic functions remote controller.

[Page 22: Learning About The Remote Control](#)

Chapter 3: Using the remote control 1 POWER turns the TV on and off. When the TV is Learning about the remote control on, the power LED indicator on the TV front will be illuminated in green. The buttons used for operating the LCD TV / DVD 2 EJECT ejects the disc from the disc slot.

[Page 23](#) Chapter 3: Using the remote control 23 Arrow buttons (pqtu) When a menu is on-screen, these buttons select or adjust programming menus. (Also see t / u .) 24 CANCEL / EXIT closes on-screen menus. 25 TOP MENU accesses the top menu of DVDs that contain two or more titles(□...

[Page 24: Chapter 4: Menu Layout And Navigation](#)

Chapter 4: Menu layout and navigation Main menu layout The tables below and on the next page provide a quick overview of your TV's menu system. To open the main menus (illustrated

below), press on the remote control or MENU on the TV control panel. Icon Item Option...

[Page 25: Setup / Installation Menu Layout](#)

Chapter 4: Menu layout and navigation Setup / Installation menu layout The Installation menu contains the Terrestrial and System Status menus. To open the Installation menu (illustrated below), press on the remote control or MENU on the TV control panel, open the Setup menu, select Installation, and press Icon Item Option...

[Page 26: Chapter 5: Setting Up Your Tv](#)

Chapter 5: Setting up your TV Initial Setup Configuring the antenna input source for the ANT/CABLE terminal When you first turn on or reset the TV, the Initial Setup window will appear. In the Menu Language field, press t or u to To configure the ANT/CABLE input source: and open the Setup menu.

[Page 27: Setting Channel Skip](#)

Chapter 5: Setting up your TV Note: To cancel channel programming, press on the remote • You must configure the ANT/CABLE input source control (or highlight Cancel in the on-screen display and before programming channels (□ page 26). press • The automatic channel programming process When channel programming is finished, press will erase channels that were previously to view the programmed channels.

[Page 28: Setting The Hdmi Audio Mode](#)

Chapter 5: Setting up your TV To manually add digital subchannels on a Setting the HDMI ® audio mode physical channel: ® To set the HDMI audio mode: Use the Channel Numbers and the Dash () on the remote control to enter the channel number (for and open the Sound menu.

[Page 29: Viewing The Digital Signal Meter](#)

Chapter 5: Setting up your TV To set the Daylight Saving Time status: Viewing the digital signal meter Press t or u to select Yes or No, highlight Done, You can view the digital signal meter in the ANT/ and then press CABLE digital TV input source only.

[Page 30: Chapter 6: Using The Tv's Features](#)

Chapter 6: Using the TV's features Press repeatedly to highlight the desired input INPUT Selecting the video input source source, and then press to view Note: ® • When selecting REGZA-LINK input sources To select the video input source to view: from the popup window using , some INPUT...

[Page 31: Tuning Channels](#)

Chapter 6: Using the TV's features Press p or q to highlight the video source you Tuning channels want to label. Tuning channels using the Channel Browser ™ ™ The Channel Browser provides an easy navigation interface for all your channels and inputs. This Press t or u to select the desired label for that feature allows you to: Navigate the contents of all of your inputs.

[Page 32: Elements Of The Channel Browser](#)

Chapter 6: Using the TV's features Elements of the Channel Browser ™ Press q to highlight History List, and then press t 1 Current list (History, ANT/CABLE, Inputs, or u to select the setting you prefer: either On, or Favorites, or REGZA-LINK) 2 Input type Off.

[Page 33: Setting The Channel Tuning Mode](#)

Chapter 6: Using the TV's features To tune to a channel or input in Select mode: Setting the Channel Tuning Mode t or u to open the This feature allows you to choose how tuning will be While watching TV, press handled for analog and digital channels when the TV Channel Browser ™ ...

[Page 34: Tuning To The Next Programmed Channel](#)

Chapter 6: Using the TV's features Tuning to the next programmed Switching between two channels channel using SurfLock ™ ™ To tune to the next programmed channel: The SurfLock feature temporarily "memorizes" one channel to the button, so you can return to that Press on the remote control or TV control channel quickly from any other channel by pressing...

[Page 35](#) Chapter 6: Using the TV's features To select the picture size using the menus: Picture Size Select Picture Size in the Theater Settings menu. TheaterWide 2 Press t or u to select the desired picture size setting. (for letter box programs) Highlight Done and press Note: Some of the picture sizes may not be available depending on the receiving signal...

[Page 36: Scrolling The Theaterwide Picture \(Theaterwide 2 And 3 Only\)](#)

Chapter 6: Using the TV's features To set the scroll settings: Picture Size and open the Picture menu. Press Highlight Theater Settings and press Some program formats will display with sidebars In the Picture Size field, select either and/or bars at the top and bottom. TheaterWide 2 or TheaterWide 3 (you cannot scroll in any other mode).

[Page 37: Selecting The Cinema Mode](#)

Chapter 6: Using the TV's features To turn on the auto aspect ratio feature: Adjusting the picture and open the Picture menu. Press Selecting the picture mode Highlight Theater Settings and press In the Auto Aspect Ratio field, select On. You can select your desired picture settings from four To save the new settings, highlight Done and press different modes, as described below.

[Page 38: Adjusting The Picture Quality](#)

Chapter 6: Using the TV's features Adjusting the picture quality Using the closed caption mode You can adjust the picture quality (Contrast, Base closed captions™ Backlight, DynaLight, Brightness, Color, Tint, and Sharpness.) to your personal preferences. The closed caption mode has two options: Pressing t Pressing u Captions—An on-screen display of the dialogue,...

[Page 39: Digital Cc Settings](#)

Chapter 6: Using the TV's features Digital CC Settings To select closed captions: and open the Preferences menu. You can customize the closed caption display Press characteristics by changing the background color, Highlight CC Selector and press Press t or u to select the desired service. opacity, text size, type, edge, and color.

[Page 40: Selecting Stereo / Sap Broadcasts](#)

Chapter 6: Using the TV's features Selecting stereo / SAP broadcasts Using the MTS button If you press when an analog channel is The multi-channel TV sound (MTS) feature allows you to output high-fidelity stereo sound. MTS tuned: also can transmit a second audio program (SAP) The Analog Audio bar will appear and will display •...

[Page 41: Using The Dolby Digital Dynamic Range Control Feature](#)

Chapter 6: Using the TV's features ® Number buttons to enter a new four-digit code, Using the Dolby Digital Dynamic enter the code a second time to confirm, and Range Control feature press This dynamic range control feature causes Dolby Digital dynamic range to be further compressed, allowing you to switch from digital to analog broadcasts at the same dynamic range.

[Page 42: Downloading An Additional Rating System For Blocking Tv Programs And Movies](#)

• The additional rating system is not designed, transmitted or controlled by the TV or Toshiba, Note: The currently tuned station must be receiving a digital signal before an additional nor is the availability of an additional rating rating system can be downloaded.

[Page 43: Blocking Tv Programs By Canada Rating](#)

Chapter 6: Using the TV's features • To display the rating of the program you are Independent rating system for broadcasters watching, press on the remote control. If Ratings Description and Content themes it is rated " None " the word " NONE " appears Mature Audience Only (This program in the INFO screen (as shown below right).

[Page 44: Unlocking Programs Temporarily](#)

Chapter 6: Using the TV's features To lock channels: Unlocking programs temporarily From the Setup menu, highlight Installation and If you try to tune the TV to a program that exceeds press the rating limits you set, the TV will enter program lock mode and the following message will appear on- to select Terrestrial.

[Page 45: Using The Panel Lock Feature](#)

Chapter 6: Using the TV's features Press p or q to highlight the item you want to adjust. Using the panel lock feature Press t or u to make the appropriate adjustments. You can lock the control panel to prevent your settings from being changed accidentally (by children, for example).

[Page 46: Using The Media Player](#)

Maximum number of files: 500 / folder Player. Maximum photo resolution: 4096 x 4096 pixels Best photo resolution: 1366 x 768 pixels (19SLV411U, 32SLV411U) Automatically open: 1920 x 1080 pixels (24SLV411U) Gently insert a supported USB storage device to Music Player specifications: the USB port on the rear side of the TV.

[Page 47: Viewing Photo Files](#)

Chapter 6: Using the TV's features Viewing photo files To start slide show, press in the Single View mode. Press t or u to view the previous or next photo. There are three types of view modes. Multi View: To set Interval Time and Repeat settings: This view allows you to search for photos in a grid format.

[Page 48: During Playback](#)

Chapter 6: Using the TV's features During playback Contents Description Description Photo list (Multi View) Photo See page 47. Press to pause. • Sorting To normal playback, press • To sort the folders and files To locate a specific file, press repeatedly.

[Page 49: Setting The Sleep Timer](#)

Chapter 6: Using the TV's features To cancel the sleep timer: Contents Description Description Repeatedly press until it is set to 0 minute. Music list (Multi View) Music See page 47. Sorting Automatic Power Down To sort the folders and files to open the Quick Menu.

[Page 50: Using Regza-Link](#)

This is a new feature that uses CEC technology and open the Preferences menu. Press ® and allows you to control Toshiba REGZA-LINK Highlight REGZA-LINK Player Control and press compatible devices from the TV remote via HDMI connection (□ page 18).

[Page 51: Volume And Mute Controls Of Audio Receiver](#)

Chapter 6: Using the TV's features Note: When you turn on the Audio Receiver, VOLUME and MUTE controls of Audio change its input source or adjust the sound Receiver volume, the sound will be output from the audio receiver's speakers even if TV Speakers has With your TV's remote control, you can adjust or been selected.

[Page 52: Displaying Tv Status Information](#)

Chapter 6: Using the TV's features Displaying TV status information Understanding the auto power off feature To display TV status information : The TV will automatically turn itself off after Press on the remote control. approximately 15 minutes if it is tuned to a vacant The following information will display (if applicable): channel or a station that completes its broadcast for the day.

[Page 53: Chapter 7: Using The Tv's Advanced Features](#)

Chapter 7: Using the TV's advanced features Selecting the Color Temperature Using the advanced picture settings features You can change the quality of the picture by selecting from three preset Color Temperatures (Cool, Medium, and Warm), as described below. Using Dynamic Contrast Mode Picture Quality Dynamic Contrast detects changes in picture quality...

[Page 54: Using Cableclear Digital Noise Reduction](#)

Chapter 7: Using the TV's advanced features ® Using CableClear digital Noise Using the Game Mode feature Reduction You can use the Game Mode feature for shorter frame delays when playing a video game requiring ® The CableClear digital Noise Reduction feature split-second timing between the on-screen display allows you to reduce visible interference in your and input from the controller (such as music creation...

[Page 55: Chapter 8: Basic Disc Playback](#)

Chapter 8: Basic disc playback Playback resume function: Disc playback Your LCD TV / DVD combination supports playback resume function. This section shows you the basics on how to play a If you stopped the disc playback before it is disc.

[Page 56: Playback Navigation](#)

Chapter 8: Basic disc playback • In some instances the LCD TV / DVD combination Playing in slow motion (DVD/VCD) may take a minute or so to start disc playback. • When you load a disc with the playback side Press during playback.

[Page 57: Chapter 9: Advanced Disc Playback](#)

Chapter 9: Advanced disc playback Locating a specific scene Zoom function/Scene navigation [DVD] You can change the viewing scale of a picture by rescaled, use the arrow buttons pqt u to pan the using the Zoom function. Once the image has been Press during playback, still or stop mode.

[Page 58: Scene Bookmark](#)

Chapter 9: Advanced disc playback Scene bookmark Repeat playback/A-B repeat Scene bookmarks refer to specific points in the You can choose to repeat DVD playback by title playback range that have been marked for later or chapter. For audio CDs and Video CDs, you can repeat a single track or the entire disc.

[Page 59: Enabling A-B Repeat Mode \(Dvd/Vcd/Cd\)](#)

Chapter 9: Advanced disc playback Enabling A-B repeat mode (DVD/VCD/ Programmed playback/Random playback During playback, press at the point where You can program the playback sequence of tracks you would like the playback loop to begin. This on a Video CD. Or you can set the LCD TV / DVD sets your "A"...

[Page 60: Enabling Random Playback \(Vcd\)](#)

Chapter 9: Advanced disc playback To resume normal playback: Scene angle/Title selection/DVD In step 2, set Mode to Normal. menu To change the program: Changing the scene angle (DVD) 1. Set Mode to Program . 2. Press t or u, then p or q to select the When playing back a DVD recorded with multiangle playback position you want to change the track scenes, you can select the scene angle that you prefer.

[Page 61: Soundtrack Language/Audio Channel/Subtitle](#)

Chapter 9: Advanced disc playback Soundtrack language/Audio Playback information/VCD channel/Subtitle playback control Viewing the playback info (DVD/VCD) Selecting a soundtrack language (DVD) Press during playback. DVD mode You can select the soundtrack language when you Elapsed/remaining time Elapsed/remaining time for for current title current chapter play a multilingual DVD.

[Page 62: Mp3, Wma, Jpeg, And Audio Cd Operation](#)

Use of CD-RW discs for recording MP3 files is not recommended. You must obtain any required permission from copyright owners to download or use copyrighted content. Toshiba can not and does not grant such permission. MP3/WMA/JPEG/Audio CD information (CD) MP3/WMA/JPEG CD playback reminders •...

[Page 63: About The File Browser \(Cd\)](#)

Chapter 9: Advanced disc playback About the file browser (CD) To view the previous or next thumbnail page: Press Playing an audio file (CD) Load an MP3/WMA/Audio CD in the disc slot. The file browser appears on-screen. It may automatically play by composition of an audio file.

[Page 64: Viewing A Jpeg File \(Cd\)](#)

Chapter 9: Advanced disc playback Viewing a JPEG file (CD) Viewing a slide show (CD) If there are multiple JPEG files in the selected Load a disc containing JPEG files in the disc slot. directory, you can view them in a slide show. For The file browser appears on-screen.

[Page 65: Mp3, Wma, Jpeg And Audio Cd Playback Modes](#)

Chapter 9: Advanced disc playback Enabling random playback (CD) MP3, WMA, JPEG and Audio CD playback modes During stop mode, in the Option panel of the file browser, press p or q to select Mode. You can choose to repeat CD playback by track or the entire disc.

[Page 66: Programming The Playback Sequence \(Cd\)](#)

Chapter 9: Advanced disc playback Press p or q to select Program View, then press Programming the playback sequence (CD) MP3-1 Edit Mode In the Option panel of the file browser, press p MP3-2 Browser View MP3-3 Clear Program or q to select Edit Mode, then press WMA-3 Folder-1 Folder-2...

[Page 67: Chapter 10: Customizing Disc Playback](#)

Chapter 10: Customizing disc playback Customizing disc playback You can customize the disc playback settings to suit your preferences. Configuring the disc playback settings (DVD/VCD/CD) In DVD mode, press during stop mode. Parental E.B.L. : Off : Off : Off Menu :English Subtitle...

[Page 68](#) Chapter 10: Customizing disc playback Disc playback setup Go to Option Description page Menu Select the language for the DVD menu display. Subtitle Select the subtitle language for disc playback. Audio Select the audio language for disc playback. Select the language for the Setup screen display. Choose whether to show a status display whenever Display a button is pressed.

[Page 69](#) Chapter 10: Customizing disc playback Parental E.B.L. : Off : Off : Off Display Menu : English Menu :English Subtitle :English Picture Mode :Auto QSound TV Screen Set Password : 4:3 : On QSound Subtitle Set Password : On : English Audio :English JPEG Interval...

[Page 70](#) Chapter 10: Customizing disc playback Night Mode :Off Parental Menu E.B.L. : Off : English : Off :Off Digital Out :Bitstream Password QSound Subtitle TV Screen : On : English : 4:3 :Change Audio Display : English : On Picture Mode : Auto JPEG Interval : 5 Seconds...

[Page 71](#) Chapter 10: Customizing disc playback To temporarily cancel the parental restriction: 1) Load the restricted content DVD that you want to play. 2) Use the Channel Number buttons (0-9) to input the system password after the "Enter Password" message, then press This suspension of the parental restriction setting applies until disc is ejected.

[Page 72: Chapter 11: Troubleshooting](#)

Chapter 11: Troubleshooting Poor color or no color General troubleshooting The station may have broadcast difficulties. Try • another channel. Before calling a service technician, please check this Adjust the Tint and/or Color (□ page 38). • chapter for a possible cause of the problem and some Poor composite picture solutions you can try.

[Page 73: Led Indication](#)

• In the U.S., visit TAIS's Consumer Solution Center play it when contents that support two or more formats are played. on the web at <http://support.toshiba.com> or call Confirm contents of the USB storage device are 1-800-631-3811 • formats that correspond with this TV (□ page 46).

[Page 74: Chapter 12: Appendix](#)

19SLV411U: 9.9 lbs (4.5 kg) Speaker Type: 24SLV411U: 13.2 lbs (6.0 kg) 32SLV411U: 19.8 lbs (9.0 kg) 19SLV411U: Two 3-5/8 x 1 x 5/8 inches (91 x 25 x 15mm) Operating conditions 24SLV411U: Two 3-5/8 x 1 x 7/8 inches Temperature: 32°F - 95°F (0°C - 35°C)

[Page 75: Acceptable Signal Formats For Pc In And Hdmi Terminals](#)

Chapter 12: Appendix Acceptable signal formats for PC IN and HDMI terminals PC IN signal formats Note: Depending on the connected PC, the following status may occur; incorrect display, false format detection, picture position failure, blur, or judder. But this is not a malfunction of your TV. Format Resolution V.

[Page 76: Limited United States Warranty Lcd Tv/Dvd Combination](#)

OF TAIS. IN SOME CASES, YOU MAY BE RESPONSIBLE manual, review the section entitled "Concierge" located on our FOR DELIVERING THE PRODUCT TO A SERVICE Customer Support Web site at support.toshiba.com. If you ind CENTER. that service is needed, follow the

instructions provided on the Rental Units web site or please contact TAIS'...

[Page 77: Limited Canadian Warranty For Toshiba Brand Flat Panel Televisions](#)

Toshiba Brand Flat Panel Televisions applications, improper installation, improper operation, improper cleaning, improper Toshiba of Canada Limited ("TCL") makes the following maintenance, normal wear and tear, screen limited warranties to original consumers in Canada. burn or image retention caused by prolonged...

[Page 78](#) "Troubleshooting" section, in any representative or class proceeding against the and have visited support.toshiba.com. for additional Related Parties relating to any Dispute. If and where (continued)

[Page 79](#) A copy of the LGPL source code in this product not relect on the original authors' reputations. may be obtained by contacting Toshiba Consumer Solutions at (800) 631-3811. There will be a charge to Finally, any free program is threatened constantly cover the costs of providing the source code.

[Page 80](#) Chapter 12: Appendix a whole at no charge to all third parties under the terms equivalent access to copy the source code from the same of this License. place counts as distribution of the source code, even though third parties are not compelled to copy the source along with c) If the modiied program normally reads commands the object code.

[Page 81: The Libpng License Notices](#)

Chapter 12: Appendix time. Such new versions will be similar in spirit to the present and/or modify it under the terms of the GNU General version, but may differ in detail to address new problems or Public License as published by the Free Software concerns.

[Page 82: The Zlib License](#)

Chapter 12: Appendix Authors: The Contributing Authors and Group 42, Inc. speciically Simon-Pierre Cadieux permit, without fee, and encourage the use of this source Eric S. Raymond code as a component to supporting the PNG ile format Gilles Vollant in commercial products. If you use this source code in a and with the following additions to the disclaimer: product, acknowledgment is not required but would be There is no warranty against interference with your...

[Page 83](#) Note...

[Page 84](#) TOSHIBA AMERICA INFORMATION SYSTEMS, INC. Corporate Headquaters: 9740 IRVINE BLVD.; IRVINE, CA 92618 U.S.A. Visual Products Service and Support Dept: 1420-B TOSHIBA DRIVE, LEBANON, TN 37087, U.S.A. TOSHIBA OF CANADA LTD. HEAD OFFICE: 191 McNABB STREET, MARKHAM, ONTARIO, L3R 8H2, CANADA...

This manual is also suitable for:

[24slv411u32slv411u](#)