



Table of Contents




# Table of Contents

- 1 Back-Up Battery Installation
- 2 Battery Back-Up System
- 3 Power Supply
- 4 Adjusting the Clock
- 5 Listening to the Radio
- 6 Wake-Up Time Setting

- 7 Using the Wake-Up Timer
- 8 Snooze Mode
- 9 Using the Sleep Timer
- 10 Specifications

Download this manual

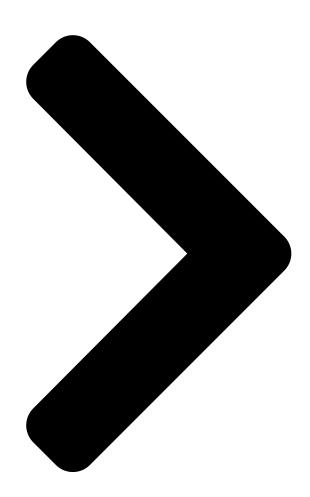

# RM-5090 INSTRUCTION MANUAL AM/FM Digital Alarm Clock Radio







### Related Manuals for Sanyo RM-5090

Clock Radio SANYO RM-630 User Manual

Am/fm clock radio with night light (11 pages)

Clock Radio SANYO RM-5750 Instruction Manual

Am/fm digital alarm clock radio (8 pages)

Clock Radio SANYO RM-6860 Instruction Manual

Am/fm digital alarm clock radio (8 pages)

Clock Radio SANYO RM-7970 Instruction Manual

Am/fm clock radio (2 pages)

Clock Radio SANYO RM-DB5 Instruction Manual

Dab+/fm clock radio (12 pages)

Clock Radio SANYO RM-X106W Instruction Manual

Am/fm clock radio (8 pages)

Clock Radio Sanyo RM-X105 Instruction Manual

(4 pages)

Clock Radio Sanyo RM-X100 Instruction Manual

(6 pages)

Clock Radio Sanyo RM-6090 Instruction Manual

Am/fm digital alarm clock radio (10 pages)

Clock Radio Sanyo RM-D500 Service Manual

Compact disc dual alarm clock radio (14 pages)

Clock Radio Sanyo RM-D500 Instruction Manual

Compact disc dual alarm clock radio (13 pages)

Clock Radio Sanyo RM-D500 Service Manual

Compact disc dual alarm clock radio (14 pages)

Clock Radio Sanyo RM-X500 Instruction Manual

Am/fm (15 pages)

Clock Radio Sanyo RM 5900 Service Manual

Digital clock radio (9 pages)

Clock Radio Sanyo RM-X100 AU Instruction Manual

(6 pages)

Clock Radio Sanyo RM5008 Service Manual

Digital clock radio (10 pages)

## Summary of Contents for Sanyo RM-5090

Page 1 RM-5090 INSTRUCTION MANUAL AM/FM Digital Alarm Clock Radio...

<u>Page 2</u> PRECAUTIONS CAUTION: THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING. NO OB- JECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS. The rating label is located on the bottom of the unit. Keep the radio away from heating appliances and electric sources that could cause static on the radio such as fluorescent lamps and motors.

<u>Page 3</u> CONTROLS 1. Earphone socket (EAR) 2. PM indicator (PM) 3. Time button (TIME) 4. Volume control (VOLUME) 5. Alarm button (ALARM) 6. Sleep button (SLEEP) 7. Snooze button

(SNOOZE) 8. Display 9. Hour button (HOUR) 10. Minute button (MIN) 11. Function switch (ON/OFF/ALARM-RADIO/ALARM-BUZZER) 12.

#### Page 4: Back-Up Battery Installation

BACK-UP BATTERY INSTALLATION Connect a standard 9V (006P/6F22) battery (not included) to the snap-on terminal match- ing the polarity. NOTE: If the time display is blinking when the mains returns after a failure, the back-up battery is exhausted and must be replaced. BATTERY BACK-UP SYSTEM This unit incorporates a battery back-up system which protects the clock, sleep timer and wake-up alarm functions from the mains failure with the battery installed.

#### Page 5: Power Supply

POWER SUPPLY Connect the mains lead to an AC 230-240V, 50Hz wall outlet. The function switch is mounted on the secondary side. The unit is not disconnected from mains, even switched off. Earphone Connect earphone (not supplied) to the EAR socket for monitoring or for private listening. The speakers are automatically disconnected when earphone is connected, ADJUSTING THE CLOCK Example:...

#### Page 6: Listening To The Radio

LISTENING TO THE RADIO 1. Set the function switch to ON. 2. Set the BAND switch to AM or FM. 3. Turn the TUNING control to tune in a station. 4. Adjust the VOLUME control as desired. 5. To turn the radio off, set the function switch to OFF. Aerials For AM reception, rotate or relocate the unit to a different position to improve the reception of a distant or weak station.

#### Page 7: Using The Wake-Up Timer

USING THE WAKE-UP TIMER 1. If you want to wake up with the radio, tune in the station and adjust the volume level first. 2. Set the wake-up time. (See "WAKE-UP TIME SETTING".) 3. Set the function switch to ALARM-RADIO or ALARM-BUZZER. ALARM-RADIO: Wake up with the radio ALARM-BUZZER: Wake up with the buzzer.

#### Page 8: Using The Sleep Timer

USING THE SLEEP TIMER 1. Set the function switch to OFF, ALARM-RADIO or ALARM-BUZZER. 2. Push the SLEEP button. "0:59" (59 minutes) appears. The radio turns on and will turn off automatically after 59 minutes. To select the desired time, while holding the SLEEP button down, push the HOUR (once) or MIN button repeatedly to select the sleep time (up to 1 hour and 59 minutes).

#### Page 9: Specifications

FM: 87.5 - 108 MHz Antennas: Specifications subject to change without Built-in ferrite bar and antenna lead notice. wire Power source: AC: 230-240V, 50 Hz DC: 9 V (Clock back-up, 006P type, not supplied) SANYO Electric Co., Ltd. (AU) 1AD6P1P1922-- Printed in China...