

Using A Hot Key To Set The Power Plan - Toshiba P500-ST5801 User Manual

P500-st5801 user's guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

Table Of Contents

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217

218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254

--


•

[Table of Contents](#)

•

Bookmarks

--

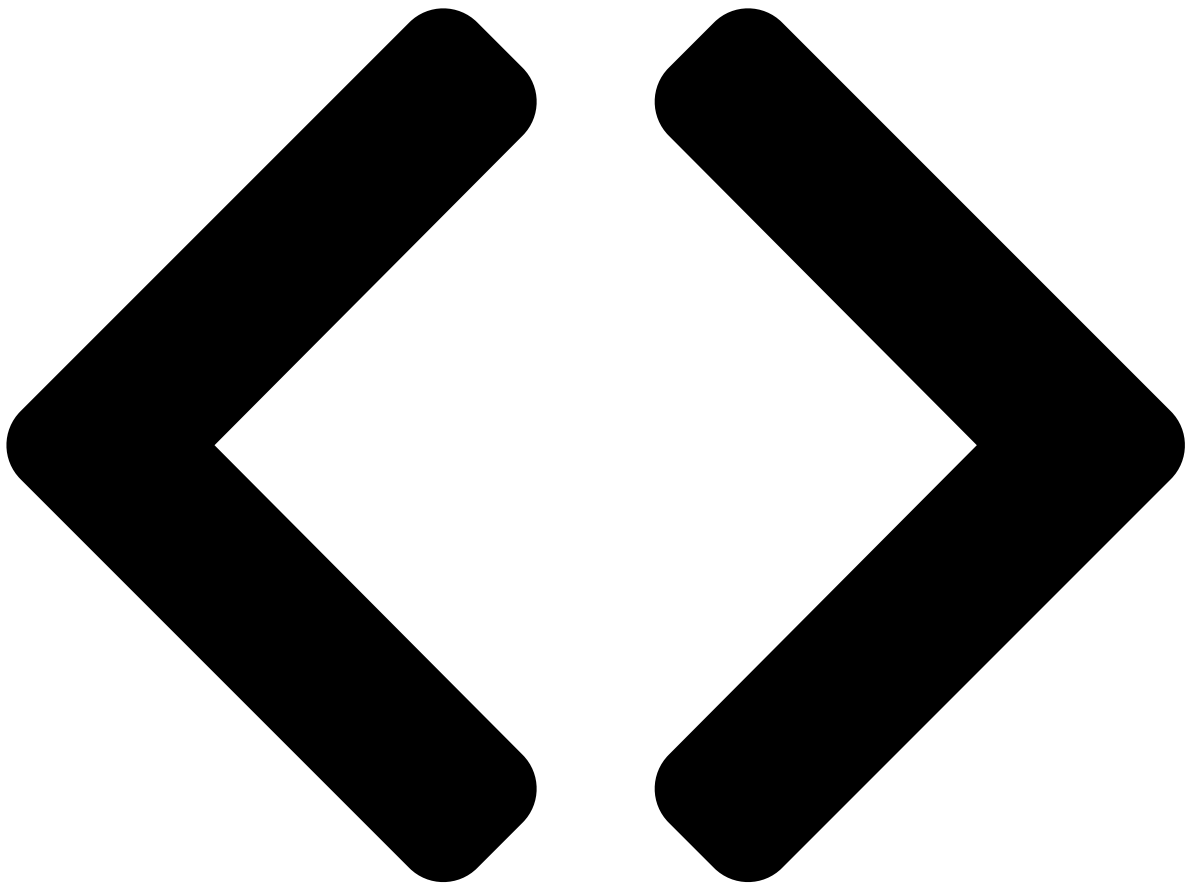

122

Mobile Computing

Monitoring main battery power

NOTE

4

Click Change Plan Settings to choose the plan you want to edit.

This screen allows you to change basic settings.

5

Click Change Advanced Settings to access settings for battery notification levels, internal storage drive power save time, etc.

You can click on the plus signs to expand each item and to see what settings are available for each item.

6

Click Save Changes to save the plan changes you have performed.

By default the three power plans Balanced, eco, and High Performance are satisfactory for most people and do not need to be edited. The eco plan is the best used for maximum battery time.

The

High Performance plan will give you the shortest battery time, but

the highest performance from your computer. The Balanced plan is

a compromise between battery time and performance.

Using a hot key to set the Power Plan

You may use a hot key to set the Power Plan.

To set the Power Plan:

1

Press
key card.

(Sample Image) Power Plan hot key card

To edit a plan or to edit advanced settings, continue to the following steps.

and

simultaneously to display the Power Plan hot

Fn

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

121

122

123

124

Quick Links:

[Your Computer's Features and Specifications](#)

[Adding Memory \(Optional\)](#)

Related Manuals for Toshiba P500-ST5801

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

Personal computer (288 pages)

[Laptop Toshiba Satellite P500 Maintenance Manual](#)

(288 pages)

[Laptop Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz User Manual](#)

User's guide for satellite p500/p505 series (253 pages)

[Laptop Toshiba M500-ST54E2 User Manual](#)

M500-st54e2 user's guide (252 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

(227 pages)

[Laptop Toshiba Satellite P500 User Manual](#)

Portable personal computer (223 pages)

[Laptop Toshiba Satellite P500-BT2G22 User Manual](#)

Portable personal computer (213 pages)

[Laptop Toshiba Satellite P5001 User Manual](#)

(208 pages)

[Laptop TOSHIBA Satellite P500 User Manual](#)

Portable personal computer (208 pages)

[Laptop TOSHIBA P500 User Manual](#)

Portable personal computer (202 pages)

[Laptop Toshiba Satellite P500-BT2G22 Resource Manual](#)

Toshiba satellite p500-bt2g22: reference guide (60 pages)

[Laptop Toshiba Satellite P505D-S8935 Specifications](#)

Toshiba satellite p505d-s8935: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8940 Specifications](#)

Toshiba satellite p505-s8940: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8945 Specifications](#)

Toshiba satellite p505-s8945: specifications (4 pages)

[Laptop Toshiba Satellite P505-S8950 Specifications](#)

Toshiba satellite p505-s8950: specifications (4 pages)

[Laptop Toshiba Satellite P500-ST68X2 Specifications](#)

Toshiba satellite p500-st68x2: specifications (4 pages)

Related Content for Toshiba P500-ST5801

[X305-Q705 - Qosmio - Core 2 Duo GHz Using A Hot Key To Set The Power Plan](#)

Toshiba X305-Q705 - Qosmio - Core 2 Duo GHz

[P505 S8970 - Satellite - Core 2 Duo 2.2 GHz Using A Hot Key To Set The Power Plan](#)

Toshiba P505 S8970 - Satellite - Core 2 Duo 2.2 GHz

[S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz Using A Hot Key To Set The Power Plan](#)

Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz

[R10 S4401 - Tecra - Core 2 Duo 2.26 GHz Using A Hot Key To Set The Power Plan](#)

Toshiba R10 S4401 - Tecra - Core 2 Duo 2.26 GHz

[L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz Using A Hot Key To Set The Power Plan](#)

Toshiba L45-S7423 - Satellite - Pentium Dual Core 1.46 GHz

[R950-BT9500 Using A Hot Key To Set The Power Plan](#)

Toshiba R950-BT9500

[ORACLER940 Using A Hot Key To Set The Power Plan](#)

Toshiba ORACLER940

[Z930-BT9300 Using A Hot Key To Set The Power Plan](#)

Toshiba Z930-BT9300

This manual is also suitable for:

P500-st6821P505-s8940P505-s8941P505-s8945P505-s8946P505-s8950 ... [Show all](#)