


Installation Av Inomhusenheten - Toshiba RAS-10SKVP-ND Installation Manual

| |
|-------------------|
| 1 |
| Table Of Contents |
| 2 |
| 3 |
| 4 |
| 5 |
| 6 |
| 7 |
| 8 |
| 9 |
| 10 |
| 11 |
| 12 |
| 13 |
| 14 |
| 15 |
| 16 |
| 17 |

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132











•

[Table of Contents](#)

•

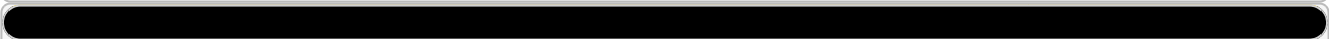Bookmarks

Available languages

- EN 
- FR 
- DE 
- SE 
- RU 
- DK 
- FI 
- NO 

More



Installationsplats

- En plats där det finns tillräckligt utrymme runt inomhusenheten enligt figuren. (
 - En plats där det inte finns några hinder nära luftintaget och utblåset.
 - En plats som tillåter enkel installation av rören till utomhusenheten.
 - En plats som gör det möjligt att öppna frontpanelen.
 - Inomhusenheten ska installeras så att dess övre kant är placerad minst 2 m högt.
- Du ska även vara noggranna med att inte lägga något på inomhusenheten.

- Direkt solljus på inomhusenhetens trådlösa mottagare ska undvikas.
 - Inomhusenhetens mikroprocessor får inte befinna sig för nära radiofrekvenskällor.
- (För mer information, se bruksanvisningen.)

Fjärrkontroll

- Ska placeras där det inte finns några hinder, såsom gardiner, som kan skärma av signalen.
- Installera inte fjärrkontrollen på en plats som utsätts för direkt solljus eller nära en värmekälla, t.ex. en spis.
- Fjärrkontrollen får inte befinna sig närmare en TV eller stereoutrustning än en meter. (Detta är nödvändigt för att motverka att den

stör bild eller ljud.)

- Placeringen av fjärrkontrollen ska bestämmas enligt nedan.

Borring och montering av installationsplattan

Borring

Vid installation av köldmedierören från baksidan.

1.

Bestäm var installationsplattan ska monteras på väggen.

2.

Markera rörhålets positioner på väggen motsvarande positionsmärkena (

3.

Borra rörhålen (ø65 mm) med en lätt lutning nedåt mot utsidan.

OBS

- Vid borring i en vägg som innehåller en metallstång, metalltråd eller metallplatta ska du vara noga med att använda en kantring för rörhålet vilken kan köpas separat.

SW

(Sett från sidan)

(Sett från ovan)

Inomhusenhet

Fjärrkontroll Verkningsområde

Verknings-
område

*: Axiellt avstånd

Centrum på

rörhålet

Rörhål

6

se sidan 3)

Fjärrkontroll

) på installationsplattan.

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
53
54
55
56
57
58
59
60

Quick Links:

[Installation Manual](#)

[Air Conditioner](#)

[Installation Diagram of Indoor and Outdoor...](#)

[Electrical Work](#)

[Test Operation](#)

Related Manuals for Toshiba RAS-10SKVP-ND

[Air Conditioner Toshiba RAS-16SKVP-ND Owner's Manual](#)

(230 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(120 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

Split type air conditioner (119 pages)

[Air Conditioner Toshiba RAS-10SAVP-E Service Manual](#)

(119 pages)

[Air Conditioner Toshiba RAS-10SKVP-ND Owner's Manual](#)

(61 pages)

[Air Conditioner Toshiba RAS-10SA-E Service Manual](#)

Split wall type (56 pages)

[Air Conditioner Toshiba RAS-10SAV-A Service Manual](#)

Split wall type (94 pages)

[Air Conditioner Toshiba RAS-10SKVP2 Series Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-13SKV-E Service Manual](#)

Indoor/outdoor unit, split type air conditioner (120 pages)

[Air Conditioner Toshiba RAS-13SKV2-E Service Manual](#)

Split type (111 pages)

[Air Conditioner Toshiba RAS-10SKV2 Series Owner's Manual](#)

Split type (4 pages)

[Air Conditioner Toshiba RAS-10SKH-ES Service Manual](#)

Split wall type (68 pages)

[Air Conditioner Toshiba RAS-10 SKV Series Owner's Manual](#)

Air conditioner (split type) (4 pages)

[Air Conditioner Toshiba RAS-07SKHP-E Service Manual](#)

(71 pages)

[Air Conditioner Toshiba RAS-M18SAH-E Service Manual](#)

Multi split wall type (71 pages)

[Air Conditioner Toshiba RAS-10SKP Series Owner's Manual](#)

(8 pages)

Related Content for Toshiba RAS-10SKVP-ND

[MMY-MUP0801T8P Installation](#)

Toshiba MMY-MUP0801T8P

[MMY-MUP0801HT8P-E Installation](#)

Toshiba MMY-MUP0801HT8P-E

[RAS-22BKV-A1 Installation Procedure](#)

Toshiba RAS-22BKV-A1

[MMY-MAP0806FT8P-E Installation](#)

Toshiba MMY-MAP0806FT8P-E

[RBM-Y1124FE Installation Of New Refrigerant Air Conditioner](#)

Toshiba RBM-Y1124FE

[RAS-M10S4MUVG-E Installation](#)

Toshiba RAS-M10S4MUVG-E

[RAS-M05G3YVG-E Been Given Supervision Or Instruction Concerning Use Of The 9 Installation](#)

Toshiba RAS-M05G3YVG-E

[RAS-B05J2KVG-UA Installation Diagram Of Indoor And Outdoor Units](#)

Toshiba RAS-B05J2KVG-UA

This manual is also suitable for:

[Ras-10savp-ndRas-13skvp-ndRas-13savp-ndRas-16savp-ndRas-16skvp-nd](#)