

TOSHIBA

Toshiba 13A26C Owner's Manual

Toshiba color television owner's manual 13a26c, 19a26c

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
Table Of Contents
29

--

•

-


Troubleshooting

•

Bookmarks

--

Available languages

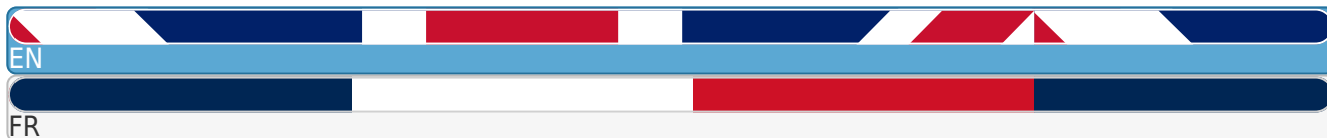

Quick Links

[1 Connection to Other Equipment](#)

[Download this manual](#)

[See also: Service Manual](#)



13A26C



19A26C

3X00221A(E)_COVER

1

22/12/05, 4:40 PM

TOSHIBA

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 13A26C

[TV Toshiba 13A26 Service Manual](#)

(43 pages)

[CRT TV Toshiba 19A26 Service Manual](#)

Toshiba 19a26 color television service manual (34 pages)

[TV Toshiba 19A26C Service Manual](#)

(34 pages)

[TV Toshiba 13A26 Service Manual](#)

(33 pages)

[TV Toshiba 13A26 Owner's Manual](#)

Toshiba tv 13a26, 19a26 owner's manual (29 pages)

[TV Toshiba 13A26 Owner's Manual](#)

(15 pages)

[CRT TV Toshiba 19A26 Specifications](#)

19" (measured diagonally) color tv (2 pages)

[CRT TV Toshiba 13A23 Owner's Manual](#)

Toshiba owner's manual color television 13a23,13a23w (18 pages)

[CRT TV Toshiba 13a23 Service Manual](#)

(31 pages)

[CRT TV Toshiba 13A25 Owner's Manual](#)

Toshiba tv 13a25 owner's manual (15 pages)

[CRT TV Toshiba 13A25 Specifications](#)

13" diagonal blackstripe ii color tv (2 pages)

[CRT TV Toshiba 13A25 Service Manual](#)

(10 pages)

[CRT TV Toshiba 13A22 Owner's Manual](#)

Toshiba owner's manual color television 13a22 (49 pages)

[CRT TV Toshiba 13A25C Owner's Manual](#)

Toshiba color television owner's manual 13a25c (15 pages)

[CRT TV Toshiba 13A24 Owner's Manual](#)

Toshiba owner's manual color television 13a24 (47 pages)

[CRT TV Toshiba 19A20 Owner's Manual](#)

Toshiba owner's manual color television 19a20 (20 pages)

Summary of Contents for Toshiba 13A26C

[Page 1](#) 13A26C 19A26C 3X00221A(E)_COVER 22/12/05, 4:40 PM...

[Page 2: Safety Precautions](#)

Dear Customer, Thank you for purchasing this Toshiba TV. This manual will help you use the many exciting features of your new TV. Before operating the TV, please read this manual completely, and keep it nearby for future reference. Safety Precautions...

[Page 3: Important Safety Instructions](#)

Important Safety Instructions 1) Read these instructions. 2) Keep these instructions. 3) Heed all

warnings. 4) Follow all instructions. 5) Do not use this apparatus near water. 6) Clean only with a dry cloth. 7) Do not block any ventilation openings.

[Page 4](#) Grounding conductors (NEC Section 810-21) or continuous, unplug the power cord and contact a Toshiba Authorized Service Center. 33) Possible Adverse Effects on TV Picture Display: If a fixed (non-moving) pattern or image remains on the TV screen for extended periods of time, the image can...

[Page 5: Location Of Controls](#)

- Lock feature - This feature has three functions, LOCKING CHANNELS, LOCKING VIDEO INPUT, and SETTING THE GameTimer
- Programmable ON Timer - Allows you to program the TV to automatically turn on at a set time.

LOCATION OF CONTROLS FRONT 13A26C PHONE POWER VOLUME CHANNEL...

[Page 6: Remote Control](#)

REMOTE CONTROL POWER CH RTN RECALL SLEEP MUTE CH + - MENU ENTER CH - - RESET TV/VIDEO CAP/TEXT CT-859 1. POWER Button - Press to turn on the TV. Press again to turn off the TV. 2. Direct Channel Selection/Channel Number Buttons (0-9) - Allow direct tuning of any channel.

[Page 7: Connection To Other Equipment](#)

ANTENNA/CABLE TV CONNECTIONS Choose one of the following seven connections, based on your equipment and service: Combination VHF/UHF antenna Single 75 ohm cable (or) Single 300 ohm twin-lead wire* For best performance, if you have a splitter connected, remove the splitter and connect the single wire to the transformer, and then to the TV's antenna input (as illustrated here).

[Page 8: Setting The Language](#)

SETTING THE LANGUAGE This TV can display the on-screen displays and adjustment menus in English, Spanish, or French. The on-screen language selection (step 3, below) will automatically appear on the screen when you press the MENU button initially. Select the language you prefer first, then proceed with the other menu options. Press MENU.

[Page 9: To Memorize Channels](#)

TO MEMORIZE CHANNELS This TV is equipped with a channel memory feature that allows the TV to skip up or down to the next channel in the TV's memory, skipping over unwanted channels. Before selecting channels, you must program them into the TV's memory.

[Page 10: Closed Caption](#)

CLOSED CAPTION WHAT IS CLOSED CAPTIONING? This television has the capability to decode and display closed captioned television programs. When available, closed captioning will display captions on a small portion of the screen for hearing impaired viewers or it will translate and display text in another language on half of the screen.

[Page 11: Using The Lock Menu](#)

USING THE LOCK MENU The LOCK menu includes the CH LOCK, VIDEO LOCK, GAME TIMER and CHANGE PASSWORD functions. You can use these functions after entering the correct PASSWORD. TO REGISTER YOUR PASSWORD Press MENU and then press SET + or - until the indicator next to "LOCK"...

[Page 12: Troubleshooting Guide](#)

- Press CAP/TEXT to turn off the closed screen. Display is not shown in
- Select the language in the menu options. your language. 13A26C Operation: 73 Watts Standby: 3 Watts 19 Inch (480mm diagonal) (Screen size is approximate.) 1.5 Watts 2-13...

[Page 13: Limited Canada Warranty](#)

Owner's Manual and Product Registration Read this owner's manual thoroughly before operating this television. Register your product online at www.toshiba.ca as soon as possible. By registering your product, you will enable TCL to bring you new products specifically designed to meet your needs and help us to contact you in the unlikely event a safety notification is

required.

[Page 14](#) MONTREAL: 18050 TRANS CANADA, KIRKLAND, QUEBEC, H9J-4A1, CANADA TEL.: (514) 390-7766 VANCOUVER: 22171 FRASERWOOD WAY, RICHMOND, B.C., V6Z 1J5, CANADA TEL.: (604) 303-2500 GameTimer is a trademark of Toshiba America Consumer Products, L.L.C. PRINTED IN THAILAND 3X00221A(E)_P13-BACK 22/12/05, 4:41 PM...

[Page 15](#) 13A26C 19A26C J3X00221A SH 06/01 3X00221A(F)_COVER 22/12/05, 4:41 PM...

[Page 16: Consignes De Sécurité](#)

Cher client, Merci d'avoir acheté ce téléviseur TOSHIBA. Ce manuel vous aidera à utiliser les possibilités nombreuses et variées de votre nouveau téléviseur. Avant d'allumer votre téléviseur, veuillez lire ce manuel en entier. Gardez-le à portée de la main pour pouvoir le consulter à l'avenir.

[Page 17: Instructions Importantes Sur La Sécurité](#)

Instructions importantes sur la sécurité) Lire ces instructions. 2) Conserver ces instructions. 3) Observer tous les avertissements. 4) Suivre toutes les instructions. 5) Ne pas utiliser cet appareil à proximité d'eau. 6) Nettoyer seulement avec un linge sec. 7) Ne pas bloquer les ouvertures d'aération.

[Page 18: Entretien](#)

à une antenne ou à un circuit téléphonique. Entretien Pour vous assurer du bon fonctionnement et de l'utilisation sans danger de votre téléviseur TOSHIBA, veuillez suivre les recommandations et précautions suivantes : 27) Toujours s'asseoir à une distance d'environ 3 à 8 m (10 à 25 pi) et le plus en face possible du téléviseur.

[Page 19: Caractéristiques](#)

- Option verrouillage - Cette fonction comprend trois fonctions, BLOCAGE DES CANAUX, BLOCAGE VIDEO et RÉGLAGE DE GameTimer™.
- Minuterie de mise sous tension - Vous permet de programmer la mise sous tension de l'appareil à l'heure réglée.

EMPLACEMENT DES COMMANDES VUE AVANT 13A26C PHONE POWER VOLUME CHANNEL...

[Page 20: Insertion Des Piles](#)

TÉLÉCOMMANDE POWER CH RTN RECALL SLEEP MUTE CH + - MENU ENTER CH - - RESET TV/VIDEO CAP/TEXT CT-859 Interrupteur (POWER) - Pour mettre l'appareil sous/hors tension. Touches numériques (0 à 9) - Permet la sélection directe à tout canal de télévision. Touche de rappel de canal - Appuyez plusieurs fois sur CH RTN pour basculer entre les deux canaux que vous avez réglés.

[Page 21: Raccordement Des Antennes](#)

RACCORDEMENT DES ANTENNES Choisissez un des sept raccordements suivants, selon votre matériel et les services choisis. RACCORDEMENT À D'AUTRES APPAREILS La configuration exacte des liaisons entre les divers appareils audio et vidéo et le téléviseur, dépend du modèle et des particularités de chacun. Pour de plus amples détails concernant l'emplacement des entrées et des sorties audio et vidéo, reportez-vous au mode d'emploi de chaque appareil.

[Page 22: Fonctionnement Du Téléviseur](#)

CHOIX DE LA LANGUE L'affichage à l'écran et les menus de réglage du téléviseur peuvent apparaître en anglais, espagnol ou français. En appuyant sur la touche MENU au début, le choix de la langue d'affichage (étape 3, ci-dessous) apparaît à l'écran automatiquement.

[Page 23: Mise En Mémoire Des Canaux](#)

MISE EN MÉMOIRE DES CANAUX Ce téléviseur est équipé d'une fonction de mémorisation des canaux qui permet de passer au canal mémorisé suivant ou précédent, sans passer par des canaux que vous ne souhaitez pas visualiser. Avant de choisir les canaux, ils doivent avoir été mis en mémoire. En plus de recevoir les canaux VHF et UHF, votre appareil peut aussi capter jusqu'à...

[Page 24: Pour Régler L'heure De Mise Sous Tension](#)

SOUS-TITRAGE QUE SIGNIFIE SOUS-TITRAGE? Ce télécouleur a la capacité de décoder et d'afficher les émissions télévisées avec sous-titres. Si disponible, ces émissions affichent un texte sur l'écran pour les malentendants, ou traduisent et affichent le texte en une autre langue. POUR VOIR LES SOUS-TITRES Appuyez sur CAP/TEXT sur la télécommande pour commuter entre le mode de télévision normale et les deux modes de sous-...

[Page 25](#) POUR UTILISER LE MENU LOCK Le menu LOCK comprend les fonctions suivantes : CH LOCK, VIDEO LOCK, GAME TIMER et CHANGE PASSWORD. Vous pouvez utiliser ces fonctions après avoir entré le mot de passe correct. POUR PROGRAMMER UN MOT DE PASSE Appuyez sur MENU puis sur SET + ou -...

[Page 26: Guide De Dépannage](#)

Le décodeur de sous-titres ne fonctionne pas. L'écran reste noir. L'affichage n'est pas montré dans la langue sélectionnée. 13A26C En marche: 73 Watts En veille: 3 Watts 19 po (480mm en diagonale) (La dimension de l'écran est approximative.) 1,5 Watts 2-13 14-69 98-99 (A-2)-(A-1) 14-22 (A)-(I);...

[Page 27: Garantie Limitée Au Canada](#)

Pour tous les modèles téléviseurs 27 po. et moins Toshiba du Canada Limitée (TCL) donne les garanties limitées suivantes. CES GARANTIES LIMITÉES SONT ACCORDÉES À L' ACHETEUR INITIAL DE CE PRODUIT OU À TOUTE PERSONNE L' A YANT REÇU EN CADEAU DE L'...

[Page 28](#) MONTREAL: 18050 TRANS CANADA, KIRKLAND, QUEBEC, H9J-4A1, CANADA TEL.: (514) 390-7766 VANCOUVER: 22171 FRASERWOOD WAY, RICHMOND, B.C., V6Z 1J5, CANADA TEL.: (604) 303-2500 GameTimer est une marque de commerce de Toshiba America Consumer Products, L.L.C. IMPRIMÉ EN THAÏLANDE 3X00221A(F)_P13-BACK 22/12/05, 4:42 PM...

This manual is also suitable for:

19a26c13a2619a26