



Toshiba 26HF66 Owner's Manual

Integrated high definition color television

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88

--

•

[Table of Contents](#)

-


Troubleshooting

•

Bookmarks

--

Available languages

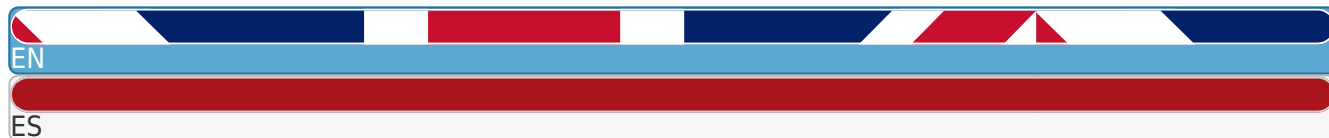


Quick Links

- [1 Connecting an Hdmi™ or DVI Device](#)
- [2 Selecting the Video Input Source](#)
- [3 Specifications](#)

[Download this manual](#)

[See also: Service Manual](#)

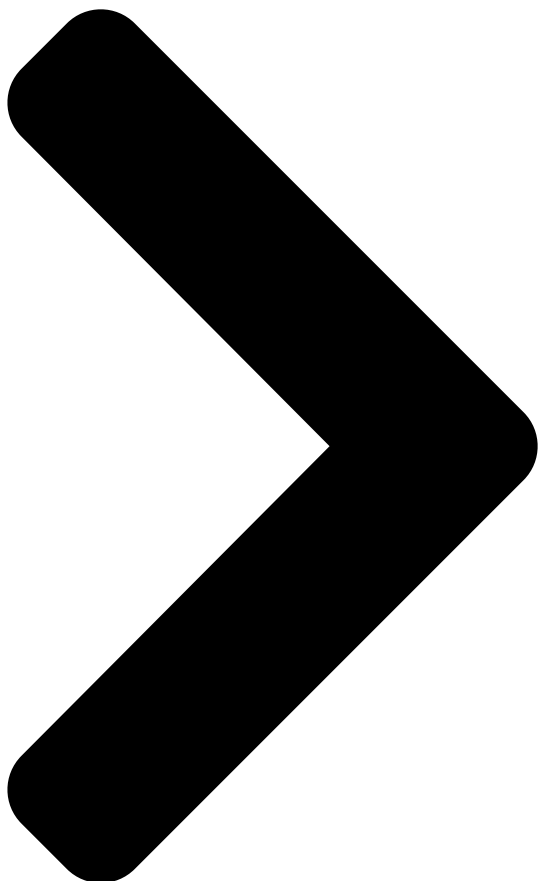

Integrated High Definition Color Television

TOSHIBA
26HF66

J3W60321A_En_cov

1

27/2/06, 12:34 PM

[Table of Contents](#)

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

Chapters

English 5

Español 49

Related Manuals for Toshiba 26HF66

[TV Toshiba 26HF66 Service Manual](#)

(68 pages)

[Flat Panel TV Toshiba Flat CTV Specifications](#)

26" (measured diagonally) 16:9 sd integrated supertube fst pure flat ctv (2 pages)

[CRT TV Toshiba 26HF15 Owner's Manual](#)

Toshiba color television owner's manual 26hf15 (44 pages)

[CRT TV Toshiba 26HF84 Owner's Manual](#)

Toshiba owner's manual color television 26hf84, 30hf84 (46 pages)

[CRT TV Toshiba 26HF84 Specifications](#)

26" theaterwide hd monitor fst pure flat tv (2 pages)

[CRT TV Toshiba 26HF84 Owner's Manual](#)

(50 pages)

[CRT TV Toshiba 26DF56 Owner's Manual](#)

Toshiba owner's manual color television 26df56, 30df56 (80 pages)

[CRT TV Toshiba 26DF56 Service Manual](#)

Toshiba 26df56 color television service manual (5 pages)

[CRT TV Toshiba 26AF45C Owner's Manual](#)

Toshiba owner manual color television 26af45c (36 pages)

[CRT TV Toshiba 26HF85 Service Manual](#)

(34 pages)

[CRT TV Toshiba 26HF85 Owner's Manual](#)

Toshiba color television owner's manual 26hf85, 30hf85 (44 pages)

[CRT TV Toshiba 20AF46 Service Manual](#)

(50 pages)

[CRT TV Toshiba 27A44 Owner's Manual](#)

Colorstream color television (72 pages)

[CRT TV Toshiba 27A60 Owner's Manual](#)

Colorstream color television (44 pages)

[CRT TV Toshiba COLORSTREAM 20AF41 Owner's Manual](#)

Fstpure colorstream color television (32 pages)

[CRT TV Toshiba 20AS21 Owner's Manual](#)

Toshiba 20as21: owners manual (9 pages)

Summary of Contents for Toshiba 26HF66

[Page 2: Child Safety](#)

Dear Customer, Thank you for purchasing this Toshiba TV. This manual will help you use the many exciting features of your new TV. Before operating the TV, please read this manual completely, and keep it nearby for future reference. Safety Precautions...

[Page 3: Important Safety Instructions](#)

Important Safety Instructions 1) Read these instructions. 2) Keep these instructions. 3) Heed all warnings. 4) Follow all instructions. 5) Do not use this apparatus near water. 6) Clean only with a dry cloth. 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

[Page 4](#) Care For better performance and safer operation of your TOSHIBA TV, follow these recommendations and precautions: 28) Always sit approximately 10-25 feet away from the TV and as directly in front of it as possible. The picture can appear dull if you sit too far to the left or right of the TV, or if sunlight or room lights reflect on the screen.

[Page 5: Table Of Contents](#)

Important Safeguards ... 2-4 Welcome to Toshiba ... 6 Exploring your new TV ... 6 Selecting a location for the TV ... 6 Connecting your TV ... 7 Connecting a VCR ... 7 Connecting a cable converter box or Antenna ... 8 Connecting a DVD player/satellite receiver and a VCR ...

[Page 6: Welcome To Toshiba](#)

Congratulations! You have purchased one of the finest color TVs on the market. The goal of this manual is to guide you through setting up and operating your Toshiba TV as quickly as possible. You may need to purchase other audio or video cables to connect your equipment.

[Page 7: Connecting Your Tv](#)

Connecting your TV • A coaxial cable is the standard cable that comes in from your antenna or cable converter box. Coaxial cables use "F" connectors. • Standard A/V (audio/video) cables are usually color coded according to use: yellow for video and red and white for audio. The red audio cable is for the stereo right channel, and the white audio cable is for the stereo left (or mono) channel.

[Page 8: Connecting A Cable Converter Box Or Antenna](#)

Connecting a cable converter box or Antenna This television has an extended tuning range and can tune most cable channels without using a cable company supplied converter box. Some cable companies offer "premium pay channels" in which the signal is scrambled.

[Page 9: Connecting A Dvd Player/Satellite Receiver And A Vcr](#)

Connecting a DVD player/satellite receiver and a VCR This connection allows you to watch DVD/satellite, VCR, or TV programs. You can record from the satellite receiver and TV, as well as record one TV channel while watching another channel. From satellite DVD player / Satellite Receiver Satellite IN OUT to TV...

[Page 10: Connecting A Dvd Player With Colorstream \(Component Video\) And A Vcr](#)

TV programs. You can record from one source while watching a program from another source. Your TV has ColorStream video inputs. Connecting your TV to a component video compatible DVD player, such as a Toshiba DVD player with ColorStream enhance picture quality and performance. DVD player with Component video...

[Page 11: Connecting A Dtv Receiver / Set-Top Box With Colorstream \(Component Video\) And A Vcr](#)

Connecting a DTV receiver / set-top box with ® ColorStream (component video) and a VCR This connection allows you to watch DTV (digital TV), VCR, and TV programs, and record DTV and TV programs. Your TV has ColorStream ® (component video) inputs. Connecting your TV to a DTV receiver with component video can greatly enhance picture quality and realism.

[Page 12: Connecting A Camcorder](#)

Connecting a camcorder This connection allows you to watch videos recorded on a camcorder. VIDEO Front panel of TV S-VIDEO VIDEO Front panel of TV J3W60321A_En_p07-14 VHS Camcorder AUDIO S-VHS Camcorder AUDIO You will need: • one set of standard A/V cables You will need: •...

[Page 13: Connecting An Hdmi™ Or Dvi Device](#)

Connecting an HDMI™ or DVI device The HDMI (High-Definition Multimedia Interface) input on your TV receives digital audio and uncompressed digital video from an HDMI source device, or uncompressed digital video from a DVI (Digital Visual Interface) source device. This input is designed to accept HDCP (High-bandwidth Digital Content Protection) program material in digital form from EIA/CEA-861/861B-compliant devices (such as a set-top box or DVD player with HDMI or...

[Page 14: Connecting An Audio System](#)

Connecting an audio system This connection allows you to use external speakers with an external audio amplifier to adjust the sound level. To control the audio: Turn on the TV and the stereo amplifier. Turn off the TV's built-in speakers (see "Turning off the built-in speakers"...

[Page 15: Using The Remote Control](#)

The remote control is pre-programmed to operate most Toshiba satellite receivers, VCRs, and DVD players. To control a non-Toshiba device (or a Toshiba device that the remote control is not pre-programmed to operate), you must first program the remote control.

[Page 16: Programming The Remote Control To Operate Your Other Devices](#)

This remote control is pre-programmed to operate most Toshiba satellite receivers, VCRs, and DVD players. To control a non-Toshiba device (or a Toshiba device that the remote control is not pre-programmed to operate), you must follow the steps below to program your remote control.

[Page 17: Device Code Tables](#)

Device code tables [For CBL/SAT mode] CABLE Box Brand Code Satellite Brand Code [For VCR mode] Brand Code J3W60321A_En_p15-22 Brand Code Brand Brand Code Brand Brand Code Brand 27/2/06, 9:54 AM Code Code Code...

[Page 18](#) [For VCR mode] VCR (continued) Brand Code TV/VCR Combo Brand Code [For DVD mode] Brand Code Portable DVD Brand Code HTiB Brand Code [For VCR and DVD mode] DVD/VCR Combo Brand VCR Code J3W60321A_En_p15-22 Brand Code Brand Brand Code Brand Brand Code Brand...

[Page 19: Learning About The Remote Control](#)

Learning about the remote control TV/VIDEO selects the video input source (page 28) RECALL displays TV status information on-screen (page 40) MUTE turns off the sound (page 37) POWER turns the TV on and off CHANNEL NUMBERS allow direct access to channels (page 22) CH RTN (Channel Return) returns to the last viewed channel (page 22)

[Page 20: Setting Up Your Tv](#)

Setting up your TV After you have installed the batteries and programmed the remote control, you need to set some preferences on the TV using the menu system. You can access the menu system with the buttons on the remote control. •...

[Page 21: Image Tilt Correction](#)

Image tilt correction When you install or change the direction of the TV, the picture may become tilted (caused by the Earth's magnetism). If this happens, use the image tilt correction feature to obtain the best possible picture. To adjust the image tilt: 1.

[Page 22: Using The Tv's Features](#)

Changing channels To change to the next programmed channel: Press CHANNEL ▲/▼ on the TV or CH M M M M M /? ? ? ? on the remote control. To change to a specific analog channel: Press the Channel Number buttons (0-9) on the remote control. For example, to select channel 125,

press 1, 2, 5.

[Page 23: Using The Locks Menu](#)

To clear your favorite channels: 1. Select a channel you want to clear from the favorite channel memory. 2. Press MENU, then press 3. Press ▲ or ▼ to highlight FAVORITE CH. 4. Press to display the FAVORITE CH menu. SET/CLEAR will be highlighted.

[Page 24: Using The V-Chip \(Parental Control\) Feature](#)

5. You may now set up the LOCKS menu. See “Using the V-Chip (parental control) feature” (below), “Locking channels” (page 25), “Locking the video inputs” (page 26), “Setting the GameTimer (page 26) or “Using the front panel lock feature” (page 27). To change your password: 1.

[Page 25: Locking Channels](#)

7. When you are done selecting the ratings, press EXIT to return to normal viewing. When you try to view a program with a ratings block, a message will appear listing the program’s ratings. The program can still be viewed if you press MUTE and then enter your password to temporarily bypass the block.

[Page 26: Locking The Video Inputs](#)

Locking the video inputs With the VIDEO LOCK feature, you can lock out the input sources (VIDEO-1, VIDEO-2, VIDEO-3, ColorStream HD-1, ColorStream HD-2, HDMI) and channels 3 and 4. You will not be able to select the input sources with the TV/VIDEO button or Channel Number buttons unless you unlock the video inputs.

[Page 27: Using The Front Panel Lock Feature](#)

Using the front panel lock feature You can lock the front panel buttons to prevent your settings from being changed accidentally (by children, for example). When the front panel lock is in ON, all control buttons on the TV front panel (except POWER) do not operate.

[Page 28: Selecting The Video Input Source](#)

Selecting the video input source Press TV/VIDEO to view a signal from another device connected to your TV, such as a VCR or DVD player. You can select ANT, VIDEO1, VIDEO2, VIDEO3, ColorStream HD1, ColorStream HD2, or HDMI, depending on which input jacks you used to connect your devices (see “Connecting your TV”...

[Page 29: Setting The Clock](#)

Setting the clock You must set the clock before you can program the ON/OFF timer. To set the clock: (Example: “8:30 AM” March, 25 (SAT), 2006) 1. Press MENU, then press display the SETUP menu. 2. Press ▲ or ▼ to highlight CLOCK SET, then press 3.

[Page 30: Viewing The Wide-Screen Picture Formats \(480i And 480P Signals Only\)](#)

Viewing the wide-screen picture formats (480i and 480p signals only) You can view 480i and 480p format programs in a variety of picture sizes—Natural, TheaterWide 1, TheaterWide 2, TheaterWide 3, and Full. The way the image displays in any of the picture sizes will vary depending on the format of the program you are viewing.

[Page 31](#) TheaterWide 2 picture size (for letter box programs) • The picture is stretched the same amount both wider and taller (retains its original proportion). • The top and bottom edges of the picture may be hidden. To view the hidden areas, see “Scrolling the TheaterWide picture”...

[Page 32: Scrolling The Theaterwide Picture \(Theaterwide 2 And 3 Only\)](#)

Scrolling the TheaterWide (TheaterWide 2 and 3 only) 1. Press PIC SIZE to select the TheaterWide 2 or 3 mode. 2. Press MENU, and then press 3. Press ▲ or ▼ to highlight PICTURE SCROLL. S E T U P C L O S E D C A P T I O N O F F C C A D V A N C E D...

[Page 33: Selecting The Cinema Mode](#)

Selecting the cinema mode When you view a DVD movie (3:2 pulldown processed) from a DVD player connected to the ColorStream (component video) inputs on the TV, smoother and more natural motion can be obtained by setting the CINEMA MODE to FILM. To set the CINEMA MODE to FILM: 1.

[Page 34: Adjusting The Picture Quality](#)

Adjusting the picture quality You can adjust the picture quality to your personal preferences, including the brightness, contrast, color, tint, and sharpness. The qualities you choose will be stored automatically in the PICTURE menu's MEMORY mode so you can recall them at any time. To adjust the picture quality: 1.

[Page 35: Using The Cableclear Feature](#)

Using the CableClear feature ® ® CableClear reduces visible interference in your TV picture. This is useful when receiving a broadcast with a weak signal (especially a Cable channel) or playing a video cassette or disc damaged by repeated use. To turn on the CableClear ®...

[Page 36: Setting The Sleep Timer](#)

Setting the sleep timer You can use the sleep timer to automatically turn off the TV at a set time. To set the sleep timer: Repeatedly press SLEEP on the remote control to set the length of time until the TV turns off. The clock will increase 10 minutes for each press of the SLEEP button (0h00m, 0h10m, ...1h50m, 2h00m).

[Page 37: Adjusting The Sound](#)

Adjusting the sound Muting the sound Press MUTE to temporarily turn off the sound. While the sound is off, the screen will display the word MUTE in the lower right-hand corner. To restore the sound, either press MUTE again or press VOL +/- . Selecting stereo/SAP broadcasts The multi-channel TV sound (MTS) feature provides high-fidelity stereo sound.

[Page 38: Using The Stablesound Feature](#)

Using the StableSound The StableSound feature limits the highest volume level to prevent extreme changes in volume when the signal source is changed. ® To turn on the StableSound 1. Press MENU, then press 2. Press ▲ or ▼ to highlight STABLE SOUND. 3.

[Page 39: Using The Bbe Sound Feature](#)

® Using the BBE sound feature By correcting the phase delay and distortion naturally generated by speaker systems, the BBE* sound feature ensures that the sound that reaches your ears is as natural as the original sound. Human voices are clearer and music is natural and well-defined. To turn on the BBE sound feature: 1.

[Page 40: Resetting Your Audio Adjustments](#)

Resetting your audio adjustments The RESET function returns your audio adjustments to the following factory settings: Bass ... center (25) Treble ... center (25) Balance ... center (0) To reset your audio adjustments: 1. Press MENU, then press 2. Press ▲ or ▼ to highlight RESET, and then press AUDIO AUDIO LANGUAGE DIGITAL OUTPUT...

[Page 41: Auto Power Off](#)

Auto power off The TV will automatically turn off after approximately 15 minutes if it is tuned to a vacant channel or a station that completes its broadcast for the day and stops broadcasting on that channel. This feature does not work in video input mode. Understanding the Power Return feature If the power is cut off while you are viewing the TV and the power is resupplied, the Power Return feature will turn the TV on automatically.

[Page 42: Specifications](#)

Specifications • This model complies with the specifications below. • Design and specifications are subject to change without notice. • This model may not be compatible with features and/or specifications that may be added in the future. Picture Tube Television system Channel coverage Power source Power consumption...

[Page 43: Limited United States Warranty](#)

FST PURE Toshiba America Consumer Products, L.L.C. ("TACP") makes the following limited warranties to original consumers in the United States. THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY PERSON RECEIVING THIS TELEVISION AS A GIFT FROM THE ORIGINAL CONSUMER PURCHASER AND TO NO OTHER PURCHASER OR TRANSFEREE.

[Page 44](#) National Service Division CableClear, ColorStream, FST Pure, TheaterWide and StableSound are registered trademarks of Toshiba America Consumer Products, L.L.C. GameTimer is a trademark of Toshiba America Consumer Products, L.L.C. PRINTED IN THAILAND J3W60321A_En_p38-Back 27/2/06, 9:56 AM...

[Page 45](#) Televisor con alta definici n integrada 26HF66 J3W60321B SH 06/05 Todos los derechos reservados J3W60321B(S)_COVER 3/4/06, 6:11 PM...

[Page 46: Precauciones De Seguridad](#)

Estimado cliente. Le agradecemos que haya comprado este televisor TOSHIBA. Este manual le ayudar  a utilizar las numerosas e interesantes funciones de su nuevo televisor. Antes de hacer funcionar el televisor, lea este manual en su totalidad y cons rvelo en un lugar conveniente para consultarlo en el futuro.

[Page 47](#) Instrucciones de seguridad importantes 1) Lea estas instrucciones. 2) Conserve estas instrucciones. 3) Preste atenci n a todas las advertencias. 4) Siga todas las instrucciones. 5) No use este aparato cerca del agua. 6) L mpielo  nicamente con un pa o seco. 7) No bloquee las rejillas de ventilaci n. Instale el aparato de acuerdo con las instrucciones del fabricante.

[Page 48](#) Abrir o quitar las tapas puede exponerlo a voltajes peligrosos u otros riesgos. Encargue las reparaciones a un centro de servicio autorizado de TOSHIBA. 36) Si le reparan el televisor: • P dale al t cnico que utilice  nicamente repuestos especificados por el fabricante.

[Page 49](#) Informaci n importante sobre seguridad ... 2 - 4 Bienvenido a Toshiba ... 6 Explorando su nueva TV ... 6 Seleccionando un lugar para la TV ... 6 Conectando su televisor ... 7 Conectando una videograbadora ... 7 Conectando una caja convertidora para cable TV o Antena ... 8 Conectando un reproductor de DVD/receptor satelital y una videograbadora ...

[Page 50: Bienvenido A Toshiba](#)

Bienvenido a Toshiba   Felicidades! Usted ha comprado uno de los televisores a color m s finos del mercado. La meta de este manual es guiarlo completamente a preparar y a operar su televisor tan r pidamente como sea posible. Usted podr  necesitar comprar otros cables de audio o video para conectar su equipo.

[Page 51: Conectando Su Televisor](#)

Conectando su televisor • Un cable coaxial es un cable normal que entra de su antena o de la caja convertidora de cable TV. Los cables coaxiales usan conectores "F." • Los cables normales de A/V (audio/video) usualmente est n codificados con colores seg n su uso: amarillo para video, rojo y para audio.

[Page 52: Conectando Una Caja Convertidora Para Cable Tv O Antena](#)

Conectando una caja convertidora para cable TV o Antena Este televisor puede sintonizar la mayor a de los canales por cable sin necesidad de recurrir al convertidor suministrado por los canales de cable. Algunas compa  as de cable ofrecen "canales pagados exclusivos" en los cuales la se al esta codificada. La decodificaci n de esas se ales para la obtenci n de una se al normal requiere el uso de un decodificador que es generalmente provisto por la compa  a de cable.

[Page 53: Conectando Un Reproductor De Dvd/Receptor Satelital Y Una Videograbadora](#)

Conectando un reproductor de DVD/receptor satelital y una videograbadora Esta conexi n le permite ver DVD o canales satelitales, videocintas o programas de televisi n. Podr  grabar del receptor satelital y la televisi n, as  como grabar un canal de televisi n mientras est  viendo otro canal.

[Page 54: Conectando Un Reproductor De Dvd Con Colorstream \(Componente De Video\) Y Una Videograbadora](#)

ColorStream (componente de video). Al conectar su televisor a un reproductor de DVD compatible con el video de componentes, tal como un reproductor de DVD Toshiba con ColorStream la calidad de la imagen y el desempeño. Reproductor de DVD con Componente de video...

[Page 55: Conectando Un Receptor De Dtv O Caja De Conexión Con Un Video Componente Colorstream Y Una Videograbadora](#)

Conectando un receptor de DTV o caja de conexión con un componente de video ® ColorStream y una videograbadora Esta conexión le permite mirar DTV (Televisor Digital), la videograbadora, los programas de televisión y grabar los programas de DTV y TV. Su televisor tiene entradas para componente de video ColorStream Al conectar su televisor a un receptor de DTV con un componente de video podrá...

[Page 56: Conectando Una Videocámara](#)

Conectando una videocámara Esta conexión le permite ver los materiales de videos grabados en una videocámara. Panel delantero de la TV S-VIDEO Panel delantero de la TV J3W60321A(S)_P07-14 Videocámara AUDIO VIDEO Videocámara S-VHS AUDIO VIDEO Usted necesitará lo siguiente: • Un juego de cables normales de A/V Usted necesitará...

[Page 57: Conexión De Un Dispositivo De Hdmi™ O Dvi](#)

Conexión de un dispositivo de HDMI™ o DVI Las entradas de HDHI (High-Definition Multimedia Interface) de su televisor reciben audio digital y video digital no comprimido de dispositivos de una fuente de HDMI o video digital no comprimido de dispositivos de una fuente de Interfaz de Video Digital (Digital Visual Interface, DVI).

[Page 58: Conexión De Un Sistema De Audio Analógico](#)

Conexión de un sistema de audio analógico Esta conexión permite utilizar altavoces exteriores junto con un amplificador exterior de audio para regular el volumen. Para controlar el audio: Encienda el televisor y el amplificador estéreo. Desconecte los altavoces incorporados del televisor (ver "Apagando los altavoces incorporados"...

[Page 59: Usando El Control Remoto](#)

El mando a distancia es preprogramado para manejar la mayoría de los receptores de satélite, grabadores de video, y lectores de DVD de Toshiba. Para controlar un dispositivo que no sea de Toshiba (o un dispositivo de Toshiba cuyo mando a distancia no haya sido preprogramado para manejar), usted debe programar primero el mando a distancia.

[Page 60: Programando El Control Remoto Para Operar Otros Aparatos](#)

Este control remoto está preprogramado para operar receptores satelitales, videograbadoras y reproductores de DVD Toshiba. Para controlar receptores satelitales, videograbadoras, reproductores de DVD, o convertidores de cable TV diferentes a los modelos de Toshiba, usted deberá seguir los pasos de abajo para programar su control remoto.

[Page 61: Tablas De Código De Dispositivos](#)

Tablas de código de dispositivos [Para el modo de CBL/SAT] Caja de cable Marca Código Satélite Marca Código [Para el modo de VCR] Videograbadora Marca Código J3W60321A(S)_P15-22 Marca Código Marca Marca Código Marca Marca Código Marca 27/2/06, 9:58 AM Código Código Código...

[Page 62](#) [Para el modo de VCR] Videograbadora (continuación) Marca Código TV/VCR Combo Marca Código [Para el modo de DVD] Marca Código DVD portátil Marca Código HTIB Marca Código [Para el modo de VCR y DVD] Conjunto de DVD/VCR Marca Código de VCR J3W60321A(S)_P15-22 Marca Código...

[Page 63: Aprendiendo Sobre El Control Remoto](#)

Aprendiendo sobre el control remoto TV/VIDEO selecciona la fuente de entrada del video (página 28) RECALL despliega la información del estado de la TV en pantalla (página 40) MUTE apaga el sonido (página 37) POWER enciende y apaga la televisor CHANNEL NUMBERS permite el acceso directo a los canales (página 22) CH RTN (Channel Return) regresa al último canal

visto (página 22) TV selecciona el modo de televisor...

[Page 64: Configurando Su Televisor](#)

Configurando su televisor Después que haya instalado las baterías y haya programado el control remoto, necesitará establecer algunas preferencias en la televisor que usa el sistema de menú. Podrá acceder al sistema de menú con los botones en el control remoto.

[Page 65: Corrección De Inclinación De La Imagen](#)

Corrección de inclinación de la imagen Cuando instale o cambie la dirección de la televisor, la imagen podrá inclinarse (causado por el magnetismo de la Tierra). Si esto pasa, use la función de corrección de inclinación de la imagen para obtener la mejor imagen posible.

[Page 66: Usando Las Funciones De El Televisor](#)

Cambiando los canales Para cambiar al siguiente canal programado, haga lo siguiente: Presione CHANNEL ▲/▼ en el televisor o CH remoto. Para cambiar a un canal analógico específico: Presione los botones de números para los canales (Del 0 al 9) en el control remoto.

[Page 67: Usando El Menú De Bloquear](#)

Para eliminar sus canales favoritos: 1. Seleccione un canal que desee eliminar de la memoria de canal favorito. 2. Presione MENU, luego presione OPCION. 3. Presione ▲ o ▼ para resaltar CAN FAVOR. 4. Presione para desplegar el menú de CAN FAVOR. AJUSTE/DESPEJAR se resaltará.

[Page 68: La Función Del V-Chip \(Control Paterno\)](#)

5. Podrá configurar ahora el menú de CERRAR. Vea “La función del V-Chip (control paterno)” (debajo), “Bloqueando los canales” (página 25), “Bloqueando la entrada de video” (página 26), “Configurando el GameTimer ” (página 26) o “Usando la función de bloqueo del panel frontal”...

[Page 69: Bloqueando Los Canales](#)

7. Cuando haya terminado de seleccionar las clasificaciones, presione EXIT para regresar a la vista normal. Cuando trate de ver un programa con un bloqueo de clasificación, aparecerá un mensaje que lista las clasificaciones del programa. El programa todavía podrá verse si presiona MUTE y luego ingrese su contraseña para pasar por alto el bloqueo temporalmente.

[Page 70: Bloqueando La Entrada De Video](#)

Bloqueando la entrada de video Con la función de BLOQUEO VIDEO, podrá bloquear las fuentes de entrada (VIDEO-1, VIDEO-2, VIDEO-3, ColorStream HD-1, ColorStream HD-2, HDMI) y los canales 3 y 4. No podrá seleccionar las fuentes de entrada con el botón de TV/VIDEO o los botones de Channel a menos que limpie la configuración.

[Page 71: Usando La Función De Bloqueo Del Panel Frontal](#)

Usando la función de bloqueo del panel frontal Podrá bloquear los botones del panel frontal para prevenir que sus configuraciones sean cambiadas accidentalmente (por los niños, por ejemplo). Cuando el bloqueo del panel frontal esté en ON, todos los botones de control en el panel frontal de la televisor (excepto POWER) no operarán.

[Page 72: Seleccionando La Fuente De Entrada De Video](#)

Seleccionando la fuente de entrada de video Presione TV/VIDEO para ver una señal de otro dispositivo conectado a su televisor, como una videograbadora o reproductor de DVD. Podrá seleccionar ANT, VIDEO1, VIDEO2, VIDEO3, ColorStream HD1, ColorStream HD2 o HDMI, dependiendo qué conectores de entrada usted usó...

[Page 73: Configurando El Reloj](#)

Configurando el reloj Deberá ajustar el reloj antes de que pueda programar el cronómetro de ON/OFF. Para ajustar el reloj: (Ejemplo: 8:30 AM Marzo, 25 (SAB), 2006) 1. Presione MENU, luego presione para desplegar el menú de COLOCAR. 2. Presione ▲ o ▼ para resaltar AJUSTE RELOJ, luego presione 3.

[Page 74: Viendo Los Formatos De Imágenes De Pantalla Amplia \(Sólo](#)

[Para Señales De 480i Y 480p\)](#)

Viendo los formatos de imágenes de pantalla amplia (Sólo para señales de 480i y 480p) Podrá ver programas en formato de 480i y 480p en una variedad de tamaños: Natural, Dimensión Cine1, Dimensión Cine2, Dimensión Cine3 y Completo. La manera en que se despliegue la imagen en cualquiera de los tamaños de la imagen variará, dependiendo del formato del programa que esté...

[Page 75](#) Tamaño Dimensión Cine2 de la imagen (para los programas en “letter-box”) • La imagen se extiende en la misma proporción de forma más amplia y más alta (retiene su proporción original). • Los márgenes superior e inferior de la imagen podrían estar ocultos. Para ver las áreas ocultas, vea “Desplazando la imagen TheaterWide”...

[Page 76: Desplazando La Imagen Theaterwide \(Sólo Dimensión Cine2 Y 3\)](#)

Desplazando la imagen TheaterWide (sólo Dimensión Cine2 y 3) 1. Presione PIC SIZE para seleccionar el modo Dimensión Cine2 ó 3. 2. Presione MENU, o manténgalo presionado aparezca el menú de COLOCAR. 3. Presione ▲ o ▼ para resaltar EXPLORACIÓN DE IMAGEN. COLOCAR SUBTITULO SUBTITULOS AVANZADOS...

[Page 77: Seleccionando La Modalidad Cinema](#)

Seleccionando la modalidad CINEMA Cuando vea una película en DVD (con proceso desplegable 3:2) del reproductor de DVD conectado a las entradas del ColorStream (video componente) en el televisor, podrá obtenerse una película más nítida y natural al configurar MODO CINE a PELICULA. Para fijar MODO CINE a PELICULA: 1.

[Page 78: Ajustando La Calidad De La Imagen](#)

Ajustando la calidad de la imagen Podrá ajustar la calidad de la imagen a sus preferencias personales, incluyendo el contraste, brillo, color, tinte, y nitidez. Las calidades que escoja se guardarán automáticamente en la memoria de su televisor para que pueda hacerlas volver en cualquier momento. Para ajustar la calidad de la imagen: 1.

[Page 79: Usando La Función Cableclear](#)

Usando la función CableClear CableClear ® reduce la interferencia visible en su imagen de televisión. Esto es útil cuando se reciba una transmisión con una señal débil (sobre todo en un canal de Cable), al reproducir una videocasete o si el disco se daña por el uso repetido.

[Page 80: Configurando El Cronómetro Apagado Automatico \(Sleep Timer\)](#)

Configurando el cronómetro apagado automatico (sleep timer) Podrá configurar la televisor para que se apague automáticamente. Para ajustar el cronómetro apagado automatico (sleep timer): Presione repetidamente SLEEP en el control remoto para fijar la duración de tiempo hasta que la televisor se apague. El reloj hará una cuenta regresiva de 10 minutos por cada presión del botón SLEEP (0h00m, 0h10m,...1h50m, 2h00m).

[Page 81: Ajustando El Sonido](#)

Ajustando el sonido Enmudeciendo el sonido Presione MUTE para apagar el sonido temporalmente. Mientras que el sonido esté apagado, la pantalla desplegará la palabra MUDO (Enmudecido) en la esquina inferior derecha. Para restaurar el sonido, presione MUTE nuevamente, o VOL +/- Seleccionando las estaciones en estéreo/SAP El sonido multicanal de televisor (MTS - Multi-channel TV) proporciona sonido estereofónico de alta fidelidad.

[Page 82: Usando La Función De Sonido Stablesound](#)

Usando la función de sonido StableSound La función de StableSound limita el nivel más alto del volumen para prevenir cambios extremos en el volumen cuando se cambie la fuente de señal. Para encender la función de StableSound 1. Presione MENU, luego presione menú...

[Page 83: Usando La Función De Sonido Bbe](#)

Usando la función de sonido BBE Al corregir la demora de la fase y la distorsión naturalmente generada por los sistemas de bocinas, la función de sonido BBE* asegura que el sonido que llega a sus oídos sea tan natural como el sonido original. Las voces humanas son más claras y

la música es natural y bien definida.

[Page 84: Restableciendo Sus Ajustes De Audio](#)

Restableciendo sus ajustes de audio La función de RESET devolverá los ajustes de audio a las configuraciones de fábrica siguientes: Grave ... Centro (25) Agudo ... Centro (25) Balance ... Centro (0) Para restablecer sus ajustes de audio: 1. Presione MENU, luego presione AUDIO.

[Page 85: Apagado Automático](#)

Apagado automático El televisor se apagará automáticamente después de aproximadamente 15 minutos si se sintoniza en un canal libre o una estación que termine su transmisión por el día y deje de transmitir en ese canal. Esta función no trabaja en el modo de VIDEO.

[Page 86: Especificaciones](#)

Especificaciones • Este modelo cumple con las especificaciones de abajo. • El diseño y las especificaciones están sujetos a cambios sin previo aviso. • Este modelo tal vez no sea compatible con las funciones y/o especificaciones que puedan agregarse en el futuro. Tubo de imagen Sistema de televisión Cobertura de canales...

[Page 87: Garantía Limitada De Los Estados Unidos](#)

Garantía limitada en los Estados Unidos Para todos los televisores FST PURE Toshiba America Consumer Products, L.L.C. ("TACP") ofrece las siguientes garantías limitadas al consumidor original de estos televisores en los Estados Unidos. ESTAS GARANTÍAS LIMITADAS SE EXTIENDEN AL COMPRADOR/CONSUMIDOR ORIGINAL DE ESTE TELEVISOR, O A CUALQUIER OTRA PERSONA QUE LO RECIBA COMO REGALO DEL COMPRADOR/CONSUMIDOR ORIGINAL, Y NO A NINGÚN OTRO...

[Page 88](#) National Service Division CableClear, ColorStream, FST Pure, TheaterWide et StableSound es una marca registrada de Toshiba America Consumer Products, L.L.C. GameTimer es una marca comercial de Toshiba America Consumer Products, L.L.C. IMPRESO EN TAILANDIA J3W60321A(S)_P38-Back 27/2/06, 10:01 AM...