





## Whirlpool RCS3004 Use & Care Manual

Whirlpool electric cooktop use and care guide



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16



- 

[Table of Contents](#)


- 

Troubleshooting

•

## Bookmarks

Available languages

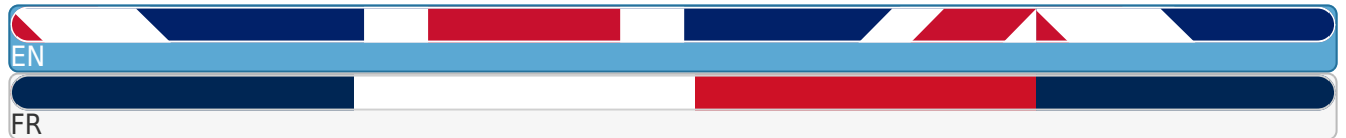


## Quick Links

[1 Cooktop Controls](#)

[2 Parts and Features](#)

[Download this manual](#)



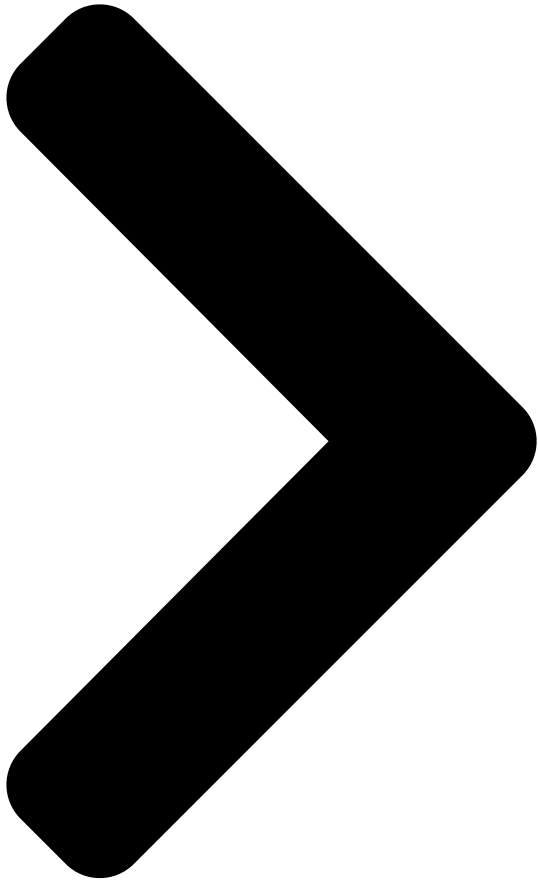

**W10162164A**

# **ELECTRIC COOKTOP**

## **Use & Care Guide**

For questions about features, operation/performance, parts, accessories or service, call: 1-800-253-1301 or visit our website at [www.whirlpool.com](http://www.whirlpool.com). In Canada call 1-800-807-6777 or visit our website at [www.whirlpoolappliances.ca](http://www.whirlpoolappliances.ca).

## **TABLE DE CUISSON**

## **ÉLECTRIQUE**

**Guide d'utilisation  
et d'entretien**



Au Canada composez le 1-800-807-6777 ou visitez notre site web à [www.whirlpoolappliances.ca](http://www.whirlpoolappliances.ca)

Table of Contents/Table des matières ..... 2


**Models/Modèles**

**RCS2002, RCS2012,**

**RCS3004, RCS3014,**

**RCS3614**

®

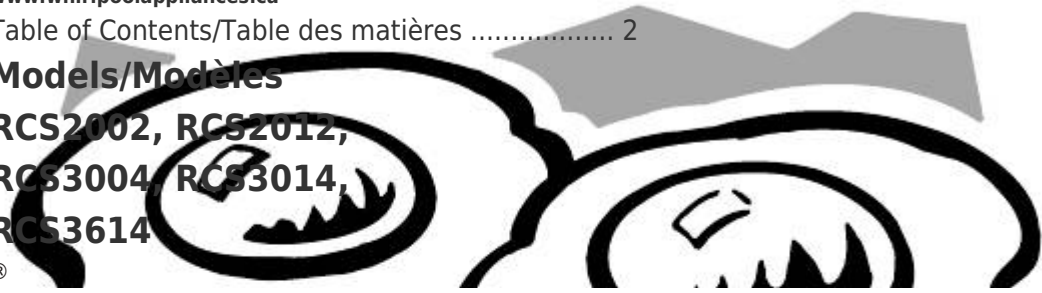

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Whirlpool RCS3004

### [Cooktop Whirlpool RCS2002 Use & Care Manual](#)

Whirlpool electric cooktop use & care guide (19 pages)

### [Cooktop Whirlpool RSC2002RS06 Use & Care Manual](#)

Electric cooktop (16 pages)

### [Cooktop WHIRLPOOL RCS2002 Use & Care Manual](#)

(16 pages)

### [Cooktop Whirlpool RCS2002 Use & Care Manual](#)

(16 pages)

### [Cooktop Whirlpool RCS2012 Use & Care Manual](#)

Electric (16 pages)

### [Whirlpool RCS2002, RCS2012, RCS3004, RCS3014, RCS3614 - 21-inch](#)

### [Electric Cooktop with Stainless Steel Surface Manual](#)

(article)

### [Cooktop Whirlpool RCS3014RQ04 Installation Instructions Manual](#)

Electric built-in cooktops 21" (53.3cm), 30" (76.2cm), and 36" (91.4 cm) (16 pages)

### [Cooktop Whirlpool RCS2002RS Installation Instructions Manual](#)

Electric built-in cooktops 21" (53.3 cm), 30" (76.2 cm), and 36" (91.4 cm) (16 pages)

### [Cooktop Whirlpool RCS2012R Parts List](#)

20" electric built-in cooktop (2 pages)

### [Cooktop Whirlpool RCS3014R Parts List](#)

Electric built-in cooktop (2 pages)

### [Cooktop Whirlpool RCS3004R Dimensions And Installation Information](#)

Electric built-in cooktop (1 page)

### [Cooktop Whirlpool RCS2002GS1 Installation Instructions Manual](#)

Electric built-in cooktops 21" (53.3 cm), 30" (76.2 cm) and 36" (91.4 cm) (13 pages)

### [Cooktop Whirlpool RCS2002RS03 Parts List](#)

20" electric built-in cooktop (2 pages)

### [Cooktop Whirlpool KECS100G Owner's Manual](#)

Whirlpool & kitchenaid built-in electric cooktops (42 pages)

### [Cooktop Whirlpool RCS2012RS00 Parts List](#)

20" electric built-in cooktop (2 pages)

### [Cooktop Whirlpool RCS2012RS03 Parts List](#)

20" electric built-in cooktop (2 pages)

## Summary of Contents for Whirlpool RCS3004

### [Page 1: Table De Cuisson](#)

W10162164A ELECTRIC COOKTOP Use & Care Guide For questions about features, operation/performance, parts, accessories or service, call: 1-800-253-1301 or visit our website at [www.whirlpool.com](http://www.whirlpool.com) In Canada call 1-800-807-6777 or visit our website at

## [Page 2: Table Of Contents](#)

TABLE OF CONTENTS COOKTOP SAFETY...2 PARTS AND FEATURES...4 COOKTOP USE ...4  
Cooktop Controls...4 Coil Elements and Burner Bowls ...5 Home Canning ...5 Cookware ...5  
COOKTOP CARE...6 General Cleaning...6 TROUBLESHOOTING ...6 ASSISTANCE OR SERVICE...7 In  
the U.S.A..7 In Canada ...7 WARRANTY ...8 Your safety and the safety of others are very  
important.

## [Page 3: Important Safety Instructions](#)

IMPORTANT SAFETY INSTRUCTIONS WARNING: To reduce the risk of fire, electrical shock, injury to persons, or damage when using the cooktop, follow basic precautions, including the following: CAUTION: Do not store items of interest to children in cabinets above a cooktop – Children climbing on the cooktop to reach items could be seriously injured.

## [Page 4: Parts And Features](#)

This manual covers different models. The cooktop you have purchased may have some or all of the items listed. The locations and appearances of the features shown here may not match those of your model. Control Panel MEDIUM MEDIUM MEDIUM MEDIUM A.

## [Page 5: Coil Elements And Burner Bowls](#)

POWER ON Light Each control knob will activate the POWER ON light. The light will glow red when any control knob is on. Coil Elements and Burner Bowls (on some models) Coil elements should be level for optimal cooking results. Burner bowls, when clean, reflect heat back to the cookware.

## [Page 6: Cooktop Care](#)

IMPORTANT: Before cleaning, make sure all controls are off and the cooktop is cool. Always follow label instructions on cleaning products. Soap, water and a soft cloth or sponge are suggested first unless otherwise noted. STAINLESS STEEL (on some models) Cleaning Method: Rub in direction of grain to avoid damaging.

## [Page 7: Assistance Or Service](#)

To locate the Whirlpool designated service company in your area, you can also look in your telephone directory Yellow Pages. For further assistance If you need further assistance, you can write to Whirlpool Corporation with any questions or concerns at: Whirlpool Brand Home Appliances Customer eXperience Center...

## [Page 8: Warranty](#)

Whirlpool Corporation or Whirlpool Canada LP (hereafter “Whirlpool”) will pay for Factory Specified Parts and repair labor to correct defects in materials or workmanship. Service must be provided by a Whirlpool designated service company. This limited warranty is valid only in the United States or Canada and applies only when the major appliance is used in the country in which it was purchased.

## [Page 9: Sécurité De La Table De Cuisson](#)

SÉCURITÉ DE LA TABLE DE CUISSON Votre sécurité et celle des autres est très importante. Nous donnons de nombreux messages de sécurité importants dans ce manuel et sur votre appareil ménager. Assurez-vous de toujours lire tous les messages de sécurité et de vous y conformer. Voici le symbole d’alerte de sécurité.

[Page 10](#) IMPORTANTES INSTRUCTIONS DE SÉCURITÉ AVERTISSEMENT : Pour réduire le risque d’incendie, de choc électrique, de blessures ou de dommages lors de l’utilisation de la table de cuisson, observer les précautions élémentaires suivantes, y compris ce qui suit : MISE EN GARDE : Ne pas remiser dans les armoires au-dessus d’une table de cuisson, des articles que des enfants pourraient vouloir atteindre.

## [Page 11: Pièces Et Caractéristiques](#)

PIÈCES ET CARACTÉRISTIQUES Ce manuel couvre différents modèles. La table de cuisson que vous avez achetée peut comporter quelques-uns ou tous les articles énumérés. L'emplacement et l'apparence des caractéristiques illustrées peuvent ne pas correspondre à ceux de votre

modèle. Tableau de commande MEDIUM MEDIUM MEDIUM...

### [Page 12: Utilisation De La Table De Cuisson](#)

UTILISATION DE LA TABLE DE CUISSON Commandes de la table de cuisson AVERTISSEMENT  
Risque d'incendie Fermer tous les réglages lorsque la cuisson est terminée. Le non-respect de cette instruction peut causer un décès ou un incendie. Les boutons de commande peuvent être réglés à n'importe quelle position entre HI et LO.

### [Page 13: Préparation De Conserves À La Maison](#)

Préparation de conserves à la maison Lors de la préparation de conserves pendant de longues périodes, alterner l'utilisation des surfaces de cuisson, des éléments ou des brûleurs de surface entre les quantités préparées. Cette alternance permet aux dernières surfaces utilisées de refroidir. Centrer l'autoclave sur la grille ou la plus grande surface de cuisson ou sur le plus grand élément.

### [Page 14: Dépannage](#)

Ne pas utiliser de laine d'acier, de produits de nettoyage abrasifs ou de nettoyant pour four. Ne pas immerger les boutons de commande. Lors de la réinstallation des boutons, s'assurer que chaque bouton est à la position Off (arrêt). Sur certains modèles, ne pas enlever les joints sous les boutons. TABLEAU DE COMMANDE Méthode de nettoyage : Nettoyant à...

### [Page 15: Assistance Ou Service](#)

Pour plus d'assistance Si vous avez besoin de plus d'assistance, vous pouvez ® dans votre région, soumettre par écrit toute question ou préoccupation à Whirlpool Canada LP à l'adresse suivante : Centre d'interaction avec la clientèle Whirlpool Canada LP 1901 Minnesota Court Mississauga, Ontario L5N 3A7 Veuillez inclure dans votre correspondance un numéro de...

### [Page 16: Garantie](#)

5. Les défauts apparents, notamment les éraflures, les bosses, fissures ou tout autre dommage au fini du gros appareil ménager, à moins que ces dommages soient dus à des vices de matériaux ou de fabrication et soient signalés à Whirlpool dans les 30 jours suivant la date d'achat.

This manual is also suitable for:

[Rcs3014Rcs3614](#) [rcs2012rs](#) [rcs3014rb](#) [rcs3014rq](#) [rcs3014rs](#) ... [Show all](#)