


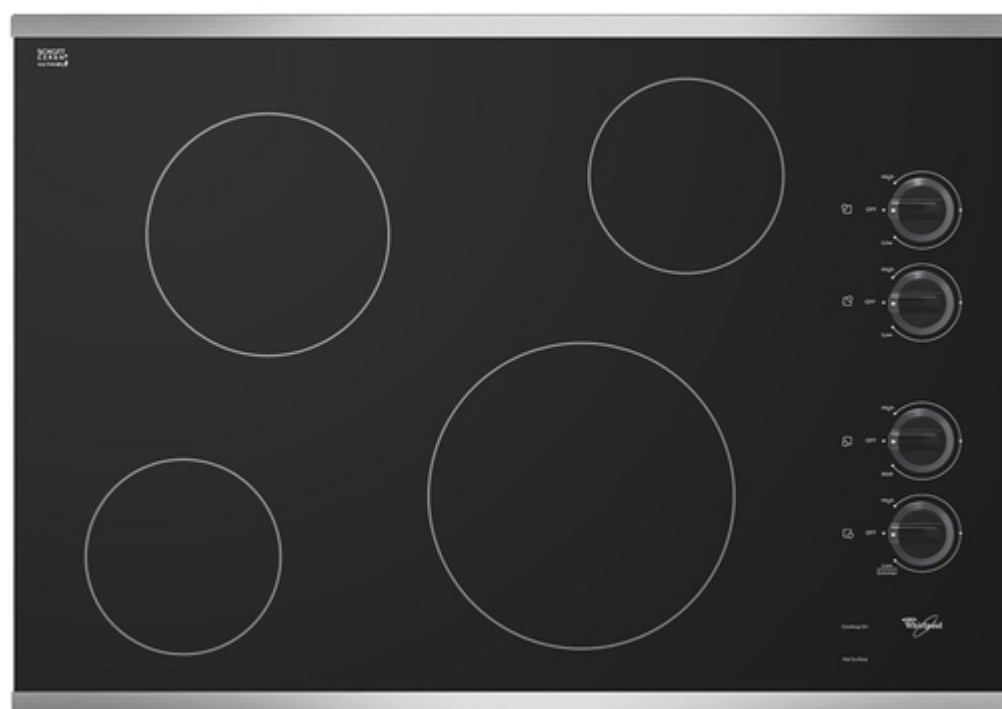

Whirlpool W10346695A Installation Instructions Manual

Whirlpool cooktop user manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16

-


[Table of Contents](#)

•

Bookmarks

--

Available languages

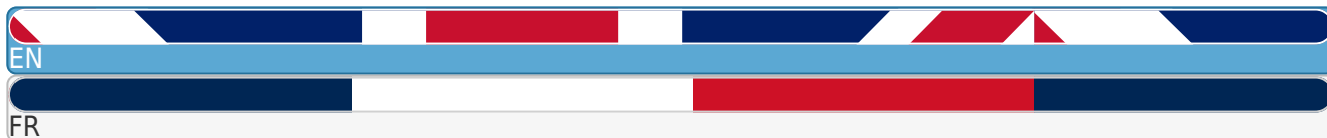

Quick Links

- [1 Installation Requirements](#)
- [2 Location Requirements](#)
- [3 Electrical Requirements](#)


[4 Install Cooktop](#)

[5 Installation Instructions](#)

[6 Prepare Cooktop for Installation](#)

[7 Make Electrical Connection](#)

[Download this manual](#)

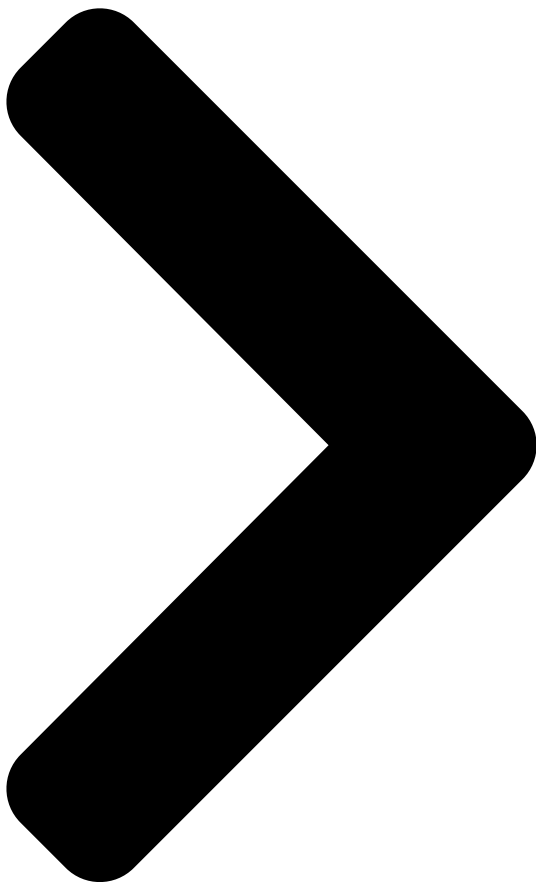

ELECTRIC COOKTOP INSTALLATION INSTRUCTIONS

INSTRUCTIONS D'INSTALLATION DE LA TABLE



COOKTOP SAFETY	1
INSTALLATION REQUIREMENTS	2
Tools and Parts	2
Location Requirements	2
Electrical Requirements	3
INSTALLATION INSTRUCTIONS	4
Prepare Cooktop for Installation	4
Install Cooktop	4
Make Electrical Connection	6
Attach Cooktop to Countertop	8

Complete Installation	8
---	---

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING."

These words mean:



All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT:

Save for local electrical inspector's use.

IMPORTANT :

À conserver pour consultation par l'inspecteur local des installations électriques.

W10346695A

DE CUISSON ÉLECTRIQUE

Table of Contents / Table des matières

COOKTOP SAFETY

Your safety and the safety of others are very important.

®

SÉCURITÉ DE LA TABLE DE CUISSON	9
---	---

EXIGENCES D'INSTALLATION	9
--	---

Outils et pièces	9
--	---

Exigences d'emplacement	9
---	---

Spécifications électriques	11
--	----

INSTRUCTIONS D'INSTALLATION	12
---	----

Préparation de la table de cuisson pour l'installation	12
--	----

Installation de la table de cuisson	12
---	----

Raccordement électrique	14
---	----

Fixation de la table de cuisson au plan de travail	16
--	----

Achever l'installation	16
--	----

You can be killed or seriously injured if you don't immediately follow instructions.

You can be killed or seriously injured if you don't follow instructions.



ManualsLib.com

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool W10346695A

[Cooktop Whirlpool G7CE3034 Use & Care Manual](#)

Electric cooktop (32 pages)

[Cooktop Whirlpool GAS ON METAL COOKTOP G7CG3665 Use And Care Manual](#)

Gas on metal cooktop (24 pages)

[Cooktop Whirlpool G7CG3064XS Installation Instructions Manual](#)

30" (76.2 cm) and 36" (91.4 cm) gas built-in cooktop (24 pages)

[Cooktop Whirlpool G7CE3655XB00 Use & Care Manual](#)

(32 pages)

[Cooktop Whirlpool G7CE3034X Product Dimensions](#)

Electric built-in cooktop (1 page)

[Cooktop Whirlpool G7CE3034X Product Dimensions](#)

Electric built-in cooktop (1 page)

[Cooktop Whirlpool G7CG3064X Product Dimensions](#)

30" (76.2 cm) and 36" (91.4 cm) gas built-in cooktop (2 pages)

[Cooktop Whirlpool W5CG3625XB Installation Manual](#)

30" (76.2 cm) and 36" (91.4 cm) gas built-in cooktop (20 pages)

[Cooktop WHIRLPOOL G7CG3064 Use & Care Manual](#)

Gas on metal cooktop (24 pages)

[Cooktop Whirlpool G7CG3064XS00 Use & Care Manual](#)

Gas on metal cooktop (24 pages)

[Cooktop Whirlpool G7CG3064 Installation Instructions Manual](#)

30" (76.2 cm) and 36" (91.4 cm) gas built-in cooktop (24 pages)

[Cooktop Whirlpool W5CG3024XW01 Installation Instructions Manual](#)

30" (76.2 cm) and 36" (91.4 cm) gas built-in cooktop (24 pages)

[Cooktop Whirlpool G7CE3034XP00 Installation Instructions Manual](#)

Electric cooktop (16 pages)

[Cooktop Whirlpool W10131955C Installation Instructions Manual](#)

30" (76.2 cm) and 36" (91.4 cm) gas built-in cooktop (24 pages)

[Cooktop Whirlpool GS773LXS Use And Care Manual](#)

Whirlpool gas range use and care guide (24 pages)

[Cooktop Whirlpool GLS3064RS01 Use & Care Manual](#)

Gas sealed burner cooktop (20 pages)

Summary of Contents for Whirlpool W10346695A

[Page 1: Table Of Contents](#)

IMPORTANT: Save for local electrical inspector's use. IMPORTANT : À conserver pour consultation par l'inspecteur local des installations électriques. W10346695A DE CUISSON ÉLECTRIQUE Table of Contents / Table des matières SÉCURITÉ DE LA TABLE DE CUISSON ... 9 EXIGENCES D'INSTALLATION... 9 Outils et pièces...

[Page 2: Installation Requirements](#)

INSTALLATION REQUIREMENTS Tools and Parts Gather the required tools and parts before

starting installation. Read and follow the instructions provided with any tools listed here. Tools needed Tape measure Marker or pencil ¼" (6.35 mm) nut driver Pliers Flat-blade screwdriver Parts supplied Foam strip roll 2½"...

[Page 3: Electrical Requirements](#)

Cabinet Dimensions IMPORTANT: If installing a range hood or microwave hood combination above the cooktop, follow the range hood or microwave hood combination installation instructions for dimensional clearances above the cooktop surface. " " " A. 30 (76.2 cm) on 30 models;...

[Page 4: Installation Instructions](#)

The cooktop should be connected directly to the junction box through flexible, armored or nonmetallic sheathed, copper cable. The flexible, armored cable extending from the fuse box or circuit breaker box should be connected directly to the junction box. Locate the junction box to allow as much slack as possible between the junction box and the cooktop so that the cooktop can be moved if servicing becomes necessary in the future.

[Page 5](#) Installing Brackets Before Placing Cooktop in Cutout 1. Using 2 or more people, place the cooktop upside down on a covered surface using the foam end posts from the packaging. Make sure that the knobs are not resting on the foam.

[Page 6: Make Electrical Connection](#)

WARNING Electrical Shock Hazard Disconnect power before servicing. Use 8 gauge copper wire. Electrically ground cooktop. Failure to follow these instructions can result in death, fire, or electrical shock. This cooktop is manufactured with a frame connected, green or bare ground wire. Connect the cooktop cable to the junction box through the UL listed or CSA approved conduit connector.

[Page 7](#) 3-Wire Cable from Power Supply to 4-Wire Cable from Cooktop IMPORTANT: Use the 3-wire cable from power supply where local codes permit connecting the frame-ground conductor to the neutral (white) junction box wire: A. 3-wire cable from power F. White wire (from power supply B.

[Page 8: Attach Cooktop To Countertop](#)

3-Wire Cable from Power Supply to 3-Wire Cable from Cooktop IMPORTANT: Use the 3-wire cable from power supply where local codes permit connecting the frame-ground conductor to the neutral (white) junction box wire: A. 3-wire cable from power E. Junction box supply F.

[Page 9: Sécurité De La Table De Cuisson](#)

SÉCURITÉ DE LA TABLE DE CUISSON Votre sécurité et celle des autres est très importante. Nous donnons de nombreux messages de sécurité importants dans ce manuel et sur votre appareil ménager. Assurez-vous de toujours lire tous les messages de sécurité et de vous y conformer. Voici le symbole d'alerte de sécurité.

[Page 10](#) La table de cuisson doit être installée à l'écart des zones de forts courants d'air, telles que fenêtres, portes et événements ou ventilateurs de chauffage puissants. La table de cuisson doit être installée à un endroit pratique dans la cuisine. Utiliser les dimensions d'ouverture du plan de travail qui sont indiquées dans ces Instructions d'installation.

[Page 11: Spécifications Électriques](#)

AVERTISSEMENT Risque de choc électrique Déconnecter la source de courant électrique avant l'entretien. Utiliser du fil en cuivre de calibre 8. Relier la table de cuisson à la terre. Le non-respect de ces instructions peut causer un décès, un incendie ou un choc électrique. Si l'on utilise un conducteur distinct de liaison à...

[Page 12: Instructions D'installation](#)

INSTRUCTIONS D'INSTALLATION Préparation de la table de cuisson pour l'installation
AVERTISSEMENT Risque du poids excessif Utiliser deux ou plus de personnes pour déplacer et installer la table de cuisson. Le non-respect de cette instruction peut causer une blessure au dos ou d'autre blessure. Déterminer l'emplacement final de la table de cuisson.

[Page 13](#) Installation des brides avant de positionner la table de cuisson dans l'ouverture 1. À

l'aide de deux personnes ou plus, placer la table de cuisson à l'envers sur une surface couverte en utilisant les cornières en polystyrène de l'emballage. S'assurer que les boutons ne reposent pas sur le polystyrène.

[Page 14: Raccordement Électrique](#)

AVERTISSEMENT Risque de choc électrique Déconnecter la source de courant électrique avant l'entretien. Utiliser du fil en cuivre de calibre 8. Relier la table de cuisson à la terre. Le non-respect de ces instructions peut causer un décès, un incendie ou un choc électrique. Un conducteur vert ou nu de liaison à...

[Page 15](#) Câble à 3 conducteurs depuis le point de distribution avec câble à 4 conducteurs depuis la table de cuisson IMPORTANT : Utiliser le câble à 3 conducteurs lorsque le code local en vigueur permet le raccordement entre le conducteur de liaison à...

[Page 16: Fixation De La Table De Cuisson Au Plan De Travail](#)

® Registered Trademark/TM Trademark of Whirlpool, U.S.A., Whirlpool Canada LP Licensee in Canada Tous droits réservés. ® Marque déposée/TM Marque de commerce de Whirlpool, U.S.A., emploi sous licence par Whirlpool Canada LP au Canada Fixation de la table de cuisson au plan de travail REMARQUE : Cette section s'applique uniquement en cas...

This manual is also suitable for:

W5ce3024xsG7ce3034xcG7ce3034xpG7ce3034xsG7ce3055xbG7ce3055xs ... [Show all](#)