



Whirlpool 1182182 Use And Care Manual

Whirlpool dehumidifier 1182182 use & care guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24


•

•

Bookmarks

--


Available languages

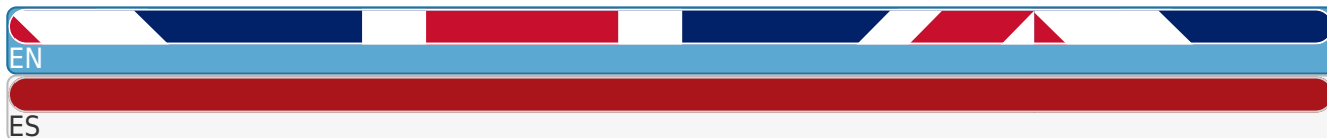

Quick Links

[1 Maintenance](#)

[Download this manual](#)

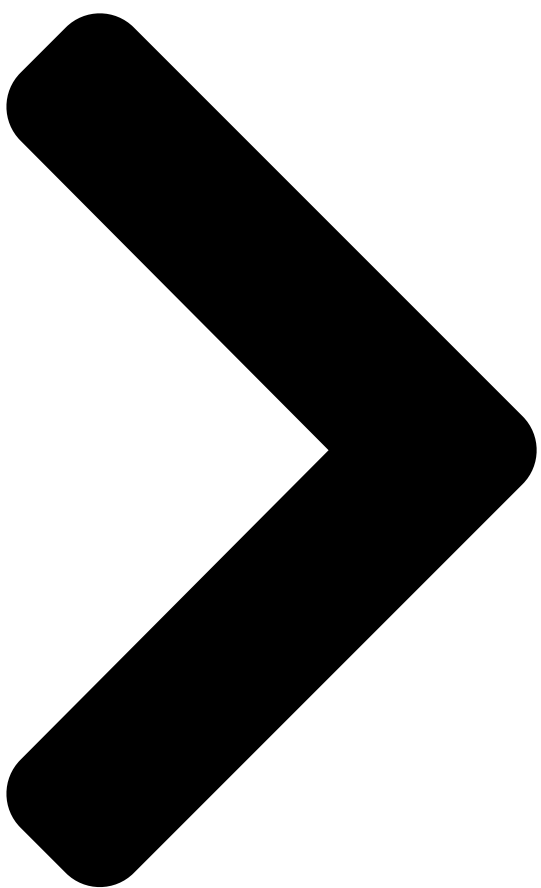

Dehumidifier

Use & Care Guide

Contents

Safety information


2

Electrical requirements

3

Installing dehumidifier

Dehumidifier Use & Care Guide

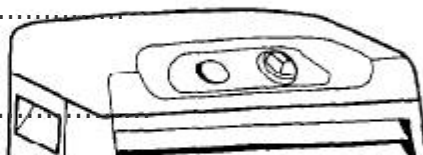

4	Operating dehumidifier
5	Removing and emptying water bucket

6-7	Water level float and automatic shutoff
-----	---

8	Caring for your dehumidifier
---	------------------------------------

9	If you need assistance or service
---	---


10-11

	Warranty
--	----------------

Back Cover

Part No. 1182182 Rev. A

Dehumidifier Use & Care Guide

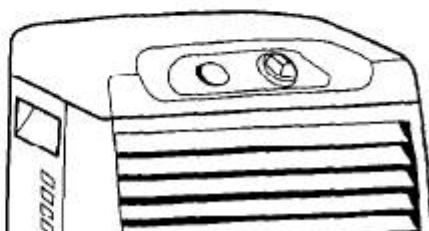

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool 1182182

[Dehumidifier Whirlpool 1185020 Use And Care Manual](#)

Whirlpool dehumidifier 1185020 use & care guide (24 pages)

[Dehumidifier Whirlpool AD25BBK0 Use And Care Manual](#)

Whirlpool dehumidifier use & care guide (24 pages)

[Dehumidifier Whirlpool AD35DSS0 Use And Care Manual](#)

Whirlpool dehumidifier use and care guide (16 pages)

[Dehumidifier Whirlpool 1187984 Use And Care Manual](#)

Whirlpool dehumidifier use & care guide (16 pages)

[Dehumidifier WHIRLPOOL 1184914-W Warranty](#)

(1 page)

[Dehumidifier Whirlpool 1188927 Use And Care Manual](#)

(20 pages)

[Dehumidifier Whirlpool 1ADM202XX0 Use And Care Manual](#)

Whirlpool dehumidifier use & care guide (13 pages)

[Dehumidifier Whirlpool Dehumidifier Use & Care Manual](#)

Dehumidifier (22 pages)

[Dehumidifier Whirlpool WHAD703AW Use And Care Manual](#)

(40 pages)

[Dehumidifier Whirlpool DE20W5252 Instructions For Use Manual](#)

(23 pages)

[Dehumidifier Whirlpool WDH70EAPW Use & Care Manual](#)

(15 pages)

[Dehumidifier Whirlpool DS201NB Operating Instructions Manual](#)

Household (54 pages)

[Dehumidifier Whirlpool AD50GUSB Use & Care Manual](#)

(22 pages)

[Dehumidifier Whirlpool AD70USS Manual](#)

(40 pages)

[Dehumidifier Whirlpool AD35DSS1 Use And Care Manual](#)

Whirlpool dehumidifier use & care guide (20 pages)

[Dehumidifier Whirlpool SS209 Owner's Instructions Manual](#)

(25 pages)

Summary of Contents for Whirlpool 1182182

[Page 1](#) Installing dehumidifier ... Operating dehumidifier ... Removing and emptying water bucket ... Water level float and automatic shutoff ... Caring for your dehumidifier ... If you need assistance or service Narranty ..6-7 .IO-11 Back Cover Part No. 1182182 Rev. A...

[Page 2: Safety Instructions](#)

Your safety and the safety of others is very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to hazards that can kill or hurt you and others.

[Page 3](#) Electrical Shock Hazard Plug into a grounded 3 prong outlet. Do not remove ground

prong. Do not use an adapter. Do not use an extension cord. Failure to follow these instructions can result in death, fire, or electrical shock. 4 115-volt (103.5 min., 126.5 max.), 60-Hz, AC-only, 15- or 20-ampere fused end properly...

[Page 4](#) Good air circulation is needed for best performance-allow at least 12-18 inches (30.5 - 45.7 cm) of air space on all sides of the dehumidifier. Install dehumidifier on a level floor strong enough dehumidifier with a full bucket of water. 65"...

[Page 5: Fan Speed](#)

EMPTY/ADJUST BUCKET light: DRYNESS If this light is on, the dehumidifier not running. This light indicates that you need to check: If the bucket is full, empty bucket and replace. If the bucket is not in position, remove bucket and replace. Make sure the bucket fits all the way into the dehumidifier and the light is off,...

[Page 6](#) Sickness not drink water collected in water bucket. Doing so can result in sickness. Bucket styles: Bucket method: Pull bucket forward and remove. Go to Step 2. 1. Lift bucket from bottom. Pull bucket forward and remove. Go to Step 2. Hazard 2.

[Page 7](#) Drain hose connection method: (to drain water from bucket continuously) 1. If your dehumidifier does not have a drain hose connector cover, go Step 2. If your dehumidifier has a drain hose connector cover, use a flat-blade screwdriver to remove cover from drain connector. Turn cover counterclockwise.

[Page 8](#) 411 dehumidifiers have automatic shutoff and a water level float. Some dehumidifiers feature an adjustable water level float. The bucket must be properly aligned for the Water Level Float to work. For models with non-adjustable Water level float: The Water Level Float will shut off the dehumidifier automatically.

[Page 9: Maintenance](#)

General cleaning and maintenance 1. Dust the front grille and side panels with a soft brush or the dusting attachment of your vacuum. 2. If cabinet paint chips, you can touch up the paint with a good grade enamel paint to prevent rust.

[Page 10](#) Unit will put out heat. Do not operate below 65°F (18.3°C). 2. If you need assistance in the U.S.A., call your local dealer or the Whirlpool Consumer Assistance Center toll-free at 1-800-253-1301. When requesting assistance, please provide...

[Page 11](#) 3. If you need assistance or service in Canada... Contact the dealer from whom you purchased your appliance, or call the Consumer Assistance Centre toll free, a.m. - 6:00 p.m. (EST), 8-30 at 1-800-461-5681. Contact your nearest direct service branch or authorized servicing outlet...

[Page 12](#) In Canada, travel or transportation reside in remote areas. Service under the full warranties must be provided by an authorized company. WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL Some states or provinces do not allow the exclusion CONSEQUENTIAL DAMAGES. Or limitation...

[Page 13](#) GarantiaContratapa Parte No. 1182182 Rev. A...

[Page 14](#) Su seguridad y la de los demás es muy importante para nosotros. Hemos incluido muchos mensajes importantes manual y en su electrodoméstico. Lea y obedezca siempre todos los mensajes de seguridad. Este es el símbolo de advertencia llámela la atención sobre peligros que le pueden causar lesiones o la muerte a usted y otras personas.

[Page 15](#) Peligro de descarga eléctrica Enciéndalo en un contacto pared de conexión a tierra con tres terminales. No quite la terminal para conexión a tierra. No use adaptador. No use cable alargador. No seguir estas instrucciones puede ocasionar la muerte, un incendio o descarga eléctrica.

[Page 16](#) Para mejor rendimiento, necesita una buena circulación de aire-deje lo menos 12-18 pulgadas (30.5-45.7 cm) de espacio para el aire alrededor deshumidificador. Instale el deshumidificador en un piso a nivel lo suficientemente para soportar el deshumidificador con el

balde de agua lleno. Instale el deshumidificador en un area donde la temperatura...

[Page 17: Velocidad Del Ventilador](#)

la luz del BALDE: CONTROL UACHUUSTE Si esta luz esta encendida, significa que no estti el deshumidificador funcionando. Esta 11.12 indica que usted debe revisar: Si el balde esth lleno debe vaciarlo y volverlo a colocar. Si el balde no estti bien colocado, saquelo y vuelva a colocarlo.

[Page 18](#) Peligro para la salud No beba el agua acumulada en el balde de agua. No seguir esta instruccih puede perjudicar Ktodo para sacar y volver a vaciar el balde: Paso 2. 1. Levante el balde sujet6ndolo por la base.Tire del balde hacia usted, para sacarlo.Vaya al Paso 2.

[Page 19](#) H Ctodo de conexih de la nanguera de desagiie: del balde cotinualmente.) (para sacar agua tapa del conector todos 10s modelos) I. Si su deshumidificador no tiene una tapa del conector de la manguera de desagiie, vaya al Paso 2. Si su deshumidificador tiene una tapa del conector de la manguera...

[Page 20](#) rodos 10s deshumidificadores tienen necanismo de desconexion automatica agua. I flotador de nivel del Algunos leshumidificadores tienen un Flotador le Nivel del Agua ajustable. El balde ,iene que estar debidamente alineado lara que funcione el Flotador de Nivel lel Agua. Para modelos con Flotador de i Hive1 del Agua no ajustable: ! ! Flotador de Nivel del Agua apagara...

[Page 21: Limpieza Y Mantenimiento](#)

Limpieza y mantenimiento generales Limpie la rejilla delantera y 10s paneles laterales con un cepillo suave 0 con la boquilla para quitar el polvo de su aspiradora. 2. Si la pintura del gabinete se estd picando, puede retocar la pintura con pintura esmaltada de buena calidad para evitar que se oxide.

[Page 22](#) Llame al distribuidor de su localidad o llame gratis al Centro de Ayuda al Consumidor de Whirlpool al 1-800-253- 1301. Cuando llame para pedir ayuda, tenga listos el numero del modelo, el numero de serie, la fecha de compra y...

[Page 23](#) 3. Si necesita ayuda o servicio thnico en Canadai.. . Contacte al distribuidor que le vendio su aparato, o llame gratis al Centro de Ayuda al Consumidor, de 8:30 a.m. a 6:00 p.m. (EST), al 1-800-461-5681. Contacte a la sucursal de servicio direct0 o al centro de servicio autorizado m6s cercano para reparar...

[Page 24](#) 10s Estados Unidos. Para servicio Canada, vea "Si necesita ayuda o servicio jucursal de servicio en su area. 'arte No. 1182182 Rev. A B1998 Whirlpool Corporation PAGAREMOS Piezas de reemplazo mano de obra de reparaciones para corregir defectos en materiales o mano de obra.