



Whirlpool REFRIGERATOR W10326802B Use And Care Manual

Whirlpool refrigerator user manual

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24

--	--

•

-


Troubleshooting

•

Bookmarks

--


Available languages

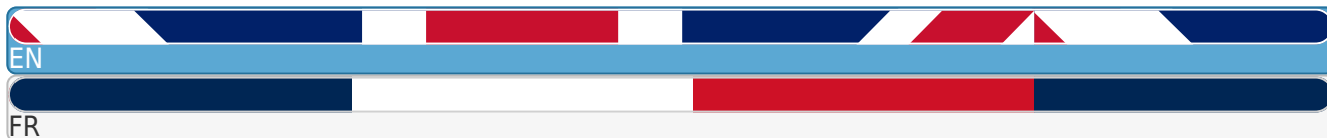

Quick Links

- [1 Unpacking Your Refrigerator](#)
- [2 Using the Control](#)
- [3 Troubleshooting](#)

[Download this manual](#)

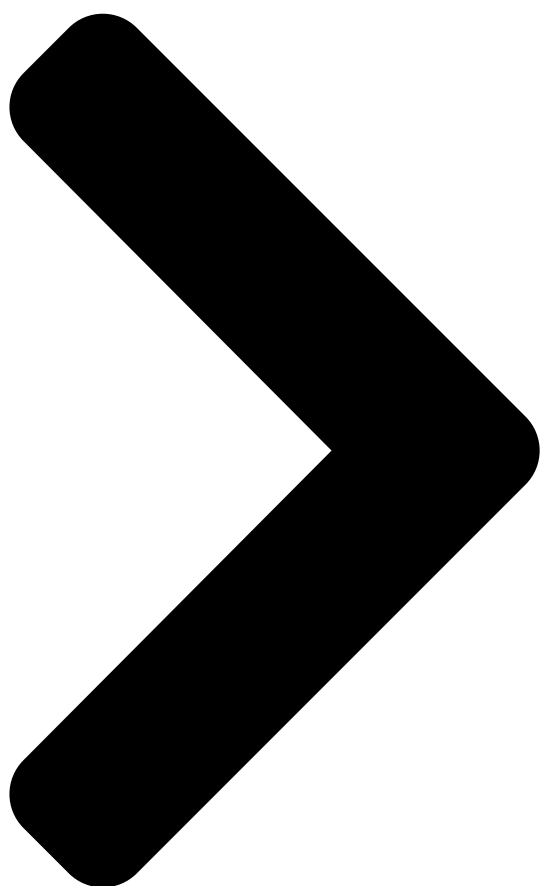

REFRIGERATOR RÉFRIGÉRATEUR

Use & Care Guide

Guide d'utilisation et d'entretien

For questions about features, operation/performance
Au Canada, pour assistance, composez le
parts, accessories or service, call: 1-800-253-1301.

1-800-807-6777

In Canada, for assistance, installation or service call:
ou visitez notre site web à

1-800-807-6777

www.whirlpool.ca

or visit our website at...



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool REFRIGERATOR W10326802B

[Refrigerator Whirlpool EL88TRRWS Refrigerator Use & Care Manual](#)

Whirlpool el87trrr: user guide (28 pages)

[Refrigerator Whirlpool EL88TRRWQ Installation Instructions Manual](#)

Trim kit (20 pages)

[Freezer Whirlpool EL88TRRWQ Energy Manual](#)

Energy guide (2 pages)

[Refrigerator Whirlpool EL88TRRW Product Dimensions](#)

Whirlpool all refrigerator product dimensions (1 page)

[Refrigerator Whirlpool SideKicks EL88TRRWQ Dimension Manual](#)

Whirlpool sidekicks specification sheet (1 page)

[Whirlpool EL88TRRWS - 18 cu. ft. Sidekicks All-Refrigerator with Adjustable Door Bins Manual](#)

(article)

[Refrigerator Whirlpool W10312242A User Manual](#)

Whirlpool refrigerator user manual (40 pages)

[Refrigerator Whirlpool W10321466A User Instructions](#)

Whirlpool refrigerator user manual (36 pages)

[Refrigerator Whirlpool W10321469A User Instructions](#)

Whirlpool refrigerator user manual (54 pages)

[Refrigerator Whirlpool W10321467A User Instructions](#)

Whirlpool refrigerator user manual (52 pages)

[Refrigerator Whirlpool W10329360A User Instructions](#)

Whirlpool refrigerator user manual (40 pages)

[Refrigerator Whirlpool W10366205A User Manual](#)

Whirlpool refrigerator user manual (60 pages)

[Refrigerator Whirlpool REFRIGERATOR W10316634A User Instructions](#)

Whirlpool refrigerator user manual (36 pages)

[Refrigerator Whirlpool GI6SDRXXQ Use And Care Manual](#)

User instructions (40 pages)

[Refrigerator Whirlpool WRT771REYM00 User Instructions](#)

(45 pages)

[Refrigerator Whirlpool W10305235A Use & Care Manual](#)

(64 pages)

Summary of Contents for Whirlpool REFRIGERATOR W10326802B

[Page 1](#) For questions about features, operation/performance Au Canada, pour assistance, composez le parts, accessories or service, call: 1-800-253-1301. 1-800-807-6777 In Canada, for assistance, installation or service call: ou visitez notre site web à 1-800-807-6777 www.whirlpool.ca or visit our website at... www.whirlpool.com or www.whirlpool.ca W10326802B...

[Page 2: Table Of Contents](#)

REFRIGERATOR SAFETY... 3 Proper Disposal of Your Old Refrigerator... 3 INSTALLATION INSTRUCTIONS ... 4 Unpacking Your Refrigerator ... 4 Location Requirements... 4 Electrical Requirements ... 5 Refrigerator Door ... 5 Adjust the Door ... 7 Normal Sounds ... 7 REFRIGERATOR USE ... 7 Ensuring Proper Air Circulation ...

[Page 3: Refrigerator Safety](#)

Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER"...

[Page 4: Installation Instructions](#)

INSTALLATION INSTRUCTIONS Unpacking Your Refrigerator WARNING Excessive Weight Hazard Use two or more people to move and install refrigerator. Failure to do so can result in back or other injury. Removing packaging materials Remove tape and glue residue from surfaces before turning on the refrigerator.

[Page 5: Electrical Requirements](#)

Electrical Requirements WARNING Electrical Shock Hazard Plug into a grounded 3 prong outlet. Do not remove ground prong. Do not use an adapter. Do not use an extension cord. Failure to follow these instructions can result in death, fire, or electrical shock. Before you move your refrigerator into its final location, it is important to make sure you have the proper electrical connection.

[Page 6: Door Removal And Replacement](#)

Replace Door and Hinges 1. Replace the parts for the bottom hinge as shown and tighten screws. See Bottom Hinge graphic. Replace the refrigerator door. NOTE: Provide additional support for the door while the hinges are being moved. Do not depend on the door magnets to hold the door in place while you are working.

[Page 7: Adjust The Door](#)

Adjust the Door Your refrigerator has two front adjustable legs, one on each side. The back of the refrigerator rests on two fixed supports. 1. Adjust the front legs enough to lift the cabinet up off of the floor. NOTE: If your model is equipped with rollers, the front legs should be lowered enough to lift the rollers off the floor so the refrigerator does not roll forward when the door is opened.

[Page 8: Refrigerator Features](#)

Adjusting the Control Give the refrigerator time to cool down completely before adding food. It is best to wait 24 hours before putting food into the refrigerator. The control is set correctly when milk or juice is as cold as you like. Move the dial one setting at a time and wait 24 hours between adjustments.

[Page 9: Door Bin](#)

Door Bin To remove and replace the bin: 1. Remove the bin by tipping the front of the bin forward and sliding out. 2. Replace the bin by sliding it in above the desired support tilting it back into place. REFRIGERATOR CARE Cleaning WARNING...

[Page 10: Vacation And Moving Care](#)

Vacations If you choose to leave the refrigerator on while you're away, use up any perishables and freeze other items. If you choose to turn the refrigerator off before you leave, follow these steps. 1. Remove all food from the refrigerator. 2.

[Page 11](#) The motor seems to run too much Is the room temperature hotter than normal? Expect the motor to run longer under warm conditions. At normal room temperatures, expect your motor to run about 40% to 80% of the time. Under warmer conditions, expect it to run even more of the time.

[Page 12: Assistance Or Service](#)

To locate the Whirlpool designated service company in your area, you can also look in your telephone directory Yellow Pages. For Further Assistance If you need further assistance, you can write to Whirlpool with any questions or concerns at: Whirlpool Brand Home Appliances Customer eXperience Center...

[Page 13: Warranty](#)

5. Cosmetic damage, including scratches, dents, chips or other damage to the finish of your major appliance, unless such damage results from defects in materials or workmanship and is reported to Whirlpool within 30 days from the date of purchase.

[Page 14: Sécurité Du Réfrigérateur](#)

SÉCURITÉ DU RÉFRIGÉRATEUR Votre sécurité et celle des autres est très importante. Nous donnons de nombreux messages de sécurité importants dans ce manuel et sur votre appareil ménager. Assurez-vous de toujours lire tous les messages de sécurité et de vous y conformer. Voici le symbole d'alerte de sécurité.

[Page 15: Instructions D'installation](#)

INSTRUCTIONS D'INSTALLATION Déballage AVERTISSEMENT Risque du poids excessif Utiliser deux ou plus de personnes pour déplacer et installer le réfrigérateur. Le non-respect de cette instruction peut causer une blessure au dos ou d'autre blessure. Enlèvement des matériaux d'emballage Enlever le ruban adhésif et la colle des surfaces du réfrigérateur avant de le brancher.

[Page 16: Spécifications Électriques](#)

Spécifications électriques AVERTISSEMENT Risque de choc électrique Brancher sur une prise à 3 alvéoles reliée à la terre. Ne pas enlever la broche de liaison à la terre. Ne pas utiliser un adaptateur. Ne pas utiliser un câble de rallonge. Le non-respect de ces instructions peut causer un décès, un incendie ou un choc électrique.

[Page 17](#) Réinstallation - Porte et charnières 1. Replacer les pièces de la charnière inférieure tel qu'illustré et serrer les vis. Voir l'illustration de la charnière inférieure. Réinstaller la porte du réfrigérateur. REMARQUE : Prévoir un support additionnel de la porte pendant la réinstallation des charnières. La force d'attraction des aimants de la porte ne suffit pas à...

[Page 18: Ajustement De Porte](#)

Ajustement de porte Le réfrigérateur est équipé de deux pieds de nivellement avant, un de chaque côté. L'arrière du réfrigérateur repose sur deux appuis fixes. 1. Ajuster les pieds avant juste assez pour soulever la caisse au-dessus du sol. REMARQUE : Si votre modèle est équipé de roulettes, les pieds avant doivent être suffisamment abaissés pour mettre les roulettes hors service et s'assurer que le réfrigérateur ne roule pas vers l'avant lorsqu'on ouvre la porte.

[Page 19: Caractéristiques Du Réfrigérateur](#)

Ajustement de la commande Donner au réfrigérateur le temps de se refroidir complètement avant d'y ajouter des aliments. Il vaut mieux attendre 24 heures avant de placer des aliments dans le réfrigérateur. Le réglage est fait correctement lorsque le lait ou le jus est aussi froid que vous l'aimez.

[Page 20: Réglage De L'humidité Dans Le Bac À Légumes](#)

Guide d'entreposage des viandes La plupart des viandes peuvent être conservées dans leur emballage original tant que cet emballage est hermétique et à l'épreuve de l'humidité. Emballer de nouveau si nécessaire. Voir le tableau suivant pour les durées de conservation. Si la viande doit être conservée pour une période plus longue que la durée donnée, faire congeler la viande.

[Page 21: Remplacement De L'ampoule D'éclairage](#)

IMPORTANT : Ce nettoyant doit être utilisé sur les pièces en acier inoxydable uniquement! Veiller à ce que le nettoyant et poli pour acier inoxydable n'entre pas en contact avec les pièces de plastique telles que garnitures, couvercles de distributeurs ou joints de porte. En cas de contact non intentionnel, nettoyer la pièce de plastique avec une éponge et un détergent doux et de l'eau tiède.

[Page 22: Dépannage](#)

Essayer les solutions suggérées ici en premier afin d'éviter les coûts d'une visite de service inutile. Le réfrigérateur ne fonctionne pas **AVERTISSEMENT** Risque de choc électrique Brancher sur une prise à 3 alvéoles reliée à la terre. Ne pas enlever la broche de liaison à la terre. Ne pas utiliser un adaptateur.

[Page 23: Assistance Ou Service](#)

Pour plus d'assistance Si vous avez besoin de plus d'assistance, vous pouvez écrire à ® Whirlpool en soumettant toute question ou tout problème à : Whirlpool Brand Home Appliances Centre pour l'eXpérience de la clientèle 200 – 6750 Century Ave.

[Page 24: Garantie](#)

5. Les défauts d'apparence, notamment les éraflures, traces de choc, fissures ou tout autre dommage subi par le fini du gros appareil ménager, à moins que ces dommages ne résultent de vices de matériaux ou de fabrication et ne soient signalés à Whirlpool dans les 30 jours suivant la date d'achat.

This manual is also suitable for:

[E188trrwq el88trrwsE188trrw - 4-2010](#)