



Whirlpool & WED9050XW Use & Care Manual

Electronic dryer

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19

20

• PAGE

1

OF 20 GO

•

[Table of Contents](#)


-

Troubleshooting

•

Bookmarks

Available languages

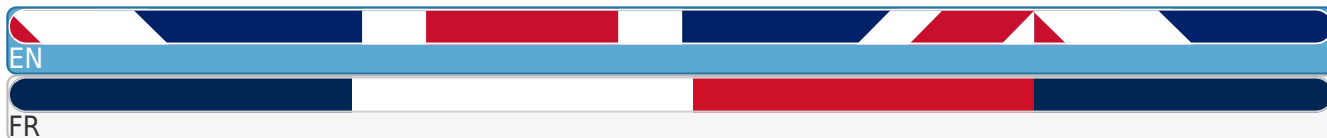

Quick Links

[1 Quick Start Guide /Dryer Use](#)

[2 Cycles](#)


[3 Changing Cycles and Settings](#)

[4 Dryer Care](#)

[5 Troubleshooting](#)

[Download this manual](#)

See also: [Instruction Manual](#) , [Instruction and Installation Manual](#)

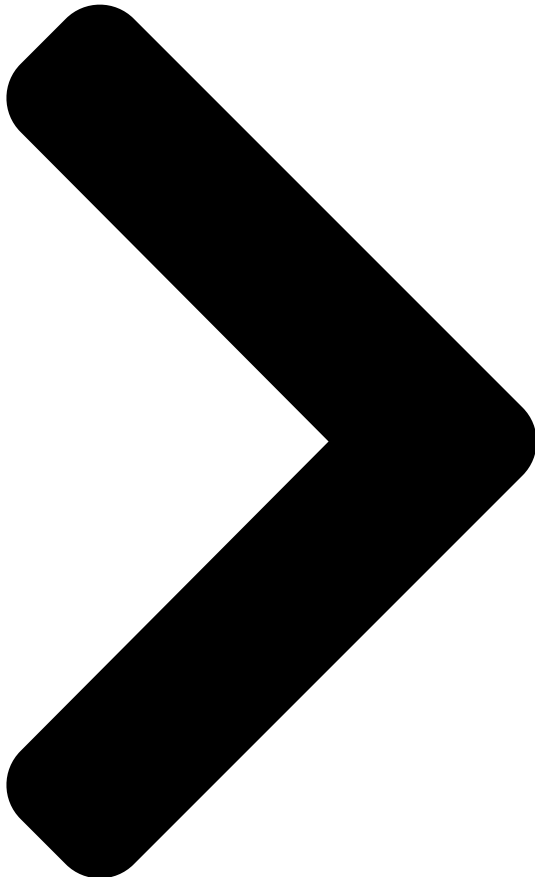

[Enlarged version](#)

TABLE OF CONTENTS

DRYER SAFETY	2
QUICK START GUIDE / DRYER USE	4
Cycles	5
Additional Features	5
Changing Cycles and Settings	5
DRYER CARE	6
TROUBLESHOOTING	7
WARRANTY	9
ASSISTANCE OR SERVICE	BACK COVER

W10296184B

W10296186B - SP

ELECTRONIC DRYER

[®]
For questions about features, operation/performance, parts,



Pour assistance, installation, ou service, composez le : 1-800-807-6777

G

UIDE DE DÉMARRAGE RAPIDE

Page

SÉCURITÉ DE LA SÉCHEUSE	10
GUIDE DE DÉMARRAGE RAPIDE	11
UTILISATION DE LA SÉCHEUSE	12
Programmes	14
Caractéristiques supplémentaires	14
Modification des programmes et réglages	14
ENTRETIEN DE LA SÉCHEUSE	15
DÉPANNAGE	17
GARANTIE	19
ASSISTANCE OU SERVICE	COUVERTURE ARRIÈRE

Use & Care Guide

accessories, or service, call: 1-800-253-1301

or visit our website at...

www.whirlpool.com

In Canada, call: 1-800-807-6777

or visit our website at...

www.whirlpool.ca

[Q](#)

[S](#)

[G](#)

[UICK](#)

[TART](#)

[D](#)

[U](#)

.....

[RYER](#)

[SE](#)

Para una versión en español, visite:

www.whirlpool.com

Número de pieza W102996186A

SÉCHEUSE

ÉLECTRONIQUE

Guide d'utilisation et d'entretien

ou visitez notre site Internet à...

www.whirlpool.ca

....

DE LA SÉCHEUSE

TABLE DES MATIÈRES

/

[UIDE](#)

. 4

ManualsLib.com

[PG](#)

/U

TILISATION

. 12

PG

Page



[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool WED9050XW

[Dryer Whirlpool W10240579C Installation Instructions Manual](#)

Whirlpool clothes dryer user manual (20 pages)

[Dryer Whirlpool WED5500XW Instruction Manual](#)

Cabrio® high efficiency electric dryer with accudry®, drying system ventilation specification (8 pages)

[Dryer Whirlpool W10240584C User Manual](#)

Whirlpool clothes dryer user manual (32 pages)

[Dryer Whirlpool WED9051YW Installation Instructions Manual](#)

Installation guide (20 pages)

[Dryer Whirlpool WED9050X Dimensions And Installation](#)

Whirlpool electric dryer dimensions and installation (2 pages)

[Dryer Whirlpool WGD9050X Dimensions And Installation](#)

Whirlpool gas dryer dimensions and installation (2 pages)

[Dryer Whirlpool WED9150W Product Dimensions](#)

Whirlpool electric dryer dimensions (1 page)

[Dryer Whirlpool WGD9050X Product Dimensions](#)

Whirlpool gas dryer dimensions (1 page)

[Dryer WHIRLPOOL WED9050XW0 Use & Care Manual](#)

Electronic dryer (21 pages)

[Dryer Whirlpool WED9620HW Installation Instructions Manual](#)

(28 pages)

[Dryer Whirlpool W10255468C Installation Instructions Manual](#)

Whirlpool electric dryer installation instructions (16 pages)

[Dryer Whirlpool WED9250 Use And Care Manual](#)

Electronic dryer (24 pages)

[Dryer Whirlpool Duet WED9200S Use & Care Manual](#)

Electronic electric dryer (28 pages)

[Dryer Whirlpool Duet W10110850A Use And Care Manual](#)

Duet electronic electric dryer (28 pages)

[Dryer Whirlpool WED94HEXW1 Technical Sheet](#)

(56 pages)

[Dryer Whirlpool WED9150WW0 Installation Instructions Manual](#)

27" electric dryer (16 pages)

Summary of Contents for Whirlpool WED9050XW

[Page 1: Table Of Contents](#)

W10296184B W10296186B - SP ELECTRONIC DRYER Use & Care Guide ® For questions about features, operation/performance, parts, accessories, or service, call: 1-800-253-1301
www.whirlpool.com In Canada, call: 1-800-807-6777 RYER Para una versión en español, visite:
Número de pieza W102996186A SÉCHEUSE ÉLECTRONIQUE...

[Page 2: Dryer Safety](#)

Your safety and the safety of others are very important. We have provided many important

safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER"...

[Page 3](#) **IMPORTANT:** The gas installation must conform with local codes, or in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54. The dryer must be electrically grounded in accordance with local codes, or in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70.

[Page 4: Quick Start Guide /Dryer Use](#)

QUICK START GUIDE /DRYER USE WARNING Explosion Hazard Keep flammable materials and vapors, such as gasoline, away from dryer. Do not dry anything that has ever had anything flammable on it (even after washing). Failure to follow these instructions can result in death, explosion, or fire.

[Page 5: Cycles](#)

Cycles NOTE: Not all cycles are available on all models. Press the cycle selector button to select the drying cycle that matches the type of load you are drying. See AUTOMATIC or TIMED Cycle Settings chart. Push to Select Cycle selection button Automatic Cycles AUTOMATIC Cycles allow you to match the cycle to the load you are drying.

[Page 6: Dryer Care](#)

Cleaning the Dryer Location Keep dryer area clear and free from items that would obstruct the flow of combustion and ventilation air. **Cleaning the Lint Screen** Every load cleaning The lint screen is located in the door opening of the dryer. A screen blocked by lint can increase drying time.

[Page 7: Troubleshooting](#)

For direct-wired dryers: **WARNING** Electrical Shock Hazard Disconnect power before servicing. Replace all parts and panels before operating. Failure to do so can result in death or electrical shock. 1. Disconnect power. 2. Disconnect wiring. 3. Make sure leveling legs are secure in dryer base. 4.

[Page 8](#) ■ Is the exhaust vent or outside exhaust hood clogged with lint, restricting air movement? Run the dryer for 5-10 minutes. Hold your hand under the outside exhaust hood to check air movement. If you do not feel air movement, clean exhaust system of lint or replace exhaust vent with heavy metal or flexible metal vent.

[Page 9: Warranty](#)

5. Cosmetic damage, including scratches, dents, chips or other damage to the finish of your major appliance, unless such damage results from defects in materials or workmanship and is reported to Whirlpool within 30 days from the date of purchase.

[Page 10: Sécurité De La Sécheuse](#)

Votre sécurité et celle des autres est très importante. Nous donnons de nombreux messages de sécurité importants dans ce manuel et sur votre appareil ménager. Assurez-vous de toujours lire tous les messages de sécurité et de vous y conformer. Voici le symbole d'alerte de sécurité. Ce symbole d'alerte de sécurité...

[Page 11](#) **IMPORTANTES INSTRUCTIONS DE SÉCURITÉ AVERTISSEMENT :** Pour réduire le risque d'incendie, de choc électrique ou de blessure lors de l'utilisation de la sécheuse, il convient d'observer certaines précautions élémentaires dont les suivantes : ■ Lire toutes les instructions avant d'utiliser la sécheuse. ■...

[Page 12: Guide De Démarrage Rapide/ Utilisation De La Sécheuse](#)

AVERTISSEMENT : L'odorat ne permet pas toujours la détection d'une fuite de gaz. Les distributeurs de gaz recommandent l'emploi d'un détecteur de gaz (homologation UL ou CSA). Pour d'autre information, contacter le fournisseur de gaz local. En cas de détection d'une fuite de gaz, exécuter les instructions "Que faire dans le cas d'une odeur de gaz". **GUIDE DE DÉMARRAGE RAPIDE/ UTILISATION DE LA SÉCHEUSE AVERTISSEMENT...**

[Page 13](#) GUIDE DE DÉMARRAGE RAPIDE AVERTISSEMENT : Pour réduire le risque d'incendie, de choc électrique ou de blessures à autrui, lire les IMPORTANTES INSTRUCTIONS DE SÉCURITÉ avant de faire fonctionner cet appareil. Ce Guide d'utilisation et d'entretien couvre plusieurs modèles. Votre sècheuse peut ne pas comporter l'ensemble des programmes et caractéristiques décrits.

[Page 14: Programmes](#)

Programmes REMARQUE : Certains programmes ne sont pas disponibles sur certains modèles. Appuyer sur le bouton de sélection de programme pour sélectionner le programme de séchage qui correspond au type de charge à sécher. Voir le tableau Réglages de programmes automatiques ou Réglages de programmes minutés.

[Page 15: Entretien De La Sècheuse](#)

4. Appuyer sans relâcher sur START/PAUSE (mise en marche/ pause). La sècheuse recommence au début du nouveau programme. ENTRETIEN DE LA SÈCHEUSE Nettoyage de l'emplacement de la sècheuse Éviter de laisser des éléments qui pourraient obstruer le débit de combustion et empêcher une bonne ventilation autour de la sècheuse.

[Page 16](#) Retrait de la charpie accumulée Dans la caisse de la sècheuse : Il faut retirer la charpie accumulée dans la caisse de la sècheuse tous les 2 ans ou plus souvent, selon l'utilisation de la sècheuse. Le nettoyage devrait être fait par une personne qualifiée. Dans le conduit d'évacuation : La charpie devrait être enlevée tous les 2 ans ou plus souvent, selon l'utilisation de la sècheuse.

[Page 17: Dépannage](#)

Essayer d'abord les solutions suggérées ici ce qui vous évitera peut-être le coût d'une visite de service... Pour plus de recommandations, consulter les Instructions d'installation. Fonctionnement de la sècheuse La sècheuse ne fonctionne pas ■ La porte de la sècheuse est-elle bien fermée? ■...

[Page 18: Programmes Automatiques](#)

■ La sècheuse se trouve-t-elle dans une pièce où la température ambiante est inférieure à 45°F (7°C)? Le bon fonctionnement des programmes de la sècheuse nécessite une température ambiante supérieure à 45°F (7°C). ■ La sècheuse est-elle installée dans un placard? Les portes du placard doivent comporter des ouvertures d'aération au sommet et en bas de la porte.

[Page 19: Garantie](#)

5. Les défauts apparents, notamment les éraflures, les bosses, fissures ou tout autre dommage au fini du gros appareil ménager, à moins que ces dommages soient dus à des vices de matériaux ou de fabrication et soient signalés à Whirlpool dans les 30 jours suivant la date d'achat.

[Page 20: Assistance Or Service](#)

Please include a daytime phone number in your correspondence. Avant de faire un appel pour assistance ou service, veuillez vérifier la section "Dépannage" ou consulter www.whirlpool.com/help. Cette vérification peut vous faire économiser le coût d'une visite de réparation. Si vous avez encore besoin d'aide, suivre les instructions ci-dessous.

This manual is also suitable for:

wed9051ywWgd9050xwWgd9051ywWed9050xWgd9050x