



Whirlpool & WED97HEXL Use And Care Manual

Electronic dryer

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36

--

-

[Table of Contents](#)

-


Troubleshooting

•

Bookmarks

--

Available languages

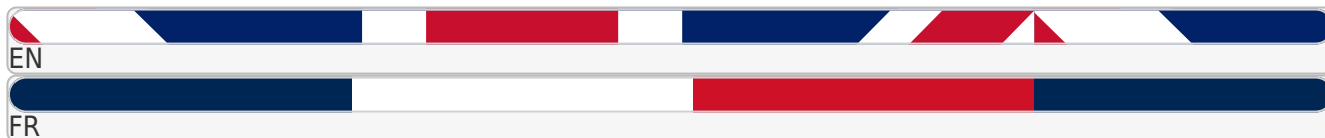

Quick Links

[1 Table of Contents](#)

[2 Accessories](#)

[3 Control Panel and Features](#)

[4 Cycle Guide](#)


[5 Using Your Dryer](#)

[6 Using the Built-In Troubleshooting Feature](#)

[7 Troubleshooting](#)

[Download this manual](#)

See also: [Instruction Manual](#) , [User Manual](#)

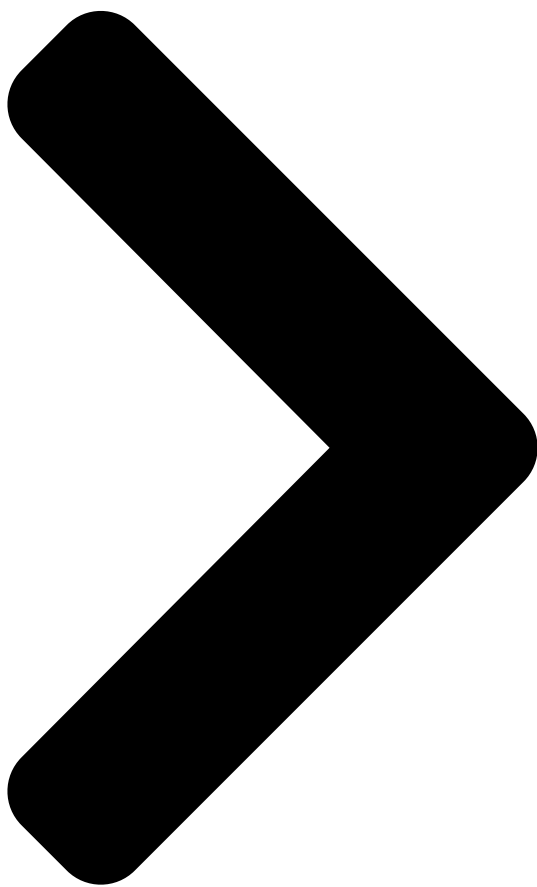

Use & Care Guide

Guide d'utilisation et d'entretien

ELECTRONIC DRYER

SÉCHEUSE ÉLECTRONIQUE

W10434873A

W10434874A - SP

If you have any problems or questions, visit us at www.whirlpool.com

Pour tout problème ou question, consulter www.whirlpoolappliances.ca

Para obtener acceso

al Manual de uso y

cuidado en español, o para

obtener información adicional



acerca de su producto, visite:
www.whirlpool.com.

[Table of Contents](#)

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

Troubleshooting

USING THE BUILT-IN TROUBLESHOOTING FEATURE 14

TROUBLESHOOTING 15

Related Manuals for Whirlpool WED97HEXL

[Dryer Whirlpool W10057363B User Manual](#)

Whirlpool clothes dryer user manual (24 pages)

[Dryer Whirlpool WED5500XW Instruction Manual](#)

Cabrio® high efficiency electric dryer with accudryâ„¢ drying system ventilation specification (8 pages)

[Dryer Whirlpool W10255468C Installation Instructions Manual](#)

Whirlpool electric dryer installation instructions (16 pages)

[Dryer Whirlpool WGD9750WW Use & Care Manual](#)

Whirlpool electronic dryer use and care guide (28 pages)

[Dryer Whirlpool Duet WED9450W Dimensions And Installation Information](#)

Steam and non-steam electronic electric dryer (1 page)

[Dryer Whirlpool WED9600T Product Dimensions](#)

Duet steam and non-steam electronic electric dryer (1 page)

[Dryer Whirlpool WED5500X Dimension Manual](#)

Whirlpool clothes dryer user manual (2 pages)

[Dryer Whirlpool Duet Steam WED94HEX Specifications](#)

Electric dryer (1 page)

[Dryer WHIRLPOOL WED97HEXW2 Use & Care Manual](#)

Electronic dryer (36 pages)

[Dryer Whirlpool WGD9750WW1 Use & Care Manual](#)

Electronic dryer (29 pages)

[Dryer Whirlpool WED97HEXW1 Use & Care Manual](#)

Electronic dryer (36 pages)

[Dryer Whirlpool WED97HEXL0 Installation Instructions Manual](#)

Electric dryer (24 pages)

[Dryer Whirlpool WED97HEDW Use & Care Manual](#)

Electronic dryer (40 pages)

[Dryer Whirlpool Duet Steam WED97HEDW Quick Start Manual](#)

(2 pages)

[Dryer Whirlpool Duet Steam WED 9750W 0 Series Use & Care Manual](#)

Electronic dryer (14 pages)

[Dryer Whirlpool WGD97HEDC0 Use & Care Manual](#)

Electronic dryer (40 pages)

Summary of Contents for Whirlpool WED97HEXL

Para obtener acceso al Manual de uso y cuidado en español, o para...

[Page 2: Table Of Contents](#)

ELECTRONIC DRYER TABLE OF CONTENTS DRYER SAFETY ... 2 ACCESSORIES ... 4 CHECK YOUR VENT SYSTEM FOR GOOD AIR FLOW ... 5 CONTROL PANEL AND FEATURES ... 6 CYCLE GUIDE ... 7 USING YOUR DRYER ... 9 MY CYCLE AND SPECIALTY CYCLES ... 11 ADDITIONAL FEATURES ...

[Page 4: Accessories](#)

ACCESSORIES Customize your new washer and dryer with the following genuine Whirlpool accessories. For more information on options and ordering, contact your dealer, or visit: www.whirlpool.com. 15" Pedestal Color matched pedestals raise the washer and dryer to a more comfortable working height.

[Page 5: Check Your Vent System For Good Air Flow](#)

CHECK YOUR VENT SYSTEM FOR GOOD AIR FLOW Good air flow Along with heat, dryers require good air flow to efficiently dry laundry. Proper venting will reduce your drying times and improve your energy savings. See "Installation Instructions". The venting system attached to the dryer plays a big role in good air flow.

[Page 6: Control Panel And Features](#)

CONTROL PANEL AND FEATURES NORMAL CASUAL DELICATE Eco Auto Cycles TIMED QUICK Manual Cycles SPECIALTY CYCLES MY CYCLE Steam Cycles POWER BUTTON Press to turn the dryer on and off. Press to stop/cancel a cycle at any time. NOTE: When the dryer is turned on for the first time after being plugged in or after a power outage, please allow a minute or so for the dryer display to start up.

[Page 7: Cycle Guide](#)

CYCLE GUIDE — AUTOMATIC CYCLES For additional cycle details and options, refer to the LCD display. Settings and options shown in bold are default settings for that cycle. Not all options and settings are available with each cycle. Use Auto Cycles for better fabric care and energy savings The dryer senses moisture in the load or air temperature and shuts off when the load reaches the selected dryness level.

Page 8 **CYCLE GUIDE — MANUAL CYCLES** Settings and options shown in bold are default settings for that cycle. Not all settings and options are available on each cycle. Adjusting drying time on Manual Cycles When you select a Manual Cycle, the default time appears in the display.

[Page 9: Using Your Dryer](#)

USING YOUR DRYER WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** before operating this appliance. Clean the lint screen Clean the lint screen before each load. Pull the lint screen straight up.

Page 10 Select the desired cycle NORMAL CASUAL BULKY ITEMS DELICATE Eco Auto Cycles TIMED QUICK Manual Cycles SPECIALTY CYCLES MY CYCLE QUICK REFRESH Steam Cycles Select number of Garments Select the desired cycle for your load. See the "Cycle Guide" or the display for more information about each cycle. If selecting Timed Dry, use LCD control buttons to adjust the length of the cycle.

[Page 11: My Cycle And Specialty Cycles](#)

Press and hold **START/PAUSE** to begin cycle Press and hold the **START/PAUSE** button to begin the cycle. Remove garments promptly after cycle is finished Promptly remove garments after cycle has completed to reduce wrinkling. If you will be unable to remove the load promptly, press the **Wrinkle Shield** with **Steam** button and select the desired **Wrinkle Shield** option before pressing **START/PAUSE**.

[Page 12: Additional Features](#)

ADDITIONAL FEATURES USING THE DRYING RACK To obtain a drying rack for your dryer, follow the instructions included in your dryer drum. Remove and discard any packing material before use. Use the Drying Rack for items that you do not want to tumble dry, such as sweaters and tennis shoes.

[Page 13](#) **CLEANING THE LINT SCREEN** Every load cleaning The lint screen is located in the door opening of the dryer. A screen blocked by lint can increase drying time. To clean: 1. Pull the lint screen straight up. Roll lint off the screen with your fingers.

[Page 14: Using The Built-In Troubleshooting Feature](#)

SPECIAL INSTRUCTIONS FOR STEAM MODELS Water Inlet Hose Replace inlet hose and hose screen after 5 years of use to reduce the risk of hose failure. Periodically inspect and replace inlet hose if bulges, kinks, cuts, wear, or leaks are found. When replacing your inlet hose, record the date of replacement.

[Page 15: Troubleshooting](#)

TROUBLESHOOTING First try the solutions suggested here or visit our website at www.whirlpool.com/help If you experience Possible Causes Dryer Operation Dryer will not run Door not closed completely. START/PAUSE button not pressed firmly or held long enough. Household fuse is blown or circuit breaker has tripped.

[Page 16: Warranty](#)

5. Cosmetic damage, including scratches, dents, chips or other damage to the finish of your major appliance, unless such damage results from defects in materials or workmanship and is reported to Whirlpool within 30 days from the date of purchase.

[Page 17: Sécurité De La Sécheuse](#)

SÉCURITÉ DE LA SÉCHEUSE...

[Page 19: Accessoires](#)

ACCESSOIRES Personnalisez votre nouvelle laveuse et sécheuse grâce aux authentiques accessoires Whirlpool suivants. Pour plus d'informations sur les options et sur les possibilités de commande, contactez votre revendeur ou consultez : www.whirlpool.com. Piédestal de 15" Les piédestaux aux coloris assortis surélèvent la laveuse et la sécheuse...

[Page 20: Vérification D'une Circulation D'air Adéquate Pour Le Système D'évacuation](#)

VÉRIFICATION D'UNE CIRCULATION D'AIR ADÉQUATE POUR LE SYSTÈME D'ÉVACUATION Circulation d'air adéquate Une sécheuse a besoin de chaleur et d'une circulation d'air adéquate pour sécher efficacement le linge. Une ventilation adéquate réduit les durées de séchage et accroît les économies d'énergie. Voir les Instructions d'installation. Le système d'évacuation fixé...

[Page 21](#) Utiliser les programmes automatiques pour un meilleur soin du tissu et davantage d'économies d'énergie Utiliser les programmes automatiques pour que la sécheuse permette de réaliser davantage d'économies d'énergie et d'apporter un soin supérieur aux tissus. Durant les programmes automatiques, la température de séchage de l'air et le niveau d'humidité sont détectés dans la charge.

[Page 22: Tableau De Commande Et Caractéristiques](#)

TABEAU DE COMMANDE ET CARACTÉRISTIQUES NORMAL CASUAL DELICATE Eco Auto Cycles TIMED QUICK Manual Cycles SPECIALTY CYCLES MY CYCLE Steam Cycles BOUTON POWER (mise sous tension) Appuyer sur ce bouton pour mettre la sécheuse en marche. Appuyer sur ce bouton pour arrêter/annuler un programme à...

[Page 23: Guide Des Programmes](#)

BOUTON ECOBOOST (Puissance ECO) L'option Ecoboot (puissance éco) améliore les économies d'énergie. On peut remarquer un allongement de la durée du programme quand on sélectionne l'option Ecoboot (puissance éco). Les économies d'énergie générées par des températures légèrement plus basses nécessitent un léger allongement de la durée de séchage pour assurer des résultats de séchage optimaux.

[Page 24](#) **GUIDE DE PROGRAMMES — PROGRAMMES AUTOMATIQUES (suite)** Articles à sécher : Programme : Chemises, chemisiers, Casual tissus à pressage (tout-aller) permanent, articles synthétiques et articles légers Sous-vêtements, Delicate chemisiers, lingerie, (articles) vêtements d'athlétisme délicats) Charges importantes Towels composées de (serviettes)

serviettes en coton, d'articles lourds Vêtements de sport...

Page 25 [GUIDE DE PROGRAMMES — PROGRAMMES MANUELS](#) Les réglages et options indiqués en gras sont les réglages par défaut pour ce programme. Tous les réglages et options ne sont pas disponibles sur tous les programmes. Ajustement de la durée de séchage sur les programmes manuels Lorsqu'on sélectionne un programme manuel, la durée par défaut apparaît sur l'affichage.

[Page 26: Utilisation De La Sécheuse](#)

UTILISATION DE LA SÉCHEUSE AVERTISSEMENT : Pour réduire le risque d'incendie, de choc électrique ou de blessures corporelles, lire les INSTRUCTIONS IMPORTANTES DE SÉCURITÉ avant de faire fonctionner cet appareil. Nettoyer le filtre à charpie Nettoyer le filtre à charpie avant chaque charge. Enlever le filtre à...

Page 27 [Sélectionner les réglages de programme, si désiré](#) L'affichage indique les réglages par défaut correspondant au programme sélectionné. On peut ajuster différents réglages, selon que l'on a sélectionné un programme automatique, manuel ou avec vapeur. Voir le Guide de Programmes pour des informations détaillées.

[Page 28: Mon Programme Et Programmes Spéciaux](#)

Sélectionner les options de programme Pour ajouter des options supplémentaires telles que Static Reduce (réduction de l'électricité statique) et/ou EcoBoost (puissance éco), appuyer sur le bouton correspondant à l'option souhaitée. REMARQUE : Tous les réglages et options ne sont pas disponibles avec tous les programmes.

[Page 29: Caractéristiques Supplémentaires](#)

CARACTÉRISTIQUES SUPPLÉMENTAIRES UTILISATION DE LA GRILLE DE SÉCHAGE Pour obtenir une grille de séchage pour votre sècheuse, suivre les instructions fournies dans le tambour de la sècheuse. Enlever et jeter les matériaux d'emballage avant utilisation. Utiliser la grille de séchage pour les articles que l'on ne souhaite pas faire sécher par culbutage tels que les chandails et les chaussures de tennis.

[Page 30: Entretien De La Sécheuse](#)

ENTRETIEN DE LA SÉCHEUSE Nettoyer l'emplacement de la sècheuse Éviter de laisser autour de la sècheuse des éléments qui pourraient obstruer la circulation de l'air et empêcher le bon fonctionnement de la sècheuse. Ceci implique de dégager également les éventuelles piles de linge placées devant la sècheuse.

Page 31 [Précautions à prendre en cas de non-utilisation, d'entreposage ou de déménagement](#) Installer et remiser la sècheuse à l'abri du gel. Il est possible que de l'eau stagne dans les tuyaux; ceci pourrait endommager la sècheuse en période de gel. Si la sècheuse doit faire l'objet d'un déménagement ou de remisage au cours d'une période de gel, hivériser la sècheuse.

[Page 32: Utilisation De La Caractéristique De Dépannage Intégrée](#)

Alors que la sècheuse est allumée, appuyer sur MORE INFO pour accéder à la caractéristique de DÉPANNAGE intégrée. DÉPANNAGE Essayer d'abord les solutions suggérées ici ou consulter le site Web www.whirlpool.com/help pour obtenir de l'aide et pour éviter une intervention de réparation. Si les phénomènes...

Page 33 [Essayer d'abord les solutions suggérées ici ou consulter le site Web](#) www.whirlpool.com/help pour obtenir de l'aide et pour éviter une intervention de réparation. Si les phénomènes suivants se produisent Causes possibles Résultats de la sècheuse Les vêtements ne Le filtre à charpie est obstrué par sèchent pas de manière...

[Page 34: Garantie](#)

5. Les défauts apparents, notamment les éra ures, les bosses, ssures ou tout autre dommage au ni du gros appareil ménager, à moins que ces dommages soient dus à des vices de matériaux ou de fabrication et soient signalés à Whirlpool dans les 30 jours suivant la date d'achat.

[Page 36: Assistance Ou Service](#)

Please include a daytime phone number in your correspondence. Avant de faire un appel pour assistance ou service, veuillez vérifier la section “Dépannage” ou consulter www.whirlpool.com/help. Cette vérification peut vous faire économiser le coût d’une visite de réparation. Si vous avez encore besoin d’aide, suivre les instructions ci-dessous.

This manual is also suitable for:

wed97hexw wgd97hexw