



# Asus PRIME H610M-D Quick Start Manual



1  
2


--

•

## Bookmarks

[Download this manual](#)

## Quick Links

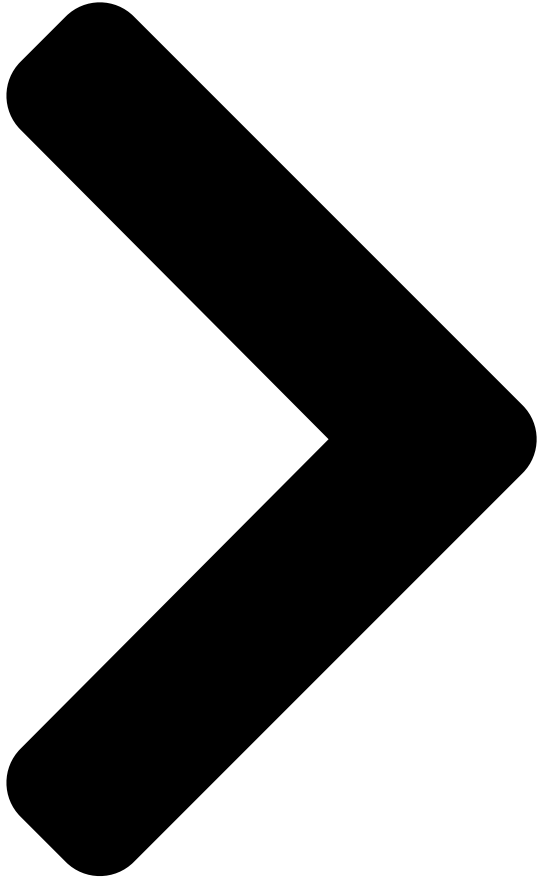

## PRIME H610M-D

Quick start guide  
Hurtigstartvejledning

Кратко упътване за бърз старт

Guia de consulta rápida

Mohtarbutaru

Stručná příručka

Instalációs útmutató

Quick Start Veiledning

Краткое руководство

Snelstartgids

Ghid de pornire rapidă

Lühijuhend

Кратко упътване за бърз старт

Guia de inicio rápida

Stručná příručka

Guide de démarrage rapide

Vodič za brzo korišćenje

Παράγωγος

Stručný návod na spustenie

Schnellstartanleitung

Snabbstartsguide

Občasný návod na spuštění

Beüzemelési útmutató

Hızlı Başlatma Kılavuzu

Guida Rapida

Hướng dẫn khởi động nhanh

Скоростное руководство

**IN SEARCH OF INCREDIBLE**

## PRIME H610M-D

Quick start guide

Кратко упътване за бърз старт

Stručná příručka

Guide de démarrage rapide

Vodič za brzo korišćenje

Παράγωγος

Stručný návod na spustenie

Schnellstartanleitung

Snabbstartsguide

Občasný návod na spuštění

Beüzemelési útmutató

Hızlı Başlatma Kılavuzu

Guida Rapida

Hướng dẫn khởi động nhanh

Скоростное руководство

### Step 1

Install the CPU

Инсталирайте процесора

Instalace procesoru

Installer CPU'en

De CPU installeren

Paigaldage CPU

Installez le processeur

Asenna suoritin

Installieren der CPU

Εγκατάσταση της CPU

Helyezze be a CPU-t

Installare la CPU

Pasang CPU

CPU를取り付け

CPU орнатыңыз

CPU 설치

Sumontuokite centrinį procesorių

Uzstādiet centrālo procesoru

Installez le processeur

Instale a CPU

Instalacja procesora

Установка процессора

Instalați CPU-ul

Instalar la CPU

Instalirajte CPU

Instalácia centrálneho procesora

Installera CPU

ἰνσἰἰἰ CPU

CPU'yu takin

Lăp CPU

Instalacija procesora

Instalovajte procesor

Namestitev CPE-ja

قم بتثبيت وحدة المعالجة المركزية (CPU)

CPU را نصب کنید

B

D

### Step 2



**Motherboard**  
**PRIME H610M-D**

Gratias agimus tibi, ASUS-ya isha pamacıba

**Motherboard Layout**  
**Quick start guide**

Step 1  
Kratko upътване за бърз старт

Stručná příručka

Quick Start-vejledning

Snelstartgids

Lühijuhend

Australia statement notice

From 1 January 2022, certain warranties apply to all ASUS products consistent with the Australian Consumer Law. For the latest product warranty details please visit <https://www.asus.com>. Our goods come with implied and express warranties excluded under the Australian Consumer Law. You are entitled to a replacement or refund, with compensation for any reasonable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to meet acceptable quality and the failure does not amount to a major failure. If you require assistance please call ASUS Customer Service 1300 2787 88 or visit us at <https://www.asus.com/support/>.

India RoHS

This product complies with the "India E-Waste (Management) Rules, 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls (PBBs) and polybrominated diphenyl ethers (PBDEs) in concentrations exceeding 0.1% by weight in homogenous materials and 0.01% by weight in non-homogenous materials for cadmium, except for the exemptions listed in Schedule II of the Rule.

Türkiye RoHS

АЕЕЕ Yönetmeliğine Uygundur

HDMI Trademark Notice

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Q22451

Isa pamacıba

First Edition

August 2023

Copyright © ASUSTeK Computer Inc.

All Rights Reserved

**Step 1**

Install the CPU

Инсталирайте процесора

Instalace procesoru

Installer CPU'en

De CPU installeren

Paigaldage CPU

Installez le processeur

Asenna suoritin

Installieren der CPU

Εγκατάσταση της CPU

Helyezze be a CPU-t

Installare la CPU

Pasang CPU

CPU

CPU желдеткішін орнатыңыз

CPU

Sumontuokite centrinio procesoriaus ventiliatorių

Uzdādiēt centrālā procesora ventilatoru

Installer CPU-viften

Instale a ventoinha de CPU

Instalacja wentylatora procesora

Hurtigstartsveiledning

Guia de consulta rápida

Instrukcja szybkiej instalacji

Краткое руководство

Ghid de pornire rapidă

Guia de inicio rápida

Modulokészítési útmutató

Stručný návod na spustenie

Схема установки

快速启动指南

Hızlı Başlatma Kılavuzu

Новый шаг к быстрому началу

Vodič za brzi početak rada

كورتكى پوسېبىك

Короткий посібник

Водник за hitri začetek

دليل التشغيل السريع

راهنمای شروع سریع

**Step 1**

Install the CPU

Инсталирайте процесора

Instalace procesoru

Installer CPU'en

De CPU installeren

Paigaldage CPU

Installez le processeur

Asenna suoritin

Installieren der CPU

Εγκατάσταση της CPU

Helyezze be a CPU-t

Installare la CPU

Pasang CPU

CPUを取り付ける

CPU орнатыңыз

CPU 설치

Sumontuokite centrinį procesorių

Uzdādiēt centrālo procesoru

Installer CPU-viften

Instale a ventoinha de CPU

Instalacja wentylatora procesora

Установка вентилятора

Instalați ventilatorul CPU-ului

Instalar el ventilador de la CPU

Instalirajte CPU ventilator

Instalácia ventilátora centrálneho procesora

Installer sentralprosessoren (CPU)

Instale a CPU

Instalace procesora

Установка процессора

Instalați CPU-ul

Instalar la CPU

Instalirajte CPU

Instalácia centrálneho procesora

Installera CPU

ติดตั้ง CPU

CPU'yu takin

Lắp CPU

Instalacija procesora

Instalnoyite procesor

Namestitev CPE-ja

قم بتثبيت وحدة المعالجة المركزية (CPU)

را نصب كنيد CPU

**Step 2**

Install the CPU fan

Инсталирайте вентилатора на процесора

Instalace ventilátoru procesoru

Installer CPU-blæseren

De CPU-ventilator installeren

Paigaldage CPU ventilaator

Installez le ventilateur du processeur

Asenna suorittimen tuuletin

Installieren des CPU-Lüfters

Εγκατάσταση του ανεμιστήρα της CPU

Szerelje be a CPU ventilátort

Installare la ventola della CPU

Pasang kipas CPU

CPUクーラーを取り付ける

CPU желдеткішін орнатыңыз

CPU 팬 설치

Sumontuokite centrinio procesoriaus ventiliatorių

Uzdādiēt centrālā procesora ventilatoru

Installer CPU-viften

Instale a ventoinha de CPU

Instalacja wentylatora procesora

Установка вентилятора

Instalați ventilatorul CPU-ului

Instalar el ventilador de la CPU

Instalirajte CPU ventilator

Instalácia ventilátora centrálneho procesora

Installera CPU-fläkten

ติดตั้งพัดลม CPU

CPU fanını takin

Lắp quạt CPU

Instalacija ventilatora procesora

Instalnoyite ventilyator procesora

Namestitev ventilatorja CPE-ja

تثبيت مروحة وحدة المعالجة المركزية

را نصب كنيد CPU

**Step 3**

Install memory modules

Инсталирайте модулите памет

Instalace paměťových modulů

Installer hukommelsesmodulerne

Geheugenmodules installeren

Paigaldage mäluoodulid

Installez les modules de mémoire

Asenna muistimoduulit

Installieren der Speichermodule

Εγκατάσταση των στοιχείων μνήμης

Helyezze be a memória modulokat

Installare i moduli di memoria

Pasang modul memori

メモリーモジュールを取り付ける

Жад модульдерін орнатыңыз

Installer minnemoduler

Instale módulos de memória

Instalacja modułów pamięci

Установка модулей памяти

Instalați modulele de memorie

Instalar los módulos de memoria

Instalirajte module memorije

Instalácia pamäťových modulov

Installera minnesmoduler

ติดตั้งโมดูลหน่วยความจำ

Bellek modüllerini takin

Lắp các thanh nhớ

Instalacja pamięcijskich moduła

Instalnoyite moduli pam'яти

Namestitev pomnilniških modulov

تثبيت وحدات الذاكرة

مادول های حافظه را نصب كنيد

**Step 4**

Install storage devices

Montere lagringsenheter

**Motherboard Layout**





Namestitev pomnilniških modulov  
 Montare iadimoseriester  
 Instalacijske dispozitive na shranjevanje  
 Instalacijske dispozitive na shranjevanje  
 Установителне погонивтели  
 Instalarea dispozitivelor de stocare  
 Instalar dispositivos de  
 almacenamiento  
 Instalirajte uređaje za skladištenje  
 İstaleme cihazları için kurulum  
 Installera lagringsenheter  
 Depolama aygıtlarını takma  
 Lắp đặt các thiết bị lưu trữ  
 Instalirajte uređaje za pohranjivanje  
 Установка устройств для быстрого старта  
 Namestitev naprav za shranjevanje

# ASUS

## IN SEARCH OF INCREDIBLE

### Motherboard

# PRIME H610M-D

Quick start guide  
 Бърз старт

- A Stručná příručka
- C Quick Start-vejledning
- 1 Snelstartgids
- 2 Lühijuhend
- E Guide de démarrage rapide
- 2 Guide de démarrage rapide
- 1 Πικακύντισσος
- B Schnellstartanleitung
- 1 Οδηγός γρήγορης έναρξης
- 2 Beüzemelési útmutató
- 3 Guida Rapida

- Hurtigstartsveiledning
- Guia de consulta rápida
- Instrukcja szybkiej instalacji
- Краткое руководство
- Ghid de pornire rapidă
- Guia de inicio rápida
- Vodič za brzo korišćenje
- Stručný návod na spustenie
- Snabbstartsguide
- คู่มือเริ่มต้นอย่างเร็ว
- Hızlı Başlatma Kılavuzu
- Höðung daðn khöui ñoäng nhanh

### Step 1

- Install the CPU
- Instalace procesora
- Installer CPU'en
- De CPU installeren
- Paigaldage CPU
- Installez le processeur
- Asenna suoritin
- Installieren der CPU
- Εγκατάσταση της CPU
- Helyezze be a CPU-t
- Installare la CPU
- Pasang CPU
- CPUを取り付ける
- CPU орнатыңыз
- CPU 설치
- Sumontuokite centrinį procesorių
- Uzstādiēt centrālo procesoru

- Installer sentralprocessoren (CPU)
- Instale a CPU
- Instalace procesora
- Установка процессора
- Instalati CPU-ul
- Instalar la CPU
- Instalirajte CPU
- Instalácia centrálneho procesora
- Installera CPU
- ติดตั้ง CPU
- CPU'yu takin
- Lắp CPU
- Instalacija procesora
- Instalуйте процесор
- Namestitev CPE-ja
- قم بتثبيت وحدة المعالجة المركزية (CPU) را نصب کنید CPU



### Step 2

- Install the CPU fan
- Instalirajte ventilatora na procesora
- Instalace ventilátoru procesoru
- Installeer CPU-koeler

- Installera CPU-fläkten
- ติดตั้งพัดลม CPU
- CPU fanını takın
- Lắp quạt CPU

[Next Page](#)

1

2

## Related Manuals for Asus PRIME H610M-D

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-D D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-D D4 Quick Start Manual](#)

(2 pages)

[Motherboard Asus PRIME H610M-E D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-K D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-A D4 Manual](#)

(34 pages)

[Motherboard Asus Pro H610M-CT D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-F D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-CS D4 Manual](#)

(30 pages)

[Motherboard Asus Prime H610M-R D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-A WIFI D4 Manual](#)

(36 pages)

[Motherboard Asus H610M-IM-A Manual](#)

Industrial motherboard (53 pages)

[Motherboard Asus PRIME H610M-K ARGB Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-R Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-C/PS D4 Manual](#)

(62 pages)

[Motherboard Asus PRIME H610M-E Manual](#)

(33 pages)

## Summary of Contents for Asus PRIME H610M-D

[Page 1](#) Ištalácia pamäťových zariadení fail to be of acceptable quality and the failure does not amount to a major failure. If you require assistance please call ASUS Customer Service 1300 2787 88 or visit us at Εγκατάσταση συσκευών αποθήκευσης Installera lagringsenheter <https://www.asus.com/support/>.

[Page 2](#) Step 5 Step 6 Step 7 Install expansion card(s) Install the system panel connector Install ATX power connectors Инсталируйте конектора за системния панел Инсталируйте допълнителна карта (допълнителни карти) Инсталируйте ATX конекторите за хранване Instalace přídatné karty (karet) Nainstalujte konektor pro panel systému Instalace konektorů...