



Whirlpool Cabrio,- WED7300X Use And Care Manual

Electronic dryer

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32

• PAGE

1

OF 32 GO

•

Table of Contents


-

Troubleshooting

•

Bookmarks

Available languages

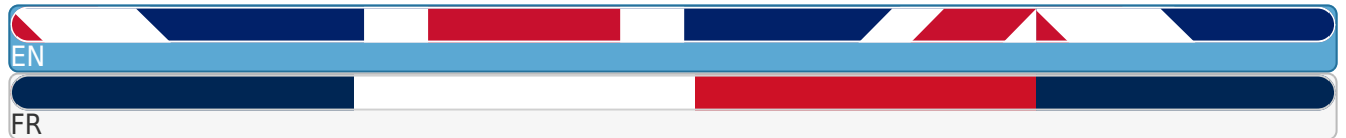


Quick Links

- [1 Table of Contents](#)
- [2 Quick Start Guide/Dryer Use](#)
- [3 Additional Features](#)

4 Troubleshooting

[Download this manual](#)

See also: [Service Manual](#) , [Use and Care Guide](#)

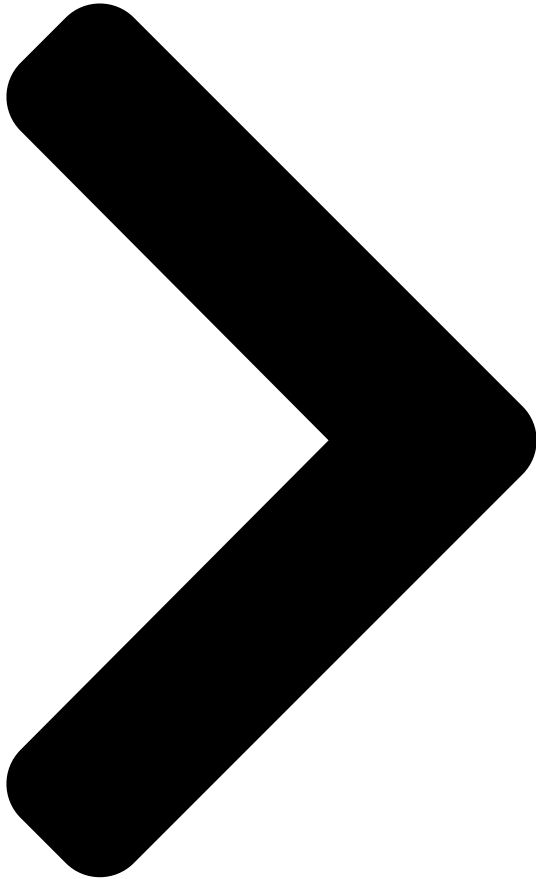

[Enlarged version](#)

TABLE OF CONTENTS

DRYER SAFETY	2
CHECK YOUR VENT SYSTEM FOR GOOD AIR FLOW	4
QUICK START GUIDE/DRYER USE	4
Drying and Cycle Tips	6
Cycles	6
Additional Features	8
Status Lights	6
Changing Cycles, Modifiers, and Options	9
Drying Rack Option	9
DRYER CARE	10
Cleaning the Dryer Location	10
Cleaning the Lint Screen	10
Cleaning the Dryer Interior	10
Removing Accumulated Lint	10
Vacation, Storage, and Moving Care	11

The Whirlpool logo is prominently displayed in the center of the page, overlapping the table of contents. It features the word "Whirlpool" in a bold, serif font, with a stylized swirl graphic above the letters "i" and "l".The cobrio logo is located at the bottom of the page. It consists of the word "cobrio" in a lowercase, sans-serif font, with a stylized swirl graphic above the letters "o" and "i".

[Special Instructions for Steam Models](#) 11
[Changing the Drum Light](#)..... 11
TROUBLESHOOTING 12
WARRANTY 15
 ASSISTANCE AND SERVICE BACK COVER

W10305227

W10315012A - SP

®

For questions about features, operation, performance, parts, accessories, or

®

SÉCHEUSE ÉLECTRONIQUE

Pour assistance, installation, ou service, composez le : 1-800-807-6777

Page

[SÉCURITÉ DE LA SÉCHEUSE](#) 16
[CONTRÔLE DU CIRCUIT D'ÉVACUATION POUR UNE BONNE VENTILATION](#) 18
 GUIDE DE DÉMARRAGE RAPIDE/UTILISATION DE LA SÉCHEUSE.. 18
[Conseils pour le séchage et les programmes](#)..... 20
 Programmes **FABRIC CARE SYSTEM** 20
 Caractéristiques supplémentaires..... **SYSTEME DE SOIN DES TISSUS** 22
 Témoins lumineux..... 23
 Changement des programmes, modificateurs et options 23
 Option de grille de séchage..... 24
ENTRETIEN DE LA SÉCHEUSE..... 25
[Nettoyage de l'emplacement de la sécheuse](#)..... 25
[Nettoyage du filtre à charpie](#) 25
[Nettoyage de l'intérieur de la sécheuse](#)..... 25
[Retrait de la charpie accumulée](#)..... 25
[Précautions à prendre avant les vacances, un entreposage ou un déménagement](#) 25
[Instructions spécifiques pour les modèles vapeur](#)..... 26
[Changement de l'ampoule d'éclairage du tambour](#)..... 26
DÉPANNAGE 27
GARANTIE..... 30
 ASSISTANCE OU SERVICE..... COUVERTURE ARRIÈRE

ELECTRONIC DRYER

Use & Care Guide

service, call: 1-800-253-1301
 or visit our website at...


www.whirlpool.com

In Canada, call: 1-800-807-6777
 or visit our website at...

www.whirlpool.ca

Q
 S
 UICK
 TART
 D
 U

.....

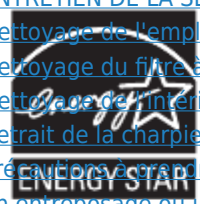

ManualsLib.com

RYER

SE

Guide d'utilisation et d'entretien

ou visitez notre site internet à

www.whirlpool.ca

[G](#)

[UIDE DE DÉMARRAGE RAPIDE](#)

[U](#)

[TILISATION DE LA SÉCHEUSE](#)

TABLE DES MATIÈRES

G

/

UIDE

. 4

PG

/

....

. 18

[PG](#)

Page



[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool Cabrio,- WED7300X

[Dryer Whirlpool Cabrio W10054070 Use And Care Manual](#)

Fabric care system electric dryer (76 pages)

[Dryer Whirlpool W10054080A Use And Care Manual](#)

Cabrio fabric care system series gas dryer (72 pages)

[Control Panel Whirlpool Cabrio Service Manual](#)

Maytag, kenmore 900 series (60 pages)

[Washer Whirlpool CABRIO Use & Care Manual](#)

Automatic washer (48 pages)

[Washer Whirlpool cabrio Use & Care Manual](#)

Top-loading high efficiency low-water washer (44 pages)

[Washer Whirlpool Cabrio Use & Care Manual](#)

Top-loading high efficiency low-water washer (44 pages)

[Washer Whirlpool Cabrio W10240440C Use And Care Manual](#)

Automatic washer with 6th sense technology (40 pages)

[Washer Whirlpool CABRIO W10373816B Use And Care Manual](#)

Top-loading high efficiency low-water washer (40 pages)

[Washer Whirlpool Cabrio Use And Care Manual](#)

Top-loading high efficiency low-water washer (40 pages)

[Washer Whirlpool cabrio Use And Care Manual](#)

Top-loading high efficiency low-water washer (40 pages)

[Washer Whirlpool Cabrio,- WTW5600X Use And Care Manual](#)

Top-loading high efficiency low-water washer (40 pages)

[Washer Whirlpool Cabrio Use And Care Manual](#)

Top-loading high efficiency low-water washer (40 pages)

[Dryer Whirlpool WED8200YW Use And Care Manual](#)

Cabrio series electronic dryer (36 pages)

[Washer Whirlpool Cabrio Use & Care Manual](#)

Top-loading high efficiency low-water washer (19 pages)

[Dryer Whirlpool WED7300X Dimension Manual](#)

Whirlpool electric dryer dimensions (2 pages)

[Dryer Whirlpool WED6200S Dimensions And Installation Information](#)

Whirlpool electric dryer dimensions (1 page)

Summary of Contents for Whirlpool Cabrio,- WED7300X

[Page 1: Table Of Contents](#)

TABLE OF CONTENTS DRYER SAFETY... 2 CHECK YOUR VENT SYSTEM FOR GOOD AIR FLOW ... 4
QUICK START GUIDE/DRYER USE ... 4 Drying and Cycle Tips... 6 Cycles ... 6 Additional Features
... 8 Status Lights ... 8 Changing Cycles, Modifiers, and Options... 9 Drying Rack Option...

[Page 2: Dryer Safety](#)

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed. DRYER SAFETY You can be killed or seriously injured if you don't immediately follow instructions.

[Page 3](#) **IMPORTANT:** The gas installation must conform with local codes, or in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54. The dryer must be electrically grounded in accordance with local codes, or in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70.

[Page 4: Check Your Vent System For Good Air Flow](#)

(even after washing). Failure to follow these instructions can result in death, explosion, or fire. For a summary of how to use your dryer following installation, see the QUICK START GUIDE on the next page. Maintain good air flow ■...

[Page 5: Quick Start Guide](#)

QUICK START GUIDE NOTE: This Use and Care Guide covers several different models. Your dryer may not have all of the cycles and features described. **WARNING:** To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** before operating this appliance.

[Page 6: Drying And Cycle Tips](#)

■ If desired, add a fabric softener sheet. Follow package instructions. ■ To reduce wrinkling, remove the load from the dryer as soon as tumbling stops. This is especially important for permanent press, knits, and synthetic fabrics. ■ Avoid drying heavy work clothes together with lighter fabrics.

[Page 7](#) Use Steam Cycles to help smooth out wrinkles from dry items, such as clothes that have been worn or clothes that have been left in the dryer too long. When a Steam Cycle is selected, the estimated time remaining display shows the actual time remaining in the cycle.

[Page 8: Additional Features](#)

5 minutes. When the dryer is not running, the drum light will turn on when DRUM LIGHT is pressed or the dryer door is opened, and it will remain on until the dryer door has been open for 5 minutes, the dryer door is closed or DRUM LIGHT is pressed again.

[Page 9: Changing Cycles, Modifiers, And Options](#)

A. Front edge 2. Place drying rack inside dryer drum, positioning the back wire on the ledge of the inner dryer back panel. Push down on front edge of drying rack to secure at the front of the dryer B. A. Drying rack front edge B.

[Page 10: Dryer Care](#)

If lint falls off the screen into the dryer during removal, check the exhaust hood and remove the lint. Every load cleaning The lint screen is located in the door opening of the dryer. A Temp. Time* screen blocked by lint can increase drying time.

[Page 11: Vacation, Storage, And Moving Care](#)

Vacation or Storage Care Operate your dryer only when you are at home. If you will be on vacation or not using your dryer for an extended period of time, you should: 1.

[Page 12: Troubleshooting](#)

Try the following: Clean lint screen. Check to see if the vent run from the dryer to the wall is crushed or kinked. Confirm the vent run from the dryer to the wall is free of lint and debris.

[Page 13: Dryer Results](#)

Is the dryer located in a closet? Closet doors must have ventilation openings at the top and bottom of the door. The rear of the dryer requires 5" (127 mm) of airspace, and the sides and front of the dryer require a minimum of 1"...

[Page 14](#) This will not transfer to other clothing. Loads are wrinkled ■ Was the load removed from dryer at the end of the cycle? For Steam Dryers select Enhanced Touch Up Cycle to tumble the load with water and heat to help smooth out wrinkles from a load left in the dryer.

[Page 15: Warranty](#)

5. Cosmetic damage, including scratches, dents, chips or other damage to the finish of your major appliance, unless such damage results from defects in materials or workmanship and is reported to Whirlpool within 30 days from the date of purchase.

[Page 16: Sécurité De La Sécheuse](#)

Votre sécurité et celle des autres est très importante. Nous donnons de nombreux messages de sécurité importants dans ce manuel et sur votre appareil ménager. Assurez-vous de toujours lire tous les messages de sécurité et de vous y conformer. Voici le symbole d'alerte de sécurité. Ce symbole d'alerte de sécurité...

[Page 17](#) IMPORTANTES INSTRUCTIONS DE SÉCURITÉ AVERTISSEMENT : Pour réduire le risque d'incendie, de choc électrique ou de blessure lors de l'utilisation de la sécheuse, il convient d'observer certaines précautions élémentaires dont les suivantes : ■ Lire toutes les instructions avant d'utiliser la sécheuse. ■...

[Page 18: Guide De Démarrage Rapide/Utilisation De La Sécheuse](#)

AVERTISSEMENT : L'odorat ne permet pas toujours la détection d'une fuite de gaz. Les distributeurs de gaz recommandent l'emploi d'un détecteur de gaz (homologation UL ou CSA). Pour d'autre information, contacter le fournisseur de gaz local. En cas de détection d'une fuite de gaz, exécuter les instructions "Que faire dans le cas d'une odeur de gaz". CONTRÔLE DU CIRCUIT D'ÉVACUATION POUR UNE BONNE VENTILATION Bonne ventilation Pour sécher le linge avec efficacité, les sécheuses utilisent la...

[Page 19: Programmes Automatiques](#)

GUIDE DE DÉMARRAGE RAPIDE REMARQUE : Ce guide d'utilisation et d'entretien couvre plusieurs modèles différents. Votre sécheuse peut ne pas comporter l'ensemble des programmes ou caractéristiques décrits. AVERTISSEMENT : Pour réduire le risque d'incendie, de choc électrique ou de blessures corporelles, lire les INSTRUCTIONS IMPORTANTES DE SÉCURITÉ...

[Page 20: Conseils Pour Le Séchage Et Les Programmes](#)

Conseils pour le séchage et les programmes Choisir le programme, le degré de séchage ou la température corrects pour la charge. Si un programme automatique est en cours, l'afficheur indique la durée estimée du programme au moment où la sécheuse détecte automatiquement le degré de séchage de la charge.

[Page 21](#) Préréglages des programmes automatiques Programmes automatiques Type de charge CASUAL (tout-aller) Perm Press Tissus sans repassage, tels que tee-shirts de sport, vêtements de travail tout-aller, pressage permanent, articles synthétiques TOWELS Cotton (serviettes en coton) Serviettes DELICATE (articles délicats) Lingerie, chemisiers, tricot lavables en machine Programmes vapeur (sur certains modèles) Utiliser les programmes vapeur pour aider à...

[Page 22: Caractéristiques Supplémentaires](#)

Préréglages des programmes minutés Programmes minutés Température Type de charge par défaut TIMED DRY (séchage High (élevée) minuté) À utiliser si les articles sont encore humides après un programme automatique. Articles lourds, volumineux, couvre-lits, vêtements de travail. High (élevée) QUICK DRY (séchage rapide) (sur certains modèles) Petites charges ou temps...

[Page 23: Témoins Lumineux](#)

Option Damp Dry Signal (signal de séchage humide) Choisir cette option pour être averti lorsque les vêtements sont secs à environ 80 %. Cette option est utile lorsqu'on désire retirer des articles légers d'une charge mixte pour éviter de les sécher à l'excès ou sortir des articles partiellement secs nécessitant un éventuel repassage.

[Page 24: Option De Grille De Séchage](#)

Option de grille de séchage Utiliser la grille de séchage pour faire sécher sans culbutage des articles tels que chandails et oreillers. Le tambour tourne, mais la grille de séchage ne bouge pas. Si votre modèle ne dispose pas d'une grille de séchage, vous pouvez en acheter une.

[Page 25: Entretien De La Sécheuse](#)

ENTRETIEN DE LA SÉCHEUSE Nettoyage de l'emplacement de la sécheuse Ne pas laisser d'éléments qui pourraient obstruer le débit de combustion et empêcher une bonne ventilation autour de la sécheuse. Nettoyage du filtre à charpie Nettoyer le filtre à charpie avant chaque charge. Un filtre obstrué de charpie peut augmenter la durée de séchage.

[Page 26: Instructions Spécifiques Pour Les Modèles Vapeur](#)

Précautions à prendre avant un déménagement Sécheuses alimentées par cordon d'alimentation : 1. Débrancher le cordon d'alimentation électrique. 2. Modèles vapeur uniquement : Fermer le robinet d'eau. 3. Modèles vapeur uniquement : Déconnecter le tuyau d'arrivée d'eau du robinet, puis vidanger le tuyau. Transporter le tuyau séparément.

[Page 27: Dépannage](#)

Essayer d'abord les solutions suggérées ici ou visiter notre site Web et consulter notre FAQ (Foire aux questions), pour éventuellement éviter le coût d'une visite de service...www.whirlpool.ca Fonctionnement de la sécheuse La sécheuse ne fonctionne pas ■ La porte de la sécheuse est-elle bien fermée? ■...

[Page 28](#) Résultats de la sécheuse Le séchage des vêtements n'est pas satisfaisant, les durées de séchage sont trop longues ou la charge est trop chaude ■ Le filtre à charpie est-il obstrué de charpie? Le filtre à charpie doit être nettoyé avant chaque charge. AVERTISSEMENT Risque d'incendie Utiliser un conduit d'évacuation en métal lourd.

[Page 29](#) Temps de programme trop court AVERTISSEMENT Risque du poids excessif Utiliser deux ou plus de personnes pour déplacer et installer la sécheuse. Le non-respect de cette instruction peut causer une blessure au dos ou d'autre blessure. ■ Le programme automatique se termine-t-il trop tôt? La charge n'est peut-être pas en contact avec les bandes de détection.

[Page 30: Garantie](#)

5. Les défauts apparents, notamment les éraflures, les bosses, fissures ou tout autre dommage au fini du gros appareil ménager, à moins que ces dommages soient dus à des vices de matériaux ou de fabrication et soient signalés à Whirlpool dans les 30 jours suivant la date d'achat.

[Page 31](#) Notes...

[Page 32: Assistance Ou Service](#)

® Registered Trademark/TM Trademark of Whirlpool, U.S.A., Whirlpool Canada LP Licensee in Canada © 2010 Whirlpool Corporation. ® Marque déposée/TM Marque de commerce de Whirlpool, U.S.A., emploi sous licence par Whirlpool Canada LP au Canada All rights reserved. Tous droits réservés.

This manual is also suitable for:

Cabrio,- wed7400xCabrio,- wed7600xCabrio,- wed7800xCabrio,- wgd7300xCabrio,- wgd7400xCabrio,- wgd7600x ...
[Show all](#)