



Whirlpool Cabrio,- WTW7800X Use And Care Manual

Top-loading high efficiency low-water washer

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40

• PAGE

1

OF 40 GO

•

[Table of Contents](#)


-

Troubleshooting

•

Bookmarks

Available languages

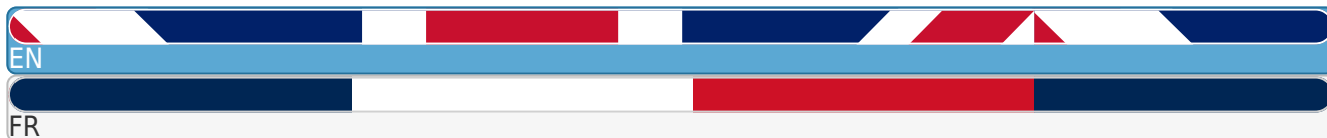

Quick Links

[1 Control Panel and Features](#)

[2 Cycle Guide](#)


[3 Using Your Washer](#)

[4 Washer Maintenance](#)

[5 Troubleshooting](#)

[Download this manual](#)

See also: [Service Manual](#) , [Use and Care Guide](#)

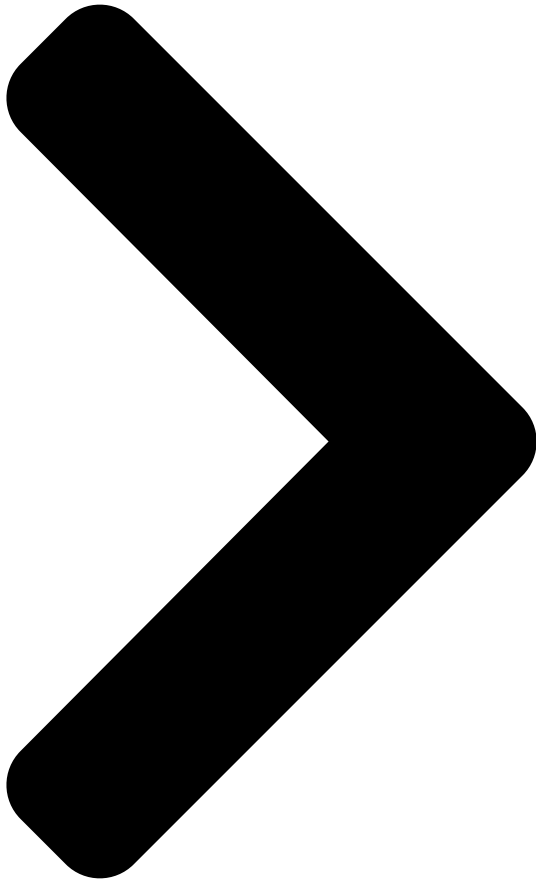

TOP-LOADING
HIGH EFFICIENCY
LOW-WATER WASHER
USE AND CARE GUIDE



Table of Contents

WASHER SAFETY	2
WHAT'S NEW UNDER THE LID?	3
CONTROL PANEL AND FEATURES	4
Dispensers	

cobrio®

[CYCLE GUIDE](#)6

[USING YOUR WASHER](#)8

[Using Laundry Product Dispensers](#)9

[Starting Your Washer](#)9

[WASHER MAINTENANCE](#)

[TROUBLESHOOTING](#)

.....13

[WARRANTY](#)

.....19

ASSISTANCE OR SERVICE

W10298601A

W10298602A - SP

.....11

..... Back Cover

LAVEUSE HAUTE

EFFICACITÉ À FAIBLE

CONSOMMATION D'EAU

AVEC CHARGEMENT

PAR LE DESSUS

GUIDE D'UTILISATION

ET D'ENTRETIEN

Table des Matières

[SÉCURITÉ DE LA LAVEUSE](#)20

[QUOI DE NEUF SOUS LE COUVERCLE?](#)21

[TABLEAU DE COMMANDE](#)

[ET CARACTÉRISTIQUES](#)22

[Distributeurs](#)23

[GUIDE DES PROGRAMMES](#)24

[UTILISATION DE LA LAVEUSE](#)27

[Utilisation des distributeurs de produits de lessive](#) ..28

[Mise en marche de la laveuse](#)28

[ENTRETIEN DE LA LAVEUSE](#)

[DÉPANNAGE](#)

.....32

[GARANTIE](#)

.....39

[ASSISTANCE OU SERVICE](#)

Designed to use only HE High Efficiency
detergents.



cabrio®

ManualsLib.com

Conçue pour l'utilisation d'un détergent haute
efficacité seulement.

.....30
..... [Couverture arrière](#)



1
2
3
4
5

Related Manuals for Whirlpool Cabrio,- WTW7800X

[Dryer Whirlpool Cabrio W10054070 Use And Care Manual](#)

Fabric care system electric dryer (76 pages)

[Control Panel Whirlpool Cabrio Service Manual](#)

Maytag, kenmore 900 series (60 pages)

[Washer Whirlpool CABRIO Use & Care Manual](#)

Automatic washer (48 pages)

[Washer Whirlpool cabrio Use & Care Manual](#)

Top-loading high efficiency low-water washer (44 pages)

[Washer Whirlpool Cabrio Use & Care Manual](#)

Top-loading high efficiency low-water washer (44 pages)

[Washer Whirlpool Cabrio W10240440C Use And Care Manual](#)

Automatic washer with 6th sense technology (40 pages)

[Washer Whirlpool CABRIO W10373816B Use And Care Manual](#)

Top-loading high efficiency low-water washer (40 pages)

[Washer Whirlpool Cabrio Use And Care Manual](#)

Top-loading high efficiency low-water washer (40 pages)

[Washer Whirlpool cabrio Use And Care Manual](#)

Top-loading high efficiency low-water washer (40 pages)

[Washer Whirlpool Cabrio Use And Care Manual](#)

Top-loading high efficiency low-water washer (40 pages)

[Dryer Whirlpool WED8200YW Use And Care Manual](#)

Cabrio series electronic dryer (36 pages)

[Dryer Whirlpool Cabrio,- WED7300X Use And Care Manual](#)

Electronic dryer (32 pages)

[Washer Whirlpool Cabrio Use & Care Manual](#)

Top-loading high efficiency low-water washer (19 pages)

[Washer Whirlpool Cabrio,- WTW5500X Install Manual](#)

Top-loading washer (16 pages)

[Dryer Whirlpool WED7300X Dimension Manual](#)

Whirlpool electric dryer dimensions (2 pages)

[Dryer Whirlpool WED6200S Dimensions And Installation Information](#)

Whirlpool electric dryer dimensions (1 page)

Summary of Contents for Whirlpool Cabrio,- WTW7800X

[Page 1: Table Of Contents](#)

Table of Contents WASHER SAFETY ...2 WHAT'S NEW UNDER THE LID? ...3 CONTROL PANEL AND FEATURES ...4 Dispensers ...5 CYCLE GUIDE ...6 USING YOUR WASHER ...8 Using Laundry Product Dispensers ...9 Starting Your Washer ...9 WASHER MAINTENANCE ...11 TROUBLESHOOTING ...13 WARRANTY ...19...

[Page 2: Washer Safety](#)

WASHER SAFETY...

[Page 3: What's New Under The Lid](#)

For best results, fill no higher than the recommended maximum load height. Once you start the cycle, the lid will lock, and the washer will begin the sensing process to determine the correct water level for the load. This may take several minutes.

[Page 4: Control Panel And Features](#)

CONTROL PANEL AND FEATURES Not all features and cycles are available on all models. **POWER BUTTON** Press to turn the washer ON. Pressing once while the washer is on will cancel the current cycle, pressing twice will turn the washer OFF.

[Page 5: Dispensers](#)

It will add additional time to the cycle. Deep Clean should be started on a dry load only and must be selected before the washer has started to fill. **EXTRA RINSE** This option can be used to automatically add a second rinse to most cycles.

[Page 6: Cycle Guide](#)

CYCLE GUIDE Settings and options shown in bold are default settings for that cycle. For best fabric care, choose the cycle that best fits the load being washed. If using the Eco Monitor, adjust the temperature and spin speed within that cycle to improve energy usage.

[Page 7](#) Spin speed is adjustable. Adjustable soak time to loosen heavy soils. At the end of the cycle, the washer will drain but not spin, and a tone will sound. Select desired wash cycle and add additional detergent to continue wash process.

[Page 8: Using Your Washer](#)

For best results, do not load higher than the recommended maximum load height. Try mixing different sized items to reduce tangling. **IMPORTANT:** Do not overload washer. Items need to move freely. Overloading can lead to poor cleaning performance, and may increase wrinkling and tangling.

[Page 9: Using Laundry Product Dispensers](#)

- Do not overfill, dilute, or use more than 3/4 cup (180 mL) of liquid chlorine bleach. Overfilling will cause the bleach or Oxi product to dispense immediately into the washer.
- Do not use color-safe bleach or Oxi products in the same cycle with liquid chlorine bleach.

[Page 10: Select Cycle](#)

This will be cooler than your hot water heater setting. Warm Some cold water will be added, so this may be cooler than what your previous washer provided. Cold Warm water may be added to assist in soil removal and to help dissolve detergents.

[Page 11: Washer Maintenance](#)

When replacing your inlet hoses, mark the date of replacement on the label with a permanent marker. **CLEANING YOUR WASHER** Keep your washer as clean and fresh as your clothes. To keep washer interior odor-free, follow this recommended monthly cleaning procedure: 1.

[Page 12](#) **NON-USE AND VACATION CARE** Operate your washer only when you are home. If moving, or not using your washer for a period of time, follow these steps: 1. Unplug or disconnect power to washer. 2. Turn off water supply to washer, to avoid flooding due to water pressure surge.

[Page 13: Troubleshooting](#)

TROUBLESHOOTING First try the solutions suggested here or visit our website at www.whirlpool.com/help If you experience Possible Causes Vibration or Off-Balance Vibration, rocking, or Feet may not be in contact with the “walking” floor and locked. Washer may not be level.

[Page 14](#) **TROUBLESHOOTING** First try the solutions suggested here or visit our website at www.whirlpool.com/help If you experience Possible Causes Washer not performing as expected (cont.) Washer won't run or fill, Check for proper water supply. washer stops working Check

proper electrical supply.

[Page 15](#) First try the solutions suggested here or visit our website at www.whirlpool.com/help If you experience Possible Causes Washer not performing as expected (cont.) Empty pockets and use garment bags Washer not draining/ for small items. spinning, loads are still wet Using cycles with a lower spin speed.

[Page 16](#) TROUBLESHOOTING First try the solutions suggested here or visit our website at www.whirlpool.com/help If you experience Washer not performing as expected (cont.) Sand, pet hair, lint, etc. Heavy sand, pet hair, lint, and on load after washing detergent or bleach residues may require additional rinsing.

[Page 17](#) TROUBLESHOOTING First try the solutions suggested here or visit our website at www.whirlpool.com/help If you experience Washer not performing as expected (cont.) Sharp items were in pockets during Fabric Damage wash cycle. Strings and straps could have tangled. Items may have been damaged before washing.

[Page 18](#) TROUBLESHOOTING First try the solutions suggested here or visit our website at www.whirlpool.com/help If you experience Possible Causes Error Code Appears in Display oL (overloaded) Load too large. appears in display uL (unbalanced load) Load not balanced. The washer is...

[Page 19: Warranty](#)

5. Cosmetic damage, including scratches, dents, chips or other damage to the finish of your major appliance, unless such damage results from defects in materials or workmanship and is reported to Whirlpool within 30 days from the date of purchase.

[Page 20: Sécurité De La Laveuse](#)

SÉCURITÉ DE LA LAVEUSE...

[Page 21: Quoi De Neuf Sous Le Couvercle](#)

QUOI DE NEUF SOUS LE COUVERCLE? Nettoyer avec moins d'eau Laveuse à faible consommation Machine à laver traditionnelle de d'eau avec système de lavage type agitateur La nouveauté la plus flagrante de cette nouvelle laveuse est son système de lavage à faible consommation d'eau avec pulseur.

[Page 22: Tableau De Commande Et Caractéristiques](#)

TABLEAU DE COMMANDE ET CARACTÉRISTIQUES Certains programmes et caractéristiques ne sont pas disponibles sur certains modèles. BOUTON DE MISE SOUS TENSION Appuyer sur ce bouton pour METTRE EN MARCHE la laveuse. Si l'on appuie une fois sur ce bouton alors que la laveuse fonctionne, le programme en cours est annulé;...

[Page 23: Distributeurs](#)

TEMPÉRATURE DE LAVAGE / ESSORAGE (WASH/RINSE TEMP La fonction de contrôle de température détecte et maintient une température uniforme de l'eau en régulant le débit d'arrivée d'eau chaude et d'eau froide. Sélectionner une température de lavage en fonction du type de tissu et de saleté...

[Page 24: Guide Des Programmes](#)

GUIDE DE PROGRAMMES Les réglages et options indiqués en gras sont les réglages par défaut pour ce programme. Pour un meilleur soin des tissus, choisir le programme qui convient le mieux à la charge à laver. Si l'on utilise l'éco-moniteur, ajuster la température et la vitesse d'essorage dans ce programme pour améliorer la consommation d'énergie.

[Page 25: Guide De Programmes](#)

GUIDE DE PROGRAMMES Les réglages et options indiqués en gras sont les réglages par défaut pour ce programme. Pour un meilleur soin des tissus, choisir le programme qui convient le mieux à la charge à laver. Si l'on utilise l'éco-moniteur, ajuster la température et la vitesse d'essorage dans ce programme pour améliorer la consommation d'énergie.

[Page 26](#) (Deep Water Soak) Nettoyage Pas de vêtements dans de la laveuse la laveuse avec

Affresh ® (Clean Washer with Affresh ® Options de Température de lavage/rinçage : Chaude/froide (Hot/Cold) Tiède/tiède (Warm/Warm) Tiède/froide (Warm/Cold) Froide/froide (Cold/Cold) Température du robinet d'eau froide/froide (Tap Cold/Cold) Température...

[Page 27: Utilisation De La Laveuse](#)

UTILISATION DE LA LAVEUSE Trier et préparer le linge • Vider les poches. Des pièces de monnaie, des boutons ou objets de petite taille sont susceptibles de glisser sous l'impulseur et de s'y coincer, ce qui peut entraîner des bruits inattendus.

[Page 28: Utilisation Des Distributeurs De Produits De Lessive](#)

Utilisation des distributeurs de produits de lessive Verser le détergent HE dans le distributeur Distributeur de détergent Ajouter une mesure de détergent HE dans le distributeur de détergent. IMPORTANT : Utiliser uniquement des détergents Haute efficacité. L'emballage portera la mention "HE" ou "High Efficiency"...

[Page 29: Mise En Marche De La Laveuse](#)

Mise en marche de la laveuse Appuyer sur POWER pour mettre la laveuse en marche Sélectionner le programme Tourner le bouton de programme pour choisir un programme de lavage. Le témoin Estimated Time Remaining (durée résiduelle estimée) s'allume, et la durée du programme s'affiche. On peut remarquer un ajustement de la durée durant le programme.

[Page 30: Entretien De La Laveuse](#)

à long terme, ne pas utiliser plus que la quantité d'agent de blanchiment recommandée. 3. Rabattre le couvercle de la laveuse. 4. Appuyer sur POWER (mise sous tension). 5. Sélectionner le programme CLEAN WASHER with AFFRESH (nettoyage de la laveuse avec AFFRESH™ ...

[Page 31: Transport De La Laveuse](#)

NETTOYAGE DES DISTRIBUTEURS On trouvera peut-être des traces de produits de lessive dans les distributeurs. Pour retirer les traces, essuyer avec un chiffon humide et sécher avec une serviette. NON-UTILISATION ET ENTRETIEN EN PÉRIODE DE VACANCES Faire fonctionner la laveuse seulement lorsqu'on est présent. En cas de déménagement ou si l'on n'utilise pas la laveuse pendant un certain temps, suivre les étapes suivantes :...

[Page 32: Dépannage](#)

DÉPANNAGE Essayer d'abord les solutions suggérées ici ou consulter le site Web www.whirlpool.com/help pour obtenir de l'aide Si les phénomènes Causes possibles suivants se produisent Vibrations ou déséquilibre Vibrations, balancement Les pieds ne sont peut-être pas ou effet de "marche"...

[Page 33](#) DÉPANNAGE Essayer d'abord les solutions suggérées ici ou consulter le site Web www.whirlpool.com/help pour obtenir de l'aide Si les phénomènes Causes possibles suivants se produisent Fuites d'eau Vérifier ce qui suit pour Raccord du tuyau de vidange que l'installation soit...

[Page 34](#) DÉPANNAGE Essayer d'abord les solutions suggérées ici ou consulter le site Web www.whirlpool.com/help pour obtenir de l'aide Si les phénomènes Causes possibles suivants se produisent La laveuse ne fonctionne pas comme prévu La laveuse ne fonctionne Fonctionnement normal pas ou ne se remplit pas;...

[Page 35](#) DÉPANNAGE Essayer d'abord les solutions suggérées ici ou consulter le site Web www.whirlpool.com/help pour obtenir de l'aide Si les phénomènes Causes possibles suivants se produisent La laveuse ne fonctionne pas comme prévu Températures de lavage Vérifier que la machine est ou de rinçage...

[Page 36](#) DÉPANNAGE Essayer d'abord les solutions suggérées ici ou consulter le site Web www.whirlpool.com/help pour obtenir de l'aide Si les phénomènes Causes possibles suivants se produisent La laveuse ne fonctionne pas comme prévu Des résidus lourds de sable, Sable, poils d'animaux, de poils d'animaux, de charpie...

[Page 37](#) DÉPANNAGE Essayer d'abord les solutions suggérées ici ou consulter le site Web www.whirlpool.com/help pour obtenir de l'aide Si les phénomènes Causes possibles suivants se produisent La laveuse ne fonctionne pas comme prévu Odeurs L'entretien mensuel n'est pas

effectué tel que recommandé.

Page 38 DÉPANNAGE Essayez d'abord les solutions suggérées ici ou consultez le site Web www.whirlpool.com/help pour obtenir de l'aide. Si les phénomènes suivants se produisent, un code d'erreur apparaît sur l'afficheur oL (surcharge) apparaît. Charge trop grosse. sur l'afficheur uL (charge déséquilibrée).

Page 39: Garantie

Les défauts apparents, notamment les éraflures, les bosses, les fissures ou tout autre dommage au fini du gros appareil ménager, à moins que ces dommages soient dus à des vices de matériaux ou de fabrication et soient signalés à Whirlpool dans les 30 jours suivant la date d'achat.

Page 40: Assistance Ou Service

Avant de faire un appel pour assistance ou service, veuillez vérifier la section "Dépannage" ou consulter www.whirlpool.com/help. Cette vérification peut vous faire économiser le coût d'une visite de réparation. Si vous avez encore besoin d'aide, suivez les instructions ci-dessous.