



Toshiba 24WL2C63DT Quick Start Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56


•

[Table of Contents](#)

•

Bookmarks

Available languages

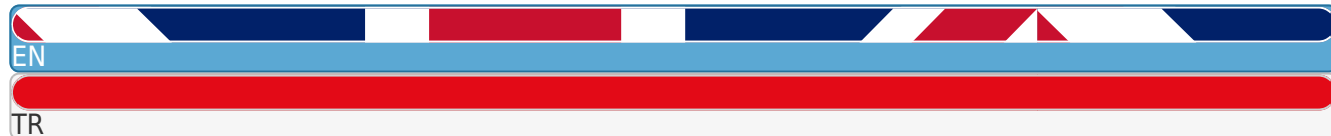

Quick Links

[Download this manual](#)



24WL2C63DT

QUICK START GUIDE

HIZLI BAŞLANGIÇ KILAVUZU

TOSHIBA

Please visit www.toshiba-tv.com to download the full user manual.

Table of Contents

[Next Page](#)

1
2
3
4
5

Chapters

English 3

Türkçe 25

Related Manuals for Toshiba 24WL2C63DT

[Monitor Toshiba 20DL74 Specifications](#)

20" diagonal 4:3 lcd monitor (2 pages)

[Monitor Toshiba TheaterWide 20HL85 Specifications](#)

20" diagonal theaterwide lcd hd monitor (2 pages)

[Monitor Toshiba TheaterWide 23HL84 Specifications](#)

23" diagonal theaterwide lcd hd monitor (2 pages)

[Monitor Toshiba 26HLC56 Owner's Manual](#)

Toshiba lcd tv monitor owner's manual (46 pages)

[Monitor Toshiba COLORSTREAM HD 26HLC56 Owner's Manual](#)

(46 pages)

[Monitor Toshiba 27WL46 Series Owner's Manual](#)

Toshiba monitor owner's manual (29 pages)

[Monitor Toshiba 27WL55A Schematic Diagrams](#)

(52 pages)

[Monitor Toshiba LED TV Series Owner's Manual](#)

(22 pages)

[Monitor Toshiba TekBright User Manual](#)

20-inch wide tft lcd monitor (41 pages)

[Monitor Toshiba PA3923U-1LC3 USB Monitor User Manual](#)

Mobile lcd monitor (40 pages)

[Monitor Toshiba PA3923U-1LC3 Specifications](#)

Usb mobile lcd monitor (2 pages)

[Monitor Toshiba PA5022U-1LC3 User Manual](#)

15.6" mobile led monitor (42 pages)

[Monitor Toshiba TD-E433 Owner's Manual](#)

(31 pages)

[Monitor Toshiba 65H84 Brochure](#)

65" diagonal hd monitor (2 pages)

[Monitor Toshiba 50HP82 Owner's Manual](#)

Wide plasma display (52 pages)

[Monitor Toshiba 15VL33 Owner's Manual](#)

Toshiba stasia owner's manual (27 pages)

Summary of Contents for Toshiba 24WL2C63DT

[Page 1](#) 24WL2C63DT QUICK START GUIDE HIZLI BAŞLANGIÇ KILAVUZU Please visit www.toshiba-tv.com to download the full user manual.

[Page 3: Table Of Contents](#)

Contents Safety Information 2 Markings on the Product..... 2 Disposal Information4 REACH information4 EU Conformity Statement4 Features5 High Dynamic Range (HDR) / Hybrid Log-Gamma (HLG) 5 Accessories Included.....5 Standby Notifications5 TV Control Switch &...

[Page 4: Safety Information](#)

- Do not place any heat sources such as electric Safety Information heaters, radiators, etc. near the TV set.
- Do not place the TV on the floor and inclined CAUTION surfaces.
- To avoid danger of suffocation, keep plastic bags RISK OF ELECTRIC SHOCK out of the reach of the babies, children and domestic DO NOT OPEN...

[Page 5](#) WARNING WALL MOUNTING WARNINGS Do not ingest the battery, Chemical Burn Hazard • Read the instructions before mounting your TV This product or the accessories supplied with the on the wall. product may contain a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause •...

[Page 6: Disposal Information](#)

Restriction of Chemicals), entered into force on 1 June 2007. Toshiba will meet all REACH requirements and is committed to provide our customers with information about the presence in our articles of substances included on the candidate list according to REACH regulation.

[Page 7: Features](#)

For more detailed information on installation, sockets function and control refer to the full manual on • USB input our the website at <http://www.toshiba-tv.com> • OSD menu system Standby Notifications • Back AV inputs for external devices (such as DVD If the TV does not receive any input signal (e.g.

[Page 8: Using Main Tv Menu](#)

To change volume: Increase the volume by pushing you can delete or change the position of any item in the button up. Decrease the volume by pushing the the Home menu. Highlight an option and press OK. button down. Select the delete or move icon and press OK. In order to move a menu item use the Right, Left, Up and Down To change channel: Press the middle of the button direction buttons to select the position that you want...

[Page 9: Inserting The Batteries Into The Remote](#)

3.4. Quick AI Inserting the Batteries into the Remote AI stands for artificial intelligence. By means of Remove the back cover to reveal the battery compart- this feature some TV settings can be adjusted ment. Insert two size AAA batteries. Make sure the (+) automatically depending on the genre information of and (-) signs match (observe correct polarity).

[Page 10: Specification](#)

For DTS patents, see <http://patents.dts.com>. This product is protected by certain intellectual property Manufactured under license from DTS Licensing rights of Microsoft Corporation. Use or distribution of Limited. DTS, the Symbol, DTS and the Symbol such technology outside of this product is prohibited together, DTS-HD, and the DTS-HD logo are registered without a license from Microsoft or an authorized trademarks or trademarks of DTS, Inc.

[Page 11](#) Country Restrictions This device is intended for home and office use in all EU countries (and other countries following the rele- vant EU directive) without any limitation except for the countries mentioned below. Country Restriction General authorization required for outdoor Bulgaria use and public service If used outside of own premises, general...

[Page 12: Remote Control](#)

Remote Control Standby: Switches On / Off the TV Source: Shows available broadcast and content sources Numeric buttons: Switches the channel, enters a number or a letter in the text box on the screen. Language: Switches among sound modes (analogue TV), displays and changes audio/subtitle language and turns subtitles on or off (digital TV, where available) Menu: Displays TV menu...

[Page 13: Switching On/Off](#)

changes. You can use Programme +/- buttons to Switching On/Off scroll up and down to read the entire text. You will To Switch the TV On be able to change your preferences at any time later from the Settings>System>Privacy Settings Connect the power cord to a power source such as a menu.

[Page 14](#) type as described above. You can select to install HD Note: Searching duration will change depending on the selected Search Step. or SD channels during the installation. This selection can be done later too using the Preferred List option Satellite: If Satellite broadcast search option is turned under the Settings>Installation>TKGS Installation on, the TV will search for digital satellite broadcasts menu.

[Page 15: E-Manual](#)

your preferences using the Edit tab options or press Teletext Services the Menu button to quit and watch TV. Press the Text button to enter. Press again to activate While the search continues a message may appear, mix mode, which allows you to see the teletext page asking whether you want to sort channels according and the TV broadcast at the same time.

[Page 16: Connectivity](#)

Internet Speed Test Connectivity Highlight Internet Speed Test and press the OK Wired Connectivity button. TV will check the internet connection bandwidth and display the result when complete. To Connect to a Wired Network Advanced Settings • You must have a modem/router connected to an active broadband connection.

[Page 17](#) • The Wireless feature of the TV supports 802.11 a,b,g Other Information & n type modems. It is highly recommended that The status of the connection will be displayed as you should use the IEEE 802.11n communication Connected or Not Connected and the current IP protocol in order to avoid any possible problems address, if a connection is established.

[Page 18](#) If you want your TV to consume less power in standby message is displayed, the connection is successfully mode, you can disable this feature by setting the established. If the connection fails try it again. Networked Standby Mode option as Off. Note: Your TV may not be compatible with all keyboard and Wireless Display mouse models in the market.

[Page 19: Apps](#)

• Try searching for wireless networks again, using the 1. Server Software Installation Network menu screen. The Audio Video Sharing feature cannot be used if the server programme is not installed onto your PC or if If the wireless network does not function properly, try the required media server software is not installed onto using the wired network in your home.

[Page 20: Internet Browser](#)

Your TV does not support any download processes Notes: from the internet via the browser. Possible application dependent problems may be caused by the content service provider. All sites on the internet might not be supported. According to the site; content problems may occur. Third party internet services may change, be discontinued or restricted at any time.

[Page 21: Smart Center](#)

may not work on a teletext application where the any item, simply press on the delete icon found on each row. numbers indicate teletext pages. EPG(Electronic programme guide): You can view HbbTV requires AV streaming capability for the the broadcast schedules of selected channel lists platform.

[Page 22: Alexa Ready](#)

Mirror Mode User interface of the Smart Center application is subject to change according to version installed on your device. This mode of FollowMe TV feature is enabled by Alexa Ready default and allows streaming the content from any other selected TV sources and Media Browser.

[Page 23: Google Assistant](#)

• Carry out first time installation on your TV. The setup Command Function wizard will be displayed after the installation process Alexa, stop 'FN' Stops media playback is completed Setup process Advances media in fast Alexa, fast forward on 'FN' forward mode The wizard will

guide you through the setup process.

Page 24 • On the first screen highlight Start and press OK trend-setting TV technology on our website. to proceed www.toshiba-tv.com • You will be asked to determine a name for your TV on the next screen, called 'Friendly Name'(FN). A 'Friendly Name' is a name that reminds you of your You can review your TV user manual online or TV, such as 'Living Room TV', 'Kitchen TV', 'Dining...

Page 25 İçindekiler Güvenlik Bilgileri2 Ürün üzerindeki İşaretler 2 Bertaraf Bilgileri4 Temizlik ve Bakımda Dikkat Edilmesi Gereken Güvenlik Bilgileri4 Taşıma ve Nakliye Sırasında Dikkat Edilmesi Gereken Güvenlik Bilgileri4 Sorumluluk Sınırlaması 4 REACH bilgileri5 CE Uygunluk Beyanı...

Page 26: Güvenlik Bilgileri

• TV'nin doğrudan güneş ışığına maruz Güvenlik Bilgileri kalmasına izin vermeyiniz veya yanar mumlar gibi açık alevleri TV'nin üzerine veya DİKKAT yakınlarına yerleştirmeyiniz. ELEKTRİK ÇARPMASI RİSKİ • TV setinin yanına elektrikli ısıtıcılar, radyatörler, vb. AÇMAYINIZ gibi ısı kaynakları yerleştirmeyiniz. • TV'yi yere veya eğimli yüzeylere yerleştirmeyiniz. DİKKAT: ELEKTRİK ÇARPMASI RİSKİNİ...

Page 27 UYARI DUVARA MONTAJ UYARILARI Pili yutmayınız, Kimyasal Yanma tehlikesi • TV'nizi duvara monte etmeden önce, bu Bu ürün veya birlikte verilen aksesuarlar bir pul/ açıklamaları okuyunuz. düğme tipi pil içerebilir. Eğer düğme tipi pil yutulursa, sadece 2 saat içerisinde vücudunuzun içinde ciddi •...

Page 28: Bertaraf Bilgileri

Bertaraf Bilgileri Aşağıdaki bilgiler yalnızca EU üyesi devletler için geçerlidir Ürünlerin bertaraf edilmesi Bu cihaz, Atık Elektrikli ve Elektronik Eşyaların Kontrolü Yönetmeliğine uygundur. AEEE Yönetmeliğine uygundur. Tekerlekli çöp kutusu üzerindeki çapraz sembolü ürünün evsel atıklardan ayrı olarak toplanması ve bertaraf edilmesi gerektiğini belirtmektedir.

Page 29: Reach Bilgileri

Avrupa Birliği (EU) kimyasal maddeler yönetmeliği REACH (Kimyasal Maddelerin Kaydedilmesi, Değerlendirilmesi, Yetkilendirilmesi ve Kısıtlanması) 1 Temmuz 2007 tarihinde yürürlüğe girmiştir. Toshiba REACH gerekliliklerinin tamamını karşılayacak ve REACH yönetmeliğine göre aday listede bulunan ürünlerimizde kullanılan maddeler hakkında müşterilerimiz bilgilendirmeye çalışılacaktır. REACH aday listesine göre, ürünlerimizde ağırlığına göre % 0,1 konsantrasyondan fazla kullanılan maddeler hakkında bilgi için www.toshiba-tv.com internet sitesini ziyaret ediniz.

Page 30: Özellikler

ürün fişinizi kontrol edin. • Tam entegre dijital karasal yayın/kablolu yayın/uydu yayını alıcılı TV (DVB-T-T2/C/S-S2). Kurulum, işlevler ve kontrol ile ilgili ayrıntılı bilgiler için <http://www.toshiba-tv.com> adresinde • HDMI soketli diğer cihazları bağlayabilmek için yer alan tam kılavuza bakın. HDMI girişleri Bekleme Bildirileri •...

Page 31: Ana Tv Menüsünü Kullanma

Kanal değiştirmek için: Tuşun ortasına bastığınızda, tuşuna basın. Bir menü ögesini taşımak için, ögenin taşınmasını istediğiniz konumu seçmek üzere Sağ, ekranda kanal bilgisi sembolü görüntülenecektir. Sol, Yukarı ve Aşağı yön tuşlarına basınız, ardından Yukarı ve aşağı tuşlarına basarak kayıtlı kanallar OK tuşuna basınız.

Page 32: Pilleri Uzaktan Kumandanıza Yerleştiriniz

zamanlayıcıyı silmek için OK tuşuna basınız. Daha Pilleri Uzaktan Kumandanıza Yerleştiriniz sonra değişiklikleri kaydetmeniz gerekecektir. Bunu Pil bölmesini açığa çıkarmak için arka kapağı çıkarınız. İki yapmak için OK tuşuna basınız, Değişiklikleri Kaydet adet AAA pil yerleştiriniz. (+) ve (-) işaretlerinin uyduğun- seçeneğini vurgulayınız ve tekrar OK tuşuna basınız.

Page 33: Özellikler

DTS patentleri için, bakınız <http://patents.dts.com>. Ülke Kısıtlama DTS Licensing Limited lisansı altında üretilmiştir. DTS, Sembol, DTS ve Sembol birlikte, Virtual:X, ve DTS Bina dışında ve kamu

hizmetinde kullanım Bulgaristan Virtual:X logosu DTS Inc.'nin Amerika Birleşik Devletleri için genel yetkilendirme gereklidir ve/veya diğer ülkelerdeki tescilli ticari markaları...

[Page 34: Uzaktan Kumanda](#)

Uzaktan Kumanda Standby: Switches On / Off the TV Source: Shows available broadcast and content sources Numeric buttons: Switches the channel, enters a number or a letter in the text box on the screen. Language: Switches among sound modes (analogue TV), displays and changes audio/subtitle language and turns subtitles on or off (digital TV, where available) Menu: Displays TV menu...

[Page 35: Açma/Kapatma](#)

TV'nizin modeli ve ülke seçimine bağlı olarak bu noktada Açma/Kapatma Gizlilik Ayarları menüsü görüntülenebilir. Bu menüyü TV'yi Açmak için kullanarak gizlilik tercihlerinizi ayarlayabilirsiniz. Elektrik kablosunu, elektrik prizi gibi bir güç kaynağına Biz özelliği vurgulayınız ve etkinleştirmek veya bağlayınız (220-240V AC, 50 Hz). devre dışı...

[Page 36](#) sonraki ekranda Başlangıç Frekansı, Bitiş Frekansı • DiSEqC anahtarı: Birden çok uydu anteniniz ve bir ve Arama Adımı ayarlarını yapabilirsiniz. Bittiğinde, DiSEqC anahtarınız varsa bu anten tipini seçiniz. devam etmek için İleri seçeneğini vurgulayınız ve OK Ardından DiSEqC sürümünü ayarlayın ve devam tuşuna basınız.

[Page 37: Uydu Kanal Tablosu Özelliğini Kullanma](#)

edilirse, TV güncelleme yapmaya başlar. Güncelleme E-Kılavuz tamamlandığında değişikliklerle ilgili kullanıcıyı TV'nizin özellikleri hakkında açıklamaları E*Kılavuzda uyarmak amacıyla ekrana bir mesaj gelir. bulabilirsiniz. Manuel: İstendiği zaman manuel olarak da güncelleme E-Kılavuza erişim sağlamak için Ayarlar menüsüne yapılabilir. Menu tuşuna basınız. Ayarlar menüsünde giriniz, Kılavuzlar seçimini yapınız ve OK tuşuna Kurulum seçeneğini vurgulayınız ve OK tuşuna basınız.

[Page 38: Bağlanabilirlik](#)

İnternet Hız Testi Bağlanabilirlik İnternet Hız Testi seçimini yapınız ve OK tuşun Kablolü Bağlantı basınız. TV internet bağlantısının bant genişliğini Bir Kablolü Ağa Bağlanmak kontrol edecek ve işlem tamamlandığı zaman sonuçları görüntüleyecektir. • Aktif geniş bant bağlantısına sahip bir modem/ yönlendirici bulunması...

[Page 39: Ağ Tabanlı Bekleme Modu](#)

• Aktarımın en etkili olduğu konum, kullanım ortamına yapınız ve OK tuşun basınız. Bir değer girmek için göre değişir. yön tuşlarını veya rakam tuşları kullanınız. İşlem tamamlandığında ayarları kaydetmek için Kaydet • TV'nin Kablosuz özelliği 802.11 a,b,g & n tipi seçeneğini vurgulayınız ve OK tuşuna basınız.

[Page 40: Kablosuz Ekran](#)

Yazılım yapısı nedeniyle piyasada bulunan bazı menüyü açmak için OK tuşuna basınız. Bu menüyü cihazların performansı farklılık gösterebilir. Ağ Tabanlı kullanarak Bluetooth kablosuz teknolojinin kullandığı Bekleme Modu özelliğinin daha iyi performans cihazları bulabilir ve bağlayabilir ve bu cihazları göstermesi için lütfen cihazının en yeni aygıt yazılımı kullanmaya başlayabilirsiniz.

[Page 41: Bağlantı Sorunlarını Giderme](#)

bilgi mesajı görüntülenmeyecektir. Ses ve Görüntü Geçersiz Alan Adı Paylaşımı seçeneği devre dışı bırakılmadan önce PC'nizde yetkili bir kullanıcı adı/şifre ile oturum açmış bir cihaz eşleştirilmişse, Ses ve Görüntü Paylaşımı olduğunuzdan ve alan adınızın aktif olduğundan, seçeneği devre dışı bırakılmışsa bile paylaşabilecektir. PC'nizde kurulu olan DLNA sunucusu programınızdaki Not: Kablosuz cihazlar aynı...

[Page 42: İnternet Tarayıcısı](#)

TV'nizde kurulumu yapılmış olan uygulamaları menüde Hızlı Aramaya Ekle seçimini yapınız ve OK yönetmek için TV Menüsündeki Diğer Uygulamalar tuşuna yeniden basınız. Ad ve Adres, ziyaret etmekte seçeneğini kullanabilirsiniz. Kurulumu yapılmış olduğunuz siteye göre, otomatik olarak doldurulacaktır. olan bir uygulamayı Ana Sayfa menüsüne ekleyebilir, OK seçeneğini vurgulayınız ve eklemek için OK başlatabilir veya silebilirsiniz.

[Page 43: Smart Center](#)

basarak kırmızı tuş simgesi modu ile uygulamanın Medya paylaşım özelliği için Ses ve Video Paylaşım tam UI modu arasında geçiş yapabilir. Kırmızı düğme seçeneği (varsa) etkin olmalıdır. Uzaktan kumandanın ile geçiş özelliği bazı uygulamalar tarafından sağlanır Menu tuşuna basınız, Ayarlar>Sistem>Diğer ve bazı...

[Page 44: Alexa Kullanımına Hazır](#)

Özel kanal listesini düzenleme: Bu ayarı Akıllı Kumanda Özelliği kullanarak özel kanal listesini düzenleyebilirsiniz. TV'nize bağlandıktan sonra mobil cihazınızı TV'nizin Kanal listesi kaynağının seçimi: Uygulamada uzaktan kumandasıymış gibi kullanabilirsiniz. Akıllı kullanılacak kanal listesinin kaynağını seçebilirsiniz. kumandanın tüm özelliklerine erişmek için ekranın alt orta kısmındaki menüyü...

[Page 45](#) • Ayarlar>Sistem>Ses Yardımcısı menüsünde Dahili Ayarlar>Sistem>Ses Yardımcısı menüsü altın- Alexa seçeneğini kullanabilirsiniz daki Alexa Uyumlu seçeneğini kullanabilirsiniz. İlk ekranda bu özellik hakkında bilgilendirileceksiniz. • TV'nizde ilk kurulumu gerçekleştirin. Kurulum işlemi Başlat seçeneğini işaretleyin ve devam etmek için tamamlandıktan sonra kurulum sihirbazı görüntü- OK tuşuna basın.

[Page 46: Google Asistan](#)

Kurulum işlemi Komut İşlev Kurulum, Ayarlar> Sistem > Ses Yardımcısı Alexa, 'FN' ses düzeyini Ses düzeyini 10 kademe menüsündeki Google Asistan seçeneği kullanılarak yükselt yükseltir gerçekleştirilebilir Sihirbaz, kurulum işlemi sırasında Alexa, 'FN' ses düzeyini Ses düzeyini 10 kademe size yardımcı olacaktır. düşür düşürür •...

[Page 47: Temizlik Ve Bakım](#)

kullanmayacaksınız TV'yi kapatınız ve cihazın fişini Temizlik ve Bakım • Temizlik ve bakıma başlamadan önce her zaman prizden çekin. cihazın fişini çekiniz. • Cihazın sesini, kontrastını ve parlaklığını düşük • "Temizlik ve Bakım sırasında Dikkat Edilmesi seviyede kullanın; aksi halde harcanan enerji artar. Gereken Güvenlik Bilgileri"...

[Page 48: Sorun Giderme](#)

Sorun Giderme Cihazınızda normal olmayan bir durum tespit ettiğinizde, tablodaki açıklamalar doğrultusunda sorunu çözmeye çalışabilirsiniz. Cihazınız hala normal çalışmasına devam etmiyorsa İletişim Merkezi ile irtibata geçiniz. Yetkili servis listesine ve iletişim bilgilerine web sitesinden ulaşabilirsiniz. SORUN SEBEP YAPILACAKLAR Güç kablosunun fişi pri- Fişin prize takıldığından emin olunuz.

[Page 49](#) En yeni ve trendleri belirleyen TV teknolojileri ile ilgili öğrenmek istediğiniz her şeyi web sitemizde bulabilirsiniz www.toshiba-tv.com ÜRETİCİ FİRMA: TV kullanıcı kılavuzunuzu çevrimiçi olarak veya Vestel Elektronik Sanayi ve Ticaret A.Ş. indirip inceleyebilirsiniz Organize Sanayi Bölgesi 45030 Manisa - Türkiye...

[Page 50](#) VESA DUVARA MONTAJ TEDBİRLERİ Delik Düzeni Ölçüler (mm) Vida Boyutları min. (mm) Uzunluk (X) maks. (mm) Diş Ölçüsü (Y) Türkçe - 26 -...