

TOSHIBA

Toshiba RAS-B052KVG-UA Owner's Manual


1
2
3
4
5
6
7
8
9
10
11
12

--

•

Bookmarks

Available languages

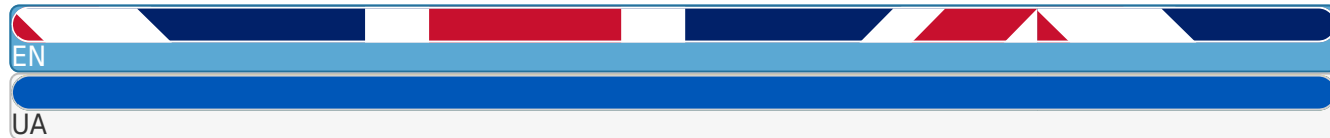

Quick Links

[Download this manual](#)



OWNER'S MANUAL

AIR CONDITIONER (SPLIT TYPE)

For general public use

Indoor unit

RAS-B05, 07, 10, 13, 16J2KVG-UA

RAS-B05, 07, 10, 13, 16TKVG-UA

RAS-18J2KVG-UA

RAS-18TKVG-UA

TOSHIBA



Outdoor unit

RAS-05, 07, 10, 13, 16, 18J2AVG-UA

RAS-05, 07, 10, 13, 16, 18TAVG-UA

1122950210_EN_UA.indd 1

R32 or R410A

TOSHIBA

1122950210

12/14/18 11:07 AM

12/14/18 11:07 AM

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba RAS-B052KVG-UA

[Air Conditioner Toshiba RAS-B05J2KVG-UA Installation Manual](#)

(36 pages)

[Air Conditioner Toshiba RAS-18J2KVG-TR Installation Manual](#)

R32 inverter (34 pages)

[Air Conditioner Toshiba Seiya RAS-10TAVG-UA Owner's Manual](#)

(14 pages)

[Air Conditioner Toshiba RAS-16J2AVSG-E Installation Manual](#)

(20 pages)

[Air Conditioner Toshiba RAS-B10J2KVSG-E Owner's Manual](#)

(8 pages)

[Air Conditioner Toshiba RAS-B05J2KVG-E Service Manual](#)

(138 pages)

[Air Conditioner Toshiba RAS-18J2KVG-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-18J2AVG-E Owner's Manual](#)

R32 or r410a inverter, air conditioner split type, for general public use, indoor/outdoor units (6 pages)

[Air Conditioner Toshiba RAS-B05E2KVG-E Service Manual](#)

(141 pages)

[Air Conditioner Toshiba RAS-18E2KVG-E Installation Manual](#)

(21 pages)

[Air Conditioner Toshiba RAS-24E2KVG-E Owner's Manual](#)

Inverter r32 or r410a, for general public use, indoor/outdoor unit (7 pages)

[Air Conditioner Toshiba RAS-16BAVG-E Installation Manual](#)

(17 pages)

[Air Conditioner Toshiba RAS-B07G3KVSG-E Service Manual](#)

Indoor/outdoor unit, r32 or r410a inverter (146 pages)

[Air Conditioner Toshiba RAS-24J2AVSG-E1 Owner's Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-B07 Installation Manual](#)

Air conditioner (split type) (20 pages)

[Air Conditioner Toshiba RAS-B16J2KVSG-E Owner's Manual](#)

(8 pages)

Summary of Contents for Toshiba RAS-B052KVG-UA

[Page 1](#) R32 or R410A OWNER'S MANUAL ENGLISH УКРАЇНСЬКА AIR CONDITIONER (SPLIT TYPE) For general public use Indoor unit RAS-B05, 07, 10, 13, 16J2KVG-UA RAS-B05, 07, 10, 13, 16TKVG-UA RAS-18J2KVG-UA RAS-18TKVG-UA Outdoor unit RAS-05, 07, 10, 13, 16, 18J2AVG-UA RAS-05, 07, 10, 13, 16, 18TAVG-UA 1122950210 1122950210_EN-UA.indd 1 1122950210_EN-UA.indd 1...

[Page 2](#) PRECAUTIONS FOR SAFETY Read the precautions in this manual This appliance is filled with carefully before operating the unit. R32. ● Keep this manual where the operator can

easily find it. ● Read the precautions in this manual carefully before operating the unit. ●...

[Page 3](#) PRECAUTIONS FOR SAFETY ● Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer. ● The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).

[Page 4](#) COOLING / HEATING / FAN ONLY INDOOR UNIT DISPLAY OPERATION 1 ECO (White) 1. Press : Select Cool , Heat , or Fan only 2 Wi-Fi access (White) * 3 Hi-Power (White) 2. Press : Set the desired temperature. 4 Timer (White) Cooling and Heating: Min.

[Page 5](#) DISPLAY LAMP BRIGHTNESS ADJUSTMENT MAINTENANCE To decrease the display lamp brightness or turn it off. Firstly, turn off the circuit breaker. 1. Press and hold for 3 seconds until brightness level (Indoor Unit and Remote Control) is shown on remote control LCD then release the button. ●...

[Page 6](#) ПРАВИЛА ТЕХНІКИ БЕЗПЕКИ Перш ніж користуватися У пристрої використовується пристроєм, уважно прочитайте холодоагент R32. застереження в цьому посібнику. ● Тримайте цей посібник у місці, де його зможе легко знайти користувач пристрою. ● Перш ніж користуватися пристроєм, уважно прочитайте застереження в цьому...

[Page 7](#) ПРАВИЛА ТЕХНІКИ БЕЗПЕКИ ● Цей пристрій не призначений для використання людьми (зокрема дітьми) з обмеженими фізичними, сенсорними чи психічними можливостями, а також людьми без достатнього досвіду та знань, окрім випадків, коли такі люди під час користування пристроєм перебувають під наглядом або виконують вказівки...

[Page 8](#) ОХОЛОДЖЕННЯ / ОБІГРІВАННЯ / ІНДИКАЦІЯ НА ВНУТРІШНЬОМУ БЛОЦІ ТІЛЬКИ ВЕНТИЛЯЦІЯ 1 ECO (білий) 2 Wi-Fi доступ (білий) 1. Натисніть : Виберіть охолодження , Обігрівання * 3 Hi-Power (білий) або Тільки вентиляція 4 Timer (білий) 5 Operation (білий) 2. Натисніть : Налаштуйте температуру. Охолодження...

[Page 9](#) НАЛАШТУВАННЯ ЯСКРАВОСТІ ОБСЛУГОВУВАННЯ ІНДИКАТОРІВ Спочатку вимкніть автомат. Зменшення яскравості або вимкнення індикаторів. Внутрішній блок і пульт ДК 1. Натисніть кнопку і втримуйте її 3 секунди, поки на ● За потреби протирайте внутрішній блок і пульт ДК вологою LCD-екрані пульта ДК не відобразиться рівень яскравості (ганчіркою.

[Page 10](#) 1122950210_EN_UA.indd 10 1122950210_EN_UA.indd 10 12/14/18 11:08 AM 12/14/18 11:08 AM...

[Page 11](#) 1122950210_EN_UA.indd 11 1122950210_EN_UA.indd 11 12/14/18 11:08 AM 12/14/18 11:08 AM...

[Page 12](#) 1122950210 1122950210_EN_UA.indd 12 1122950210_EN_UA.indd 12 12/14/18 11:08 AM 12/14/18 11:08 AM...

This manual is also suitable for:

Ras-b072kvg-uaRas-b102kvg-uaRas-b132kvg-uaRas-b16j2kvg-uaRas-b0507tkvg-ua ... [Show all](#)