



Whirlpool XHP1550WL Installation Instructions Manual

Installation instructions

1
2
3
4
5
6
7
8
9
10
11
12


--

•

Bookmarks


--

Available languages

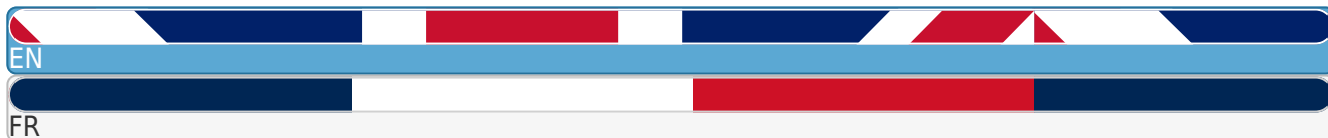

Quick Links

[Download this manual](#)

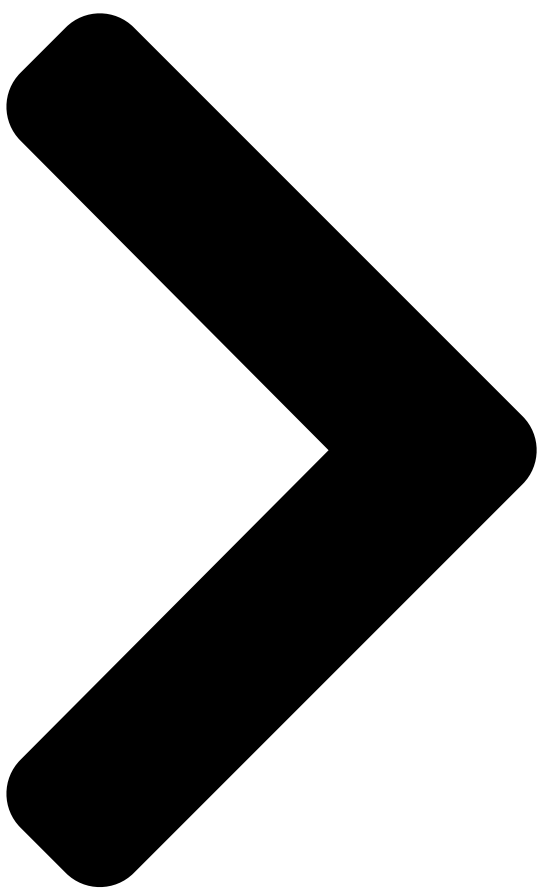

Whirlpool®

Appliances
division

Whisper

15.5" (39.4 cm) front control

15,5"

dishwasher

(39,4 cm)

for

Table of Contents/Table des matières 2/7



|||||

W10198562A

W10205335A SP

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool XHP1550WL

[Racks & Stands Whirlpool XHP1550WR Installation Instructions Manual](#)

15.5" pedestal (16 pages)

[Racks & Stands Whirlpool XHP1550WR Parts List](#)

Parts diagram (1 page)

[Racks & Stands Whirlpool GLADIATOR GOLF CADDY Assembly Instructions Manual](#)

(8 pages)

[Racks & Stands Whirlpool LAB0050PQ Installation Instructions Manual](#)

Pedestal (6 pages)

[Racks & Stands Whirlpool MK1157XJ Installation Instructions](#)

Built-in trim kit (4 pages)

Summary of Contents for Whirlpool XHP1550WL

Page 1 i, f l. ol ® Appliances d_® sport 15.5" (39.4 cm Washer/Dryer 15,5" (39,4 cm) pour laveusels_cheuse iiiiii Table of Contents/Table des mati_res2/7 W10198562A W10205335A SP...

[Page 2: Pedestal Safety](#)

TABLE OF CONTENTS PEDESTAL SAFETYINSTALLATION INSTRUCTIONSINSTALLATION REQUIREMENTSInstalling the Pedestal Tools and PartsWARRANTY Location Requirements Before Installing Your PedestalPEDESTAL SAFETY Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance.

Page 3 iii!!!!E_,, ii!!!! i c iiiii: i, jji!!!!, ii! Siiii: ;i:!! i!ii iii:1 j !! i ii: ' ?"iO ii; iii _ _' iii: _ :!!!! _ :!!i, ii! j! Siiii: j i:!!!! IMPORTANT: If your washer and dryer are already installed, they Excessive Weight Hazard must be uninstalled. Use two or more people to move and uninstall dryer. If you need to uninstatl your washer or dryer, see your Installation Failure to do so can result in back or other injury.

[Page 4: Installation](#)

Lay washer or dryer on its back. Washer or Dryer is in its Packaging NOTE: When laying the washer on its back, hold the bottom cap down on the floor. Do not remove the plastic film, corner posts or top cap. These protect the floor and washer back. When laying the dryer on its back, the floor and dryer back Excessive Weight Hazard are protected by pieces of the carton.

Page 5 If your washer or dryer has feet installed, remove them. Do 13. When the washer or dryer is level, not install the feet that came with a new washer or dryer. use a 9A6"open-end wrench to securely tighten all 4 locknuts Partially install 2 of the #12 x %"...

Page 6 Service This pedestal must be installed only with the appropriate Whirlpool ®or Maytag® front-load washer or dryer. This pedestal must be operated according to the instructions provided with your Whirlpool or Maytag front-load washer or dryer's Owner's manual or Use and Care Guide.

[Page 7: Exigences D'installation](#)

TABLE DES MATIERES SIECUR_T# DU PI :DESTALINSTRUCTIONS D'INSTALLATION EXIGENCES D'INSTALLATIONinstallation du piedestatGARANTIE Outillage et pi_cesExigences d'emplacementAvant l'instattation du piedestat SI CURITI DU PIÉDESTAL Votre securite et celle des autres est tres importante. Nous donnons de nombreux

messages de sécurité importants dans ce manuel et sur votre appareil ménager.

Page 8 Désinstallation de la sècheuse électrique 1. Débrancher le cordon d'alimentation électrique. IMPORTANT : Si la sècheuse et la laveuse ont déjà été installées, elles doivent être désinstallées. Si l'on a besoin de désinstaller la laveuse ou la sècheuse, voir les Instructions d'installation fournies avec le modèle pour les outils nécessaires. Désinstallation de la laveuse Risque de choc électrique Risque du poids excessif Ne pas connecter...

Page 9 Désinstallation de la sècheuse à gaz La laveuse ou la sècheuse est dans son emballage Risque du poids excessif Risque du poids excessif Utiliser deux ou plus de personnes pour déplacer/d'installer la sècheuse. Utiliser deux ou plus de personnes pour déplacer la laveuse ou la sècheuse.

Page 10 INSTRUCTIONS D'INSTALLATION 4. Si des pieds sont installés sur la laveuse ou la sècheuse, les enlever. Ne pas installer les pieds livrés avec une nouvelle laveuse ou une nouvelle sècheuse. Suivre ces instructions pour installer le piedestal sur une laveuse ou une sècheuse.

Page 11 12. Mettre la laveuse ou la sècheuse d'aplomb de façon latérale puis de l'avant vers l'arrière. La laveuse ou sècheuse ne doit pas bouger d'avant en arrière, latéralement ou transversalement lorsqu'on appuie sur les bords supérieurs. NOTE : S'assurer que les 4 pieds de piedestal sont bien en contact avec le plancher.