



Whirlpool EV170NYLS00 Use & Care Manual

Upright freezers

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24



•


-

Troubleshooting

•

Bookmarks

Available languages

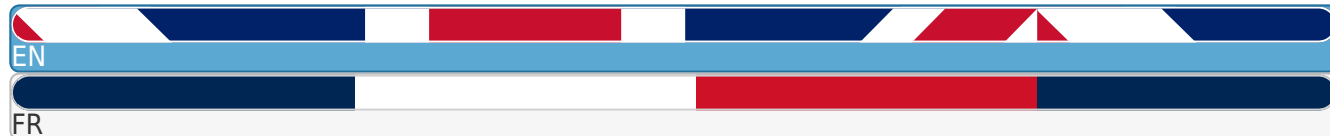

Quick Links

[Download this manual](#)




UPRIGHT FREEZERS

For questions
about
features
operation/performance
parts accessories or service, call: 1-800-259-1801.
In Canada,
call for assistance
1-800-461-5681,
for installation
and service,
call: 1-800-807-6777
or visit our website
at...
www.whirlpool.com
or www.whirlpool.com/canada

CONGELATEURS
VERTICAUX

Au Canada, pour assistance, composer le 1-800-461-5681, pour

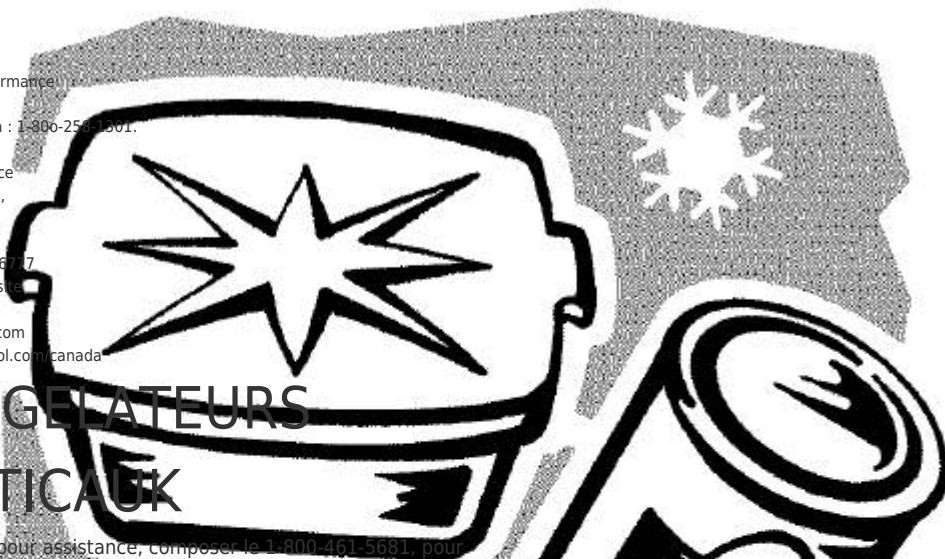

installation ou service le 1-800-807-6777

ou visitez notre site web h

www.whirlpool.com/ca_nada

Table of Contents/Table
des matiCres

2

2-60270-001/2218036



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool EV170NYLS00

[Freezer Whirlpool EV170NX Use And Care Manual](#)

Whirlpool upright freezer use & care guide (16 pages)

[Freezer Whirlpool W10326801A Use And Care Manual](#)

Upright freezer (28 pages)

[Freezer Whirlpool EVL201NXRQ04 Use & Care Manual](#)

(32 pages)

[Freezer Whirlpool EV160NZTQ Use & Care Manual](#)

15.8 cu. ft. upright freezer with frost free defrost (32 pages)

[Freezer Whirlpool EV120NXR Use And Care Manual](#)

Whirlpool ev120nxr: user guide (32 pages)

[Freezer Whirlpool EV110CX Use And Care Manual](#)

Whirlpool upright freezer use & care guide (12 pages)

[Freezer Whirlpool EV150E Use And Care Manual](#)

Estate series (12 pages)

[Freezer Whirlpool EV150FXS Use And Care Manual](#)

Whirlpool upright freezer models use & care guide (8 pages)

[Freezer Whirlpool EV150F Use And Care Manual](#)

Whirlpool upright freezer use and care guide ev150f (13 pages)

[Freezer Whirlpool EV150CXX Use & Care Manual](#)

Whirlpool upright freezer use & care guide ev150cxx (8 pages)

[Freezer Whirlpool EV161nzzr00 Parts Manual](#)

Whirlpool vertical freezer parts list (8 pages)

[Freezer Whirlpool EV161NZZR04 Parts Manual](#)

Whirlpool vertical freezer parts list (8 pages)

[Freezer WHIRLPOOL EV181FZTQ01 Use & Care Manual](#)

(32 pages)

[Freezer Whirlpool EV190F Use And Care Manual](#)

Whirlpool upright freezer use and care guide ev190f (12 pages)

[Freezer Whirlpool EV190N Use & Care Manual](#)

No-frost upright freezer (12 pages)

[Freezer Whirlpool EV150FXR User Manual](#)

Upright (13 pages)

Summary of Contents for Whirlpool EV170NYLS00

[Page 1](#) 1-800-461-5681, for installation and service, call: 1-800-807-6777 or visit our website at... www.whirlpool.com or www.whirlpool.com/canada CONGELATEURS VERTICAUX Au Canada, pour assistance, composer le 1-800-461-5681, pour installation ou service le 1-800-807-6777 ou visitez notre site web h www.whirlpool.com/canada Table of Contents/Table des matiCres

[Page 2: Table Of Contents](#)

TABLE OF CONTENTS TABLE DES MATIÈRES FREEZER SAFETYSI!:CURITg: DU CONGI!:LATEURProper Disposal of Your Old Freezer or Refrigerator3 Mise au rebut appropri_e de votre vieux conglateur ou rCfrigCrateurFREEZER INSTALLATIONINSTALLATION DU CONGLeLATEURUnpackingLocation Requirements

.....

[Page 3: Freezer Safety](#)

FREEZER SAFETY Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER"...

[Page 4: Freezer Installation](#)

FREEZER INSTALLATION • ! Explosion Hazard Keep flammable materials and vapors, such as gasoline, away from freezer. Removing packaging materials Failure to do so can result in death, explosion, or fire. • Remove tape and glue residue from surfaces before turning on the freezer. Rub a small amount of liquid dish soap over the adhesive with your fingers.

[Page 5: Electrical Requirements](#)

Locate a 1/2in. to 1 1/4in. (12.7 mm to 3.18 cm) vertical COLD water pipe near the freezer. NOTE: Horizontal pipe will work, but drill on the top side of the pipe, not the bottom. This will help keep water away from the drill and normal sediment from collecting in the valve.

[Page 6: Removing The Handle](#)

FREEZER USE **TOOLS NEEDED:** 1/4in., 1/2in., and 5/8in. hex-head socket wrenches, a flat-head screwdriver, and Phillips screwdriver. 1. Apply firm pressure with your hand on the face of the trim. Slide the top trim up and bottom trim down away from the handle.

[Page 7: Key Eject Lock](#)

Adjusting the control • Turn control to a higher number for colder temperatures. • Turn control to a lower number for less cold temperatures. To turn the ice maker on/off: NOTE: Do not force the wire shut-off arm up or down. Fast Freeze (on some models) •...

[Page 8: Freezer Features](#)

FREEZER FEATURES **FREEZER CARE** This manual cover several different models. The freezer you have purchased may have some or all of the items listed. The locations of the features may not match your model. Your freezer is equipped with refrigerated interior shelves. Packages in direct contact with the shelves will have the best refrigeration.

[Page 9: Base Grille](#)

NOTE: Check the drain pan frequently to avoid water overflow. Have a second pan handy for easier emptying. To remove and replace the base grille: 1. Remove the base grille by opening the freezer door and pull on both sides of the base grille. 2.

[Page 10: Power Interruptions](#)

The motor seems to run too much If the electricity in your house goes off, call the power company • Is there excessive frost or a package preventing the door and ask how long it will be off. or lid from closing? Defrost and clean the freezer, or move the package so the door closes properly.

[Page 11: Assistance or Service](#)

See the "Using the Control" section. Pages. The door or lid will not close completely For further assistance If you need further assistance, you can write to Whirlpool • Are food packages blocking the door or lid? Rearrange Corporation with any questions or concerns at:...

[Page 12: Warranty](#)

3. Pickup and delivery. Your freezer is designed to be repaired in the home. 4. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, or use of products not approved by Whirlpool Corporation. 5. Food loss coverage for freezers used in commercial applications.

[Page 13: Sécurité: Du Congélateur](#)

SECURITE DU CONGELATEUR Votre sécurité et celle des autres est très importante. Nous donnons de nombreux messages de sécurité importants dans ce manuel et sur votre appareil

menager. Assurez-vous de toujours lire tous les messages de sécurité et de vous y conformer. Ce symbole d'alerte de sécurité vous signale les dangers potentiels de décès et de blessures graves à vous et à...

[Page 14: Installation Du Congelateur](#)

INSTALLATION DU CONGELATEUR Risque du poids excessif Risque d'explosion Utiliser deux ou plus de personnes pour déplacer et installer le congélateur. Garder les matériaux et les vapeurs inflammables, telle que l'essence, loin du congélateur. Le non-respect de cette instruction peut causer une blessure...

[Page 15: Précautions Électriques](#)

Arrivée d'eau froide Connecter la machine et les glacons et une canalisation d'eau froide avec limitations de pression d'eau de 30 à 120 lb-po 2. Si vous avez des questions au sujet de la pression d'eau, contacter la compagnie de distribution d'eau. Raccordement et...

[Page 16: Pour Enlever La Poignée](#)

2. OUVRIR le robinet d'arrêt. Inspecter pour rechercher les 4. Ajuster les 2 pieds avant de sorte que le congélateur ne fuites. Serrer tous les raccords (y compris les boues pas, raccords de la valve d'entrée d'eau) ou les écrous 5.

[Page 17: Utilisation De La Commande](#)

Reglage de la commande Tourner la commande de température du congélateur A 4. Ce réglage est destiné à maintenir la température ou près de -17,8 °C (0° F) dans des conditions normales d'utilisation. Laisser le congélateur refroidir pendant 6 à 8 heures avant de le remplir d'aliments congelés.

[Page 18: Caractéristiques Du Congélateur](#)

Augmentation du taux de production de glacons : La machine # glacons devrait produire environ de 7 à 9 lots de glacons par période de 24 heures. Si les glacons ne sont pas fabriqués assez rapidement, tourner la commande température vers un chiffre plus élevé (plus froid) en étapes de un Le panier coulissant procure un espace de rangement séparé pour demi-numéro.

[Page 19: Grille De La Base](#)

Un nettoyage complet doit être fait au moins une fois par année. 1. Débrancher le congélateur ou la source d'alimentation électrique. 2. Retirer tous les aliments congelés. Envelopper les aliments congelés dans plusieurs épaisseurs de journaux et recouvrir d'une couverture. Les aliments demeureront congelés pendant plusieurs heures.

[Page 20: Remplacement De L'ampoule D'éclairage](#)

Pour modèles sans système d'écoulement Enlever l'eau en utilisant une éponge ou une poire et jus pour enlever l'excès d'eau de la base du congélateur et rincer l'eau dans un grand plat. En cas de panne de courant électrique dans votre maison, téléphoner et...

[Page 21](#) Les ampoules n'éclairent pas La machine à glacons ne produit pas de glacons ou pas assez (sur certains modèles) • Le cordon du courant électrique est-il débranché ? La machine à glacons vient-elle juste d'être installée ? Brancher sur une prise à trois broches reliée à terre. Attendre 72 heures pour le commencement de la production •...

[Page 22: Assistance ou Service](#)

Placer les clayettes et le panier à leur position de réparation et distributeurs de pièces de rechange locaux. correcte. Les techniciens de service désignés par Whirlpool sont • Les joints sont-ils sales ou collants ? Nettoyer les joints formes pour remplir la garantie des produits et fournir un d'après les directives de la section "Nettoyage".

[Page 23: Garantie](#)

Si vous avez besoin de service, voir d'abord la section "Dépannage" de ce livret. Après avoir vérifié "Dépannage", une aide supplémentaire peut être obtenue en vérifiant la section "Assistance ou Service" ou en téléphonant au Centre d'interaction avec la clientèle Whirlpool, au 1-800-253-1301 (sans frais d'interurbain) de partout aux États-Unis.

[Page 24](#) 2-60270-001/2216036 4/01 © 2001 Whirlpool Corporation. All rights reserved. ®

Registered Trademark of Whirlpool, U.S.A., Inglis Limited Licensee in Canada
Printed in U.S.A. Tous droits réservés. ® Marque déposée/TM Marque de commerce de
Whirlpool, U.S.A., Emploi licencié par Inglis Limitée au Canada...