



Whirlpool DU900PCDQ5 Use And Care Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72

--	--

•


-

Troubleshooting

•

Bookmarks

Available languages

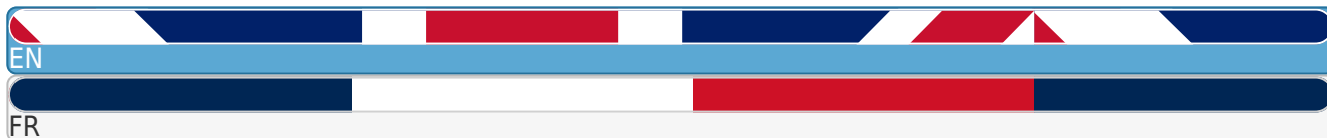


Quick Links

- [1 Table of Contents](#)
- [2 Parts and Features](#)
- [3 Dishwasher](#)

[4 Dishwashing Problems](#)

[5 Troubleshooting](#)

[Download this manual](#)

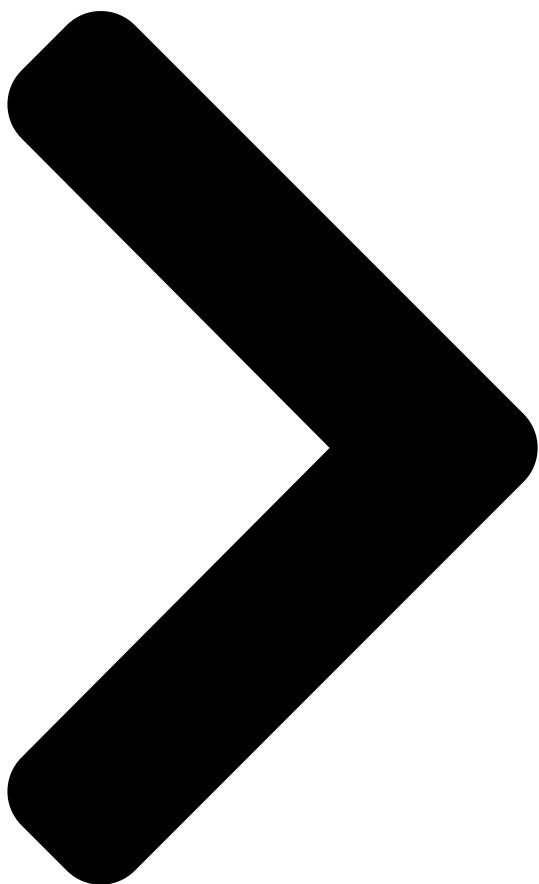

Appliances

[A Note to You](#)

2

[Dishwasher](#)

[Safety](#)

3

[Parts and Features](#)

4

Starting Your Dishwasher

.... 6

Loading Your Dishwasher

.... 8

Using the Dispensers

..... 13

[Setting the Controls](#)

..... 16



Use And Care


Call Us Today

Selecting a wash cycle	16
Canceling a cycle	16
Selecting cycle options	17
Changing a cycle setting	17
Changing an option setting	17
Adding an item during a cycle	18
Using delay wash	18
The clean signal light	18
Washing Special Items	19
Caring for Your Dishwasher	20
Saving Energy	23
Solving Common Dishwashing Problems	24
Troubleshooting	27
Requesting Assistance or Service	28
Index	30
Warranty	34
3376832	
DmSHWASHER MODEL SERIES 900	



Use And Care

G U I D E

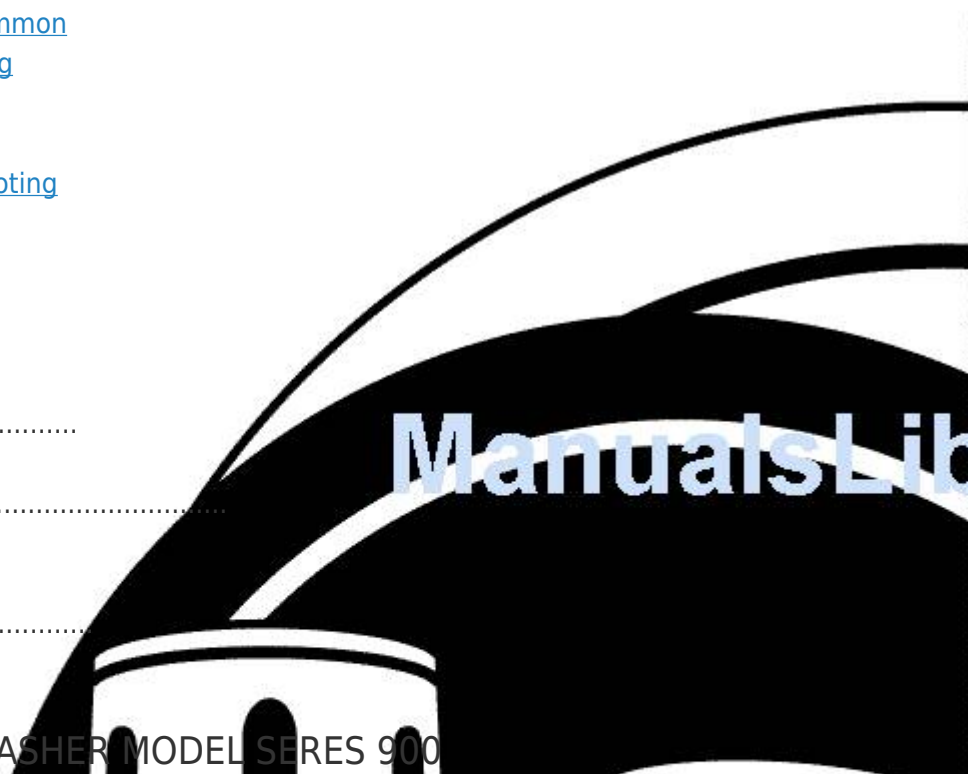

A Note to Dishwashers
Parts and
Starting Your
Loading Your
Using the
Selecting a
Canceling a
Selecting a
Changing a
Changing a
setting

ManualsLib.com

[Next Page](#)

- 1
- 2
- 3
- 4
- 5

Chapters

English 1

Français 35

Related Manuals for Whirlpool DU900PCDQ5

[Dishwasher Whirlpool DU900PCDB5 Parts List](#)

Undercounter dishwasher (9 pages)

[Dishwasher Whirlpool 900 Series Use And Care Manual](#)

Whirlpool dishwasher use & care guide 900 (72 pages)

[Dishwasher Whirlpool 900 SERIES Use & Care Manual](#)

Dishwasher (31 pages)

[Dishwasher Whirlpool 915 Series Use And Care Manual](#)

Whirlpool dishwasher use & care guide 900, 915 (29 pages)

[Dishwasher Whirlpool 900 Series Use And Care Manual](#)

Whirlpool 900 series dishwashers use & care guide (25 pages)

[Trash Compactor Whirlpool 800 Series Use & Care Manual](#)

(16 pages)

[Trash Compactor WHIRLPOOL 800 SERIES Use & Care Manual](#)

(16 pages)

[Trash Compactor Whirlpool 800 Series Use & Care Manual](#)

(16 pages)

[Dishwasher Whirlpool DU900PCDB0 Parts List](#)

Undercounter dishwasher (8 pages)

[Dishwasher Whirlpool DU9000XR Series Use & Care Manual](#)

Undercounter dishwasher (16 pages)

[Dishwasher Whirlpool DU900PCDB4 Parts Manual](#)

Undercounter dishwasher (9 pages)

[Dishwasher Whirlpool DU900PCDB6 Parts List](#)

Undercounter dishwasher (9 pages)

[Dishwasher Whirlpool DU900PCDQ3 Parts Manual](#)

Undercounter dishwasher (9 pages)

[Dishwasher Whirlpool DU900 Use And Care Manual](#)

Undercounter dishwasher (40 pages)

[Dishwasher Whirlpool DU920PWKT0 Use & Care Manual](#)

Undercounter (40 pages)

[Dishwasher Whirlpool FSP DU9000XR-4 Parts List](#)

Undercounter dishwasher (16 pages)

Summary of Contents for Whirlpool DU900PCDQ5

[Page 1: Table Of Contents](#)

Liiances A Note to YouDishwasher SafetyParts and FeaturesStarting Your Dishwasher
..6 Loading Your Dishwasher ..8 Using the Dispensers ..13 Setting the Controls 16 Selecting a
wash cycle ..16 Canceling a cycle

[Page 2: A Note To You](#)

WHIRLPOOL* appmianC÷o Because your life is getting busier and more complicated, WHIRLPOOL dishwashers are easy to use, save time, and help you manage your home better. To ensure you enjoy years of trouble-free operation, we developed this Use and Care Guide. It contains valuable information about how to operate and maintain your appliance properly and safely.

[Page 3: Dishwasher Safety](#)

Dishwasher Safety Your safety safety others is very important° We have provided many important safety messages in this manual and on your appliance, Always read and obey all safety messages, This is the safety alert symbol. This symbol alerts you to hazards that can kill or hurt you and others. All safety messages will be preceded by the safety alert symbol and the word "DANGER"...

[Page 4: Parts And Features](#)

Parts and Features Your dishwasher is illustrated below with the parts and features called out. To help you find information on specific parts or features quickly, page references are included. Third level wash (p. 11) Upper spray arm (p. 11) tower (p.

[Page 5](#) Control panels Cycle pads Option pads Cycle control knob 900 Model Series Cycle pads Option pads Signal lights Cycle control knob 915 Model Series...

[Page 6](#) Start dishwasher Your This section tells you how to start or stop your dishwasher. Refer to it for quick reference. Electrical Shock Hazard Tip Over Hazard Do not use dishwasher until Electrically ground dishwasher. completely installed. Connect ground wire to green ground connector in terminal box.

[Page 7: Setting The Controls](#)

Starting a wash cycle 6. Run hot water at the sink nearest the dish 1. Load the dishwasher. See the "Loading Your Dishwasher" section. washer until water is hot. Turn water off. 2. Spin the spray arms. They should 7. Press a Cycle pad. If desired, press one turn freely.

[Page 8](#) Load" Your dishwasher This section tells how to properly load your dishwasher for best washing and rinsing results. Preparing load Your dishwasher Loading quiet operation To save water and energy, do not rinse dishes before putting them into the Secure lightweight load items in the racks. dishwasher.

[Page 9](#) Loading silverware basket Load the silverware basket while it is in the door or take the basket out for loading on a counter or table. Mix items in each section of the basket with some pointing up and some down to avoid nesting.

[Page 10](#) Loading the bottom rack Load items with cooked-on or dried-on food in the bottom rack, with soiled surfaces facing inward to the spray. Mixed load Load plates, soup bowls, etc., between prongs and facing inward to the spray. Make sure pot handles and other items do not stop rotation of the spray arms.

[Page 11](#) Loading the top rack Load the top rack with cups, glasses, and other small items. Do not cover the third level wash when loading the top rack. Cup and Cup and glass load glass load Load so open ends face down for cleaning and draining.

[Page 12](#) Adjustable 3=position top rack (on some models) You can raise or lower the rack to fit tall items in either the top or bottom rack. The high and low positions are marked on the adjuster on the side facing the center of the dishwasher.

[Page 13](#) dispensers For best washing results, review the information below. It is important to use detergents and rinse agents properly. Using detergent dispenser much detergent to use Use automatic dishwashing detergent only. Other detergents are too mild and The amount of detergent to use depends much too sudsy.

[Page 14](#) Using rinse agent dispenser Keep the rinse agent dispenser filled with a liquid rinse agent. A rinse agent greatly improves dish drying by helping water flow off them during the last

rinse. A rinse agent also keeps water from forming droplets and drying as spots or streaks.

[Page 15: Selecting A Wash Cycle](#)

Setti Contro|s Operating your dishwasher's controls properly helps you obtain the best possible washing results. This section tells you how to select wash cycles and options. Selecting a wash cycle Press a Cycle pad. (Some cycles share the same pad.) Turn the Cycle Control Knob to the desired cycle.

[Page 16: Canceling A Cycle](#)

A "f" shows what each cycle includes CYCLE TIME CYCLE WASH IRINSE iWASH RINSE DRY (Minutes) LIGHT Single wash for pre-rinsed or lightly soiled loads. 60 t Select Hi-Temp Wash to heat water in the main wash. The water heats to 140°F (60°C) in the final rinse.

[Page 17: Changing A Cycle Setting](#)

Selecting cycle eptions Air Dry If desired, press one or more Option pad(s). You can press an Option pad after the When Air Dry is selected, the air in the dishwasher starts as long as the cycle has dishwasher is not heated during not passed the point that the option is used.

[Page 18: Adding An Item During A Cycle](#)

a cycle Adding an item during You can add an additional item to the 3. Close the door, but do not latch it. Wait 30 seconds for the air in the dishwasher dishwasher anytime before the Cycle Control Knob reaches Light. Items added after the to warm up.

[Page 19: Washing Special Items](#)

ashing Special items If you have any doubts about washing a particular piece of tableware, check with the manufacturer to see if it is dishwasher safe. MATERIAL DISHWASHER SAFE? EXCEPTIONS/SPECIAL INFORMATION Aluminum High water temperature and detergents can pit finish of anodized aluminum. Bottles Wash bottles and cans by hand.

[Page 20: Dishwasher](#)

for Your Dishwasher Your new dishwasher is designed to give you many years of dependable service. There are a few things you can do to maintain your dishwasher properly. This section tells you how to clean and care for your dishwasher. Refer to the "Solving Common Dishwashing Problems" section for special cleaning problems.

[Page 21](#) Stering Vour dishwasher Moving or winterizing your dishwasher Protect your dishwasher and home against water damage due to freezing water lines. If your dishwasher is left in a seasonal dwell- ing or could be exposed to near freezing temperatures, have a qualified person do the following: 1.

[Page 22](#) NOTE: I f yourdishwasher is connected t o a garbage disposal, donotrunwaterinto thesinkafterwinterizing. Thiscouldcause waterto refill t hedrainhoseonyour dishwasher. Reconnecting your dishwasher 1, Remove the 4 screws on the lower access panel and remove lower access panel. 2, Turn on the water supply to dishwasher. 3, Turn on power supply to dishwasher.

[Page 23: Saving Energy](#)

Saving Energy Saving energy is important and helps you save money. This section gives you tips on the best ways to save energy with your dishwasher. Leading tips Wash full loads. Running a half-filled Do not prerinse normally soiled dishes. dishwasher uses the same amount of Select the correct cycle for the load and electricity and hot water as a fully loaded...

[Page 24: Solving Common](#)

Solving Common Dishwashing Problems Following is a convenient checklist for handling minor performance problems. Go over this list before calling for service. If you are unable to solve your dishwasher's problem, turn to the "Troubleshooting" section for service information. Solutien chart PROBLEM CAUSE...

[Page 25](#) PROBLEM CAUSE SOLUTION Spotting Useofincorrect Use recommended dishwasher detergents andfilming detergents only. (continued) Incorrect amount Follow recommendations for amount. of detergent Heavy soil and/or hard water generally require extra detergent. Use of

ineffective Use fresh detergent. Store detergent tightly detergents closed in a cool, dry place.

[Page 26](#) PROBLEM CAUSE SOLUTION Whitespotson Seasoning r emoved Reseason c ookware a fterdishwasher cookware with bydishwasher washing. non-stick finish detergents Brown stains High iron content Remove by washing dishes (after food soil on dishes and has been removed) with 1 teaspoon to in water supply dishwasher 1 tablespoon of citric acid crystals added to...

[Page 27: Using The Dispensers](#)

Troubleshooting Before calling for assistance please check the chart below for problems you can fix. It could save you the cost of a service call. Dishwasher problems PROBLEM CHECK THE FOLLOWING Dishwasher does Is the door tightly closed and securely latched? not run or stops Has the cycle been set correctly? during a cycle...

[Page 28](#) This information will help us if you need service t ... respond properly to your request. Whirlpool has a nationwide network of companies. Whirlpool service technicians are trained to fulfill uthorized Whirlpool service the product warranty and provide after-warranty service, anywhere in the United States.

[Page 29](#) 1. if the problem is not if you need service t... to one of the items listed Contact your nearest Inglis Limited in "Troubieshooting"t Appliance Service branch or authorized servicing outlet to service your appliance. Contact the dealer from whom you (See list below.) or call the Inglis Limited Consumer Assistance Centre...

[Page 30: Index](#)

index This index is alphabetical. Look for the word or phrase you are interested in, then look for the page number. TOPIC PAGE TOPIC PAGE BOTTOM RACKSilverware basketTop rackCLEANING ExteriorOPTIONSInterior OVERFILL PROTECTOR

[Page 31](#) POWER CLEAN* washing system parts covered by your warranty level wash tower Upper spray arm Spray tower Lower spray arm POWER CLEAN module and motor SOUND=LOCK* tuned absorber...

[Page 34: Warranty](#)

DURAPERM* tub and/or inner door should they fail to FROM DATE OF contain water due to defective materials or workmanship. PURCHASE Service must be provided by an authorized Whirlpool service company. WHIRLPOOL WILL NOT PAY FOR A. Service calls to: 1.

[Page 35](#) electromenag@rs d'utilisation "entret" Note a rutilisateur2 S_curit_ du lave=vaisselle3 et 4 Pieces et caract_ristiques ..5 Mise en marche du lave=vaisselle7 Chargement lave=vaisselle9 Utilisation des distributeurs ... 14 R_glage des commandes ..16 S6lection des programmes de lavage ..

[Page 36: Lave=Vaisselle](#)

_WHIRLPOOL*o Votre vie de plus en plus occup6e et de plus en plus compliqu6e demande les lave-vaisselle WHIRLPOOL d'un usage facile qui font gagner du temps, et vous aident a mieux vous organiser. Pour vous assurer des ann6es de fonctionnement sans probl8mes, nous avons r6dig6 ce guide d'utilisation et d'entretien.

[Page 37](#) La s curit du lave=vaissel Vetl'e s6c_ll_iiiiit6 e t celllllllllledes a_tl'es tl'_s iiiiiim_ emlam%te= Nous donnons de nombreux messages de s6curit6 importants dans ce manuel et sur votre appareil m6nager. Assurez-vous de toujours life tousles messages de s6curit6 et de vous y conformer. Voici le symbole d'alerte de s6curit6.

[Page 38](#) IMPOBTANTI\$ IIIITIUOTIOIS IF SECUIITE (ire) ÷Sous certaines conditions, de Dydrog@e Cette mesure permettra a l'hydrog@e peut se former dans un r6seau d'eau de s'@aporer. Ce gaz 6tant inflammable, chaude inutilis6 depuis deux semaines ne pas fumer ni utiliser de flamme nue ou plus.

[Page 39: Pieces Et Caract_Ristiques](#)

Pi ces et caract ristiques On pr6sente ci-dessous une illustration du lave-vaisselle avec l'emplacement des pieces et des caract6ristiques. Pour vous aider a rep6rer rapidement des renseignements sur des pieces ou caract6ristiques, les pages de r6f6rence sont incluses.

Troisième niveau de lavage (p.

Page 40 Tab_ea_de ee_aHde Boutons Boutons selecteur de selecteurs Bouton de selection des programmes d'options programmes Modeles de la serie 900 Boutons Boutons selecteur de selecteurs Indicateurs de Bouton de selection des fonction programmes d'options programmes Modeles de la serie 915...

Page 41 marche ave-va Cette section vous indique comment mettre en marche ou arreter votre lave-vaisselle. Se référer à ces renseignements pour référence rapide. Risque de pencher Risque de choc électrique Ne pas utiliser le lave-vaisselle jusqu'à ce qu'il est complètement Relier le lave-vaisselle à la terre installé d'une méthode électrique.

Page 42: Lave=Vaisselle

Mise en marche 1o Charger le lave-vaisselle. Voir la section 6o Ouvrir le robinet d'eau chaude de l'évier "Chargement du lave-vaisselle." le plus proche du lave vaisselle jusqu'à ce que l'eau qui s'écoule soit chaude. Fermer le robinet. 7o Choisir une option de séchage. (Veuillez noter que la rotation des bras d'arrosage pour vérifier que rien n'entrave leur rotation.

Page 43 Chargement ave-va On décrit dans cette section la méthode convenable de chargement du lave-vaisselle pour l'obtention des meilleurs résultats de lavage et de rinçage. Pour optimiser l'eau et l'énergie, ne pas rincer la vaisselle avant de la placer dans le lave-vaisselle.

Page 44 Charger le panier & couverts lorsqu'ils sont dans la porte ou les retirer pour les charger sur un comptoir ou sur une table. Mettre les articles dans chaque section du panier, certains vers le haut et d'autres vers le bas afin que les articles ne s'imbriquent pas. L'eau ne peut pas atteindre les articles imbriqués. IMPORTANT : Toujours charger les articles à plat (couteaux, brochettes, fourchettes, etc.) avec la lame vers le bas.

Page 45 Charger dans le panier inférieur les articles sur lesquels des résidus alimentaires ont séché; la surface doit être orientée vers les jets d'eau. Charge mixte Charge mélangée ÷ Charger assiettes, bols & soupe, etc. entre les tiges du panier en les tournant vers l'arrosage. ÷ S'assurer que les manches de casserole et autres articles n'arrêtent pas la rotation des bras d'arrosage.

Page 46 Charger le panier supérieur avec les tasses, les verres et les plus petits articles. Ne pas couvrir le lavage du troisième niveau lors du chargement du panier supérieur. Charge de tasses et de verres Charge de tasses et de verres ÷ Incliner les articles pour faciliter le nettoyage et le rinçage.

Page 47 Soulever Partiellement le panier supérieur (sur terrains modérés) Abaisser Lever ou abaisser le panier supérieur pour convenir aux articles plus hauts dans le panier supérieur ou inférieur. Il n'est pas nécessaire que le panier supérieur soit niveau. ÷ Tourner le bouton dans le sens horaire pour lever un cycle du panier.

Page 48: Utilisation Des Distributeurs

Utilisation des distributeurs Lire les informations ci-dessous pour obtenir les meilleurs résultats de lavage. Il est important d'utiliser correctement les détergents et produits de rinçage. Quantité de détergent & utiliser ÷ Utiliser du détergent pour lave-vaisselle automatique. Les autres détergents ne...

Page 49 Garder le distributeur d'agent de rinçage Une petite quantité d'agent de rinçage est rempli d'un agent de rinçage liquide. automatiquement introduite dans l'eau de rinçage au cours du rinçage final de chaque cycle de lavage. Pour obtenir les meilleurs résultats de lavage en facilitant le séchage...

Page 50 commandes Le bon réglage des commandes du lave-vaisselle aide à obtenir les meilleurs résultats possibles de lavage. Cette section indique comment choisir les programmes de lavage et les options. des paramètres Appuyer sur une touche de programme. (Le lave-vaisselle commence & se remplit lorsque l'on appuie sur une touche de programme).

Page 51 Un "J" montre ce que chaque programme comprend DUREE DUPRO- LAVAGE PROGRAMME BINGE PROGRAMME SECHAGE LAVAGE PRINCIPAL RINGAGE FINAL BINGE (Minutes) NORMAL Double lavage pour des charges quotidiennes, normalement sales.

Page 52 Un "J" montre ce que chaque programme comprend DUBEE DUPRO- GRAMME LAVAGE BIN(_AGE PROGRAMME LAVAGE BIN(_AGE PRINCIPAL BIN(_AGE FINAL (Minutes) RIN(_AGE-LAVAGE DIFFI_Rc: Pour ringage quelques articles a laver1ou plusieurs j oursplustard. ÷Nepasutiliser d e d6tergent. Surla s6riede 161-1- modeles 900: ÷L'eauchauffera a 60°C (140°F) l orsduringage final.

Solutions des CON'ITIUnS Voici une liste pratique pour traiter des problèmes mineurs de rendement, t tudier cette liste avant de contacter le service de d6pannage. S'il n'est pas possible de r6soudre le probleme, voir les renseignements concernant le service. Tab ® au

[Page 63](#) PROBLEME CAUSE SOLUTION Taches et films Eau dure ou concen- Utiliser un agent de ringage pour aider & sur la vaisselle tration elevee de empecher les taches et les films sur la minéraux dans l'eau vaisselle. Pour enlever le film cause par l'eau dure, voir '1_ limination des taches et films'...

[Page 64](#) PROBLEME CAUSE SOLUTION Vaisselle touchée Marques noires Les articles en aluminium doivent être chargés ou grisés sur la par des articles en de telle mani@e qu'ils ne se frottent pas contre vaisselle aluminium d'autres articles au cours du lavage. Ne pas mettre au lave-vaisselle des articles en alu- minium jetables parce qu'ils peuvent se briser et marquer d'autres articles.

[Page 65](#) CAUSE SOLUTION PROBLF:ME l_ caillage de Chargement Charger les plats et verres de telle mani_re la vaisselle incorrect qu'ils soient stables et qu'ils ne se heurtent pas mutuellement sous l'effet du lavage. Manipuler lentement les paniers sur la glissi_re pour minimiser les chocs. REMARQUE : Certains types de porcelaine et de verrerie sont trop délicats pour le lavage au...

[Page 66: Diagnostic](#)

Diagnostic Avant de faire un appel pour assistance, veuillez vérifier le tableau suivant pour les problèmes que vous pouvez résoudre. Cette action pourrait vous faire économiser le coût d'une visite par un technicien. PROBL#ME VÉRIFIER CE QUI SUIT Le lave-vaisselle La porte est-elle bien fermée et verrouillée? ne fonctionne Le programme approprié a-t-il été sélectionné?

[Page 67](#) PROBL#ME VÉRIFIER CE QUI SUIT Son de broyage, Existe-t-il la présence d'un objet dur dans le module POWER R&page ou CLEAN*? Le son devrait disparaître lorsque l'objet est amené à la bourdonnement surface. Apparition d'un Une trop grande quantité de détergent a-t-elle été utilisée? Voir r_sidu blanc "utilisation des distributeur"...

[Page 68: Demande D'assistance](#)

Demande d'assistance service Avant de faire un appel pour assistance ou service, veuillez vérifier la section "Diagnostic". Cette action peut vous faire économiser le coût d'un appel de service. Si vous avez encore besoin d'assistance, suivre les instructions ci-dessous. Si vous avez besoin d'assistance ou de service 2.

[Page 69: Index](#)

index Cet index est alphabétique. Rechercher le mot ou la phrase désirée pour identifier la page où on l'y trouve. SUJET PAGE SUJET PAGE GARANTIEAGENT DE RINAGE UtilisationN ETTOYAGE ARTICLES SPÉCIAUX ExtérieurIntérieurConseils pour le lavage

[Page 70: Garantie](#)

Pièces du système de lavage POWER CLEAN* couvertes par votre garantie Tour de lavage du troisième niveau Bras d'arrosage supérieur du jet Bras d'arrosage inférieur Module et moteur POWER CLEAN Arnortisseur réglé SOUND=LOCK*...

[Page 72](#) D'ACHAT service doit être exécuté par une compagnie de service autorisée Whirlpool, WHIRLPOOL NE PAIERA PAS POUR A. Les appels de visite pour : 1. Rectifier l'installation du lave-vaisselle. 2. Donner des instructions concernant l'utilisation du lave-vaisselle.

This manual is also suitable for:

Du900pcdb5Du900pcdz5900 series